

# 200 LED Solar Curtain Lights

H318 v001: 20/11/20

Please read and retain these instructions for future reference

**GAINSBOROUGH**  
Garden & Wildlife

**ALWAYS POSITION IN DIRECT SUNLIGHT**



## Dimensions

2m x2m

- AVAILABLE WITH WHITE LEDS (WH) OR MULTI COLOURED (MC) LEDS (not replaceable)
- HANG LIKE A CURTAIN SO YOU CAN DRAPE DOWN OVER FENCES, GAZEBOS, AWNINGS, HEDGES, ETC FOR A MAGICAL FLURRY OF LIGHTS. 8 DIFFERENT LIGHT SETTINGS TO CHOOSE FROM
- EACH CURTAIN LIGHT HAS 10 STRANDS EACH WITH 20 LEDS ON
- WITH 10CM BETWEEN EACH LED AND 20CM BETWEEN EACH STRAND
- SIMPLY UNPACK, HANG AND ENJOY!
- QUICK AND EASY
- 2M LEAD WIRE BETWEEN THE CURTAIN AND THE SOLAR PANEL
- LEAVE UP ALL YEAR ROUND FOR SUMMER OR WINTER MAGIC

**Battery 1.2V AA 800mAh NI-MH**



H318 MC  
Multi  
Coloured

## ASSEMBLY INSTRUCTIONS / INSTRUCTIONS FOR USE:

Unpack the components carefully. Please check all parts have been removed from the packaging.

### Find an ideal Place for the Solar Light.

Place the solar light in an area where it will receive direct sunlight for at least 8 hours per day. The number of hours the light will illuminate is directly proportional to the hours of sunlight it receives. If the light is placed in a shaded area, it will not be able to fully charge and its illumination time will be limited. Do not place the light near other outdoor lighting like porch or streetlights. These may fool the sensor and keep the light from coming on, or cause it to turn off automatically.

When draping the lights please ensure no lights are trailing on the ground to avoid tripping hazard.

**BEFORE FIRST USE:** Remove the protective film from the solar panel.

### CHARGING AND OPERATION:

1. Set switch (located on the back of solar case) to "ON" position. Charge the solar product by placing it under direct sunlight for at least 8 hours.
2. The light will work automatically. It will automatically charge under direct sunlight during the day and illuminate at night.
3. This solar lights has a multi function setting. Turn switch to "ON" position and press "MODE" button to get the following light sequences : 1. Combination 2. In wave 3. Sequential 4. Slow Glow 5. Chaser

\*Calls cost 7 pence per minute plus your telephone company's network access charge

The Enterprise Department  
Head Office: 11 Bridge Street  
Bishop's Stortford, CM23 2JU  
Tel: 0844 482 4400\*  
Fax: 01279 756 595  
www.coopersofstortford.co.uk

Flashing 6. Slow Fade 7. Twinkle Flashing 8. Steady On

NOTE: In order to verify that the switch is correctly in the "ON" position, cover the solar panel with your hand and the light should turn on automatically.

## IMPORTANT:

1. Install the solar product in an area where it can get direct sunlight.
2. Leave the switch to "ON" position.
3. Select an outdoor location away from other light sources at night, such as street lights. It may cause the product not to turn on automatically at night.
4. Duration of light depends on solar product's level of sunlight exposure, geographical locations, weather conditions and the hours of daylight.

## MAINTENANCE AND TROUBLESHOOTING:

1. Make sure the switch is set to "ON" position.
2. Keep the solar panel clean.
3. If solar product does not light up after it has been used for around 8 – 12 months, replace the rechargeable batteries as they may be weak or worn out. (Battery 1x AA 1.2v 800Mah, Ni-MH, Rechargeable– Same equivalent type as recommended must be used).
4. Battery replacement:

**Step1:** Unscrew the battery compartment cover by using a Phillips head screwdriver (not included) .

**Step2:** Remove the exhausted battery and install 1x new AA rechargeable battery according to the +/- polarity as beside image. Open the compartment carefully and ensure that welding wires inside the battery terminals are not damaged.

**Step3:** Replace battery compartment cover, screw it back into position and make sure is properly sealed.

## Care and Maintenance Recommendations

1. Clean solar panel with a soft sponge every couple of weeks.
2. Make sure all connectors are still tight and no water getting in.
3. During the winter if you can bring it inside and give a good clean ready for next year.

## BATTERIES

- Keep batteries away from children and pets.
- Do not mix used and new batteries.
- Remove the batteries if left for long periods.
- Never dispose of batteries in a fire.
- Battery disposal, spent or expired batteries must be properly disposed of and recycled in compliance with local regulations. For detailed information, contact your local authority.
- Follow the battery manufacturer's safety, usage, and disposal instructions.

## DISPOSAL

- Coopers of Stortford use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons, packaging in accordance with your local recycling regulations.
- Plastics, polybags – Contains the following recyclable plastic.



Code & Symbol	A recycling symbol with the number 5 inside a triangle and the letters 'PP' below it.
Type of Plastic	Polypropylene
Commonly used for	Microwaveable food containers, yoghurt pots, butter tubs, disposable plates and cups
Notes	Commonly recycled and collected from household recycling bins (packaging tape itself not recyclable but does not interfere with cardboard)

- At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.

