

Ladies Shaver

H359 v01: 19/10/20

Please read and retain these instructions for future reference

vivadia



Dimensions

15 x3.5 x3.5cm

- LONG HANDLE FOR EASY GRIP/ SILICONE SOFT TOUCH HANDLE
- GIVES A CLOSE SHAVE - USE ON UNDERARMS, LEGS AND BIKINI LINE
- NO NEED FOR SHAVING CREAMS
- CORDLESS, RE-CHARGEABLE VIA USB WIRE L: 80CM
- SUPPLIED WITH CHARGINGCABLE AND 3 SENSITIVE HEAD GUARDS FOR THOSE DELICATE AREAS
- LED LIGHT TO GIVE YOU EXTRA VISIBILITY
- PIVOTING HEAD CONTOURS AROUND CURVES TO PREVENT NICKS AND CUTS. BI-DIRECTIONAL - SHAVES UP OR DOWN.

Parts



Warning

- **DRY USE ONLY.**
- **Do not rinse. Only use brush provided to clean the blade.**
- Keep out of reach of children.
- Do not place or drop in water or other liquid while plugged in.
- Do not rinse or submerge in water or other liquid.
- Unplug and remove power cord before cleaning/using.

*Calls cost 7 pence per minute plus your telephone company's network access charge

The Enterprise Department
Head Office: 11 Bridge Street
Bishop's Stortford, CM23 2JU
Tel: 0844 482 4400*
Fax: 01279 756 595
www.coopersofstortford.co.uk

- Do not use shaver while it is plugged in.
- Do not use on sensitive or irritated skin.
- Always check the unit before use. Do not use if damaged.
- Trimmer is not intended for use on the scalp or genital area.

Caution

- **Only use for its intended purpose as described in this manual.**
- **Do not use on irritated skin or open wounds.**
- **Do not rinse head or unit under water or submerge in water.**

Charging/Recharging

- Ensure the unit is fully charged before use.
- Plug the small end of the charger cable into the shaver and the large plug into a USB Port (Illustration 1). Initial charging requires approximately 4 hours.
- The power indicator LED will turn RED when charging (illustration 2) The light will turn off when fully charged.
- NOTE: Do NOT operate the unit whilst it is plugged in.
- The cordless operating time is up to 45 minutes when fully charged.



Care and Maintenance

- The blade is fragile – please handle with care.
- If hairs have accumulated on the guide or blade, simply blow them off, or gently sweep with the included brush.
- **Do not rinse the blade. Rinsing can cause damage to the blade.**


BATTERIES

- Keep batteries away from children and pets.
- Do not mix used and new batteries.
- Remove the batteries if left for long periods.
- Never dispose of batteries in a fire.
- Battery disposal, spent or expired batteries must be properly disposed of and recycled in compliance with local regulations. For detailed information, contact your local authority.
- Follow the battery manufacturer's safety, usage, and disposal instructions.

DISPOSAL

- Coopers of Stortford use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons, packaging in accordance with your local recycling regulations.
- Plastics, polybags – Contains the following recyclable plastic.



Code & Symbol	 OTHER
Type of Plastic	ABS
Commonly used for	CD's, crisp packets, various flexible packaging, baby bottles, sunglass lenses
Notes	Not often or widely recycled

- At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.