

Microwave Warmer



Thank you for purchasing the microwave warmer. We hope you will enjoy using it on cold winter nights and comfy autumn evenings at home. If treated properly, it should provide years of comforting warmth.

Before first use, make sure that you know your microwave wattage as this will affect the time settings. Over-exposure could lead to damage to the unit and your microwave – so please check!

Heating Instructions

1. Put the warming disc inside the bag provided, put it inside your microwave on a microwaveable plate and close the door.

Note: Never try to heat the disc outside of the bag

2. Select the correct time on your microwave, from the guide below – make sure it is adjusted for the wattage of your microwave.
3. Carefully check the heat of the warmer is safe by placing your hand on the bag and testing the heat. If it is cool enough to touch, remove the warmer from the microwave. If it feels uncomfortable to the touch, leave the door open and let the warmer cool down before attempting again.
4. Enjoy the warmth of the comfortable cozy warmer bag, which lasts approx. one hour

Note: Always make sure the product has completely cooled before you remove it from the bag to avoid burn injury.

Microwave Settings

Reminder: Please follow the below time settings. Do not overexpose the unit as this can cause damage to the microwave warmer and your microwave.

<u>Wattage</u>	<u>Heating Time</u>
1,100 Watts	2 minutes
1,000 Watts	2 minutes 10 seconds
800 Watts	2 minutes 20 seconds
500 Watts	2 minutes 30 seconds

Warnings

- This product is only suitable for use in the microwave, it is **not** suitable for use in the oven or on the hob.
- Before reusing it, make sure that the product has completely cooled down
- Do not put it back in the microwave if it is still warm/hot
- Only use the microwave warmer according to the above instructions and time settings. Do not put it for longer as this might damage the integrity of the product.
- Never expose the microwave warmer to water
- If the product falls, check it carefully to ensure the integrity of the item is still intact. If in doubt, please do not use it and contact the manufacturer.
- Never put the warmer in the microwave without the bag provided.
- This product is not intended for use by children

