

## S/12 WARM WHITE SOLAR LIGHT STAKES

H520 WW v002: 29/04/22

Please read and retain these instructions for future reference

**GAINSBOROUGH**  
Garden & Wildlife

ALWAYS POSITION IN DIRECT SUNLIGHT



### SPECIFICATIONS:

Height above ground	34.5 cm
Charging time (in persistent sunlight)	7hours
Burn time (fully charged)	7hours
Rechargeable battery	12x1.2V 40mAh button Ni-MH BATTERY(not replaceable)


### ASSEMBLY INSTRUCTIONS / INSTRUCTIONS FOR USE:

Unpack the components carefully. Please check all parts have been removed from the packaging.

### USER INSTRUCTIONS:

#### Assembly

1. Remove the ground spike from inside the tube.
2. Reinsert the ground spike into the tube with the spike pointing outwards.
3. Twist the solar cell bulb assembly anti-clockwise to loosen it from the lamp.
4. Set the power switch to the ON position.
5. Refit the solar cell bulb assembly back onto the lamp.
6. When placing the solar lights in the garden, make sure that they are exposed to maximum sunlight for charging purposes and are not triggered by other light sources such as street lights or other false triggering sources.

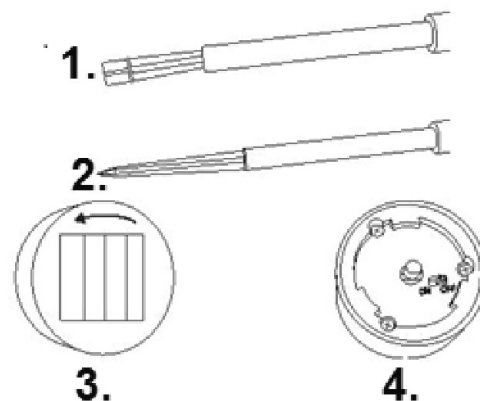

### WARNINGS / CAUTIONS:

- Handle the product with care, making sure not to damage the solar panel's surface and ensuring that it is not covered with dust or affected by other contaminants.
- The product must not be changed or modified in any way.
- Do not let children play with the product.
- The battery cannot be replaced. The entire product should be disposed of when the battery is no longer able to sustain a charge.

\*Calls cost 7 pence per minute plus your telephone company's network access charge

The Enterprise Department  
Head Office: 11 Bridge Street  
Bishop's Stortford, CM23 2JU  
Tel: 0844 482 4400\*  
Fax: 01279 756 595  
www.coopersofstortford.co.uk

Care and Maintenance Recommendations

- 1. Clean solar panel with a soft sponge every couple of weeks.
- 2. Make sure all connectors are still tight and no water getting in.

BATTERIES

- Keep batteries away from children and pets.
- Do not mix used and new batteries.
- Remove the batteries if left for long periods.
- Never dispose of batteries in a fire.
- Battery disposal, spent or expired batteries must be properly disposed of and recycled in compliance with local regulations. For detailed information, contact your local authority.
- Follow the battery manufacturer’s safety, usage, and disposal instructions.

DISPOSAL

- Coopers of Stortford use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons, packaging in accordance with your local recycling regulations.



- Plastics, polybags – Contains the following recyclable plastic

Code & Symbol	
Type of Plastic	Polypropylene
Commonly used for	Microwaveable food containers, yoghurt pots, butter tubs, disposable plates and cups
Notes	Commonly recycled and collected from household recycling bins (packaging tape itself not recyclable but does not interfere with cardboard)

- At the end of the product’s lifespan please check with your local council authorised household waste recycling centre for disposal.

