

Prior to use:

IMPORTANT: Please ensure you read all instructions for use carefully so as to familiarise yourself with the pitching method. Incorrect assembly may result in damage to the poles and fabric. Assemble the tent once before use to ensure that all parts are present and to become familiar with the assembly procedure.

We recommend weathering your tent prior to its first use. Pitch the tent fully and hose down the outer layer. Check for any leakage paying particular attention around the seam areas. **Please note and understand that no tent can be guaranteed 100% waterproof.** The material of your tent is 100% waterproof, however certain weather conditions such as high winds and driving rain can sometimes cause slight leakage, especially through the seams and zipped areas.

Warning - fabrics can burn when left in contact with a flame source - keep away from naked flame.

Do not smoke, cook or use naked flames inside or near the tent.

Do not use stoves, heaters or lanterns that use combustible fuel (gas, petrol, methylated spirits) inside tent.

This tent is designed for storage use. It must NOT be used as a tent for sleeping.

 

Always read and understand the fire precautions for your tent and the fire regulations for the camp site you are using.




Store the tent in a dry place.

Suggest two adults assembly this tent.

Retain these instructions for future reference.

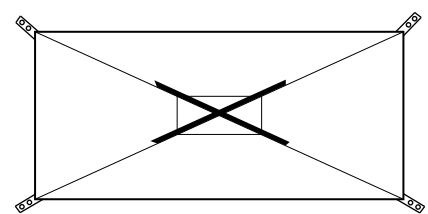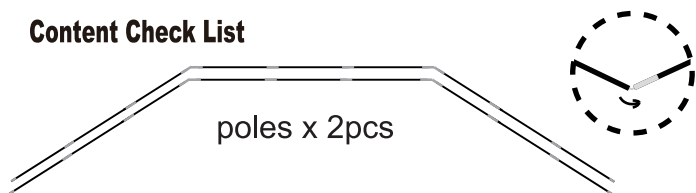Content Check List



 steel pegs x 22pcs
 screws x 6pcs
 plug x 6pcs

Pitching of your tent

Choose a site that is level, free from stones, debris and other sharp objects. Do not pitch underneath or near to trees.

Step By Step Instructions

Step 1. Spread out the tent and flat on an area that is as even and clean as possible.

Step 2. Assemble the 2 poles by snapping into place for each section. Then take all the poles and guide them through the sleeve on the tent accordingly.

Make sure the fabric is not caught on the poles. (See Fig 1)

Step 3. Two adults involved by lifting each end of the pole and bending the pole. Insert the first pole into the eyelets at the base of the tent and bend the pole so that it can be inserted into the eyelets on other side. Repeat this step for all of the tent poles. (See Fig 2)

Step 4. Two adults pull the sides of the tent taut. Peg the tent down by driving the pegs through the eyelets/elastic loops around the base of the tent. Always hammer pegs into ground at a 45° angle and use a camping mallet to secure the pegs. Pull the tent out evenly and tight. Be careful of your hands and feet during hitting. We recommend you to use the guy ropes to secure the tent against strong wind. Unravel all the guy ropes and adjust the length of the guy ropes with the slider, and then use pegs to fix all the guy ropes onto the ground. (See Fig 3)

Step 5. If you need to fix this tent to hard surface ground, please use four of the screws and plastic plugs provided and fix them accordingly at right position. If this tent will be located against wall, please use the remaining two screws and plastic plugs to secure the back panel to the wall.

Now your tent is ok to use.

Fig 1

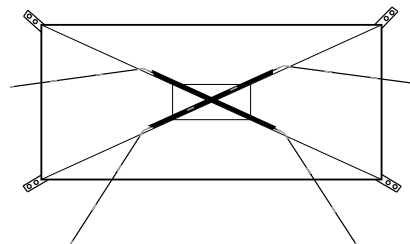 


Fig 2

 
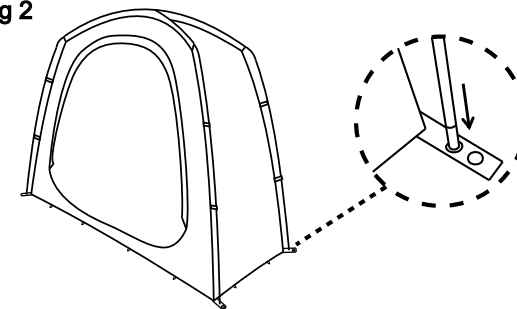 


Fig 3

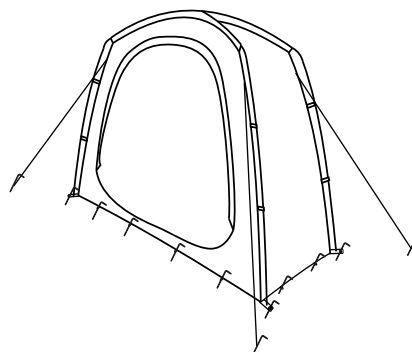

How to take down your tent

a. Follow the above steps in the reverse order then take down the tent, make sure to leave the tent door unzipped.

b. Clean the tent if necessary with a sponge and water for the dirty marks. The tent must be fully dried before packing, otherwise, there might be mildew and rust.

c. Fold the tent, measure it with the carrybag to make sure it is suitable to the carrybag. Put the poles, pegs, screws and plug into their relevant bags. Roll the tent around the pole bag and peg/screws/plug bag. Then you can put it into the carrybag.