

150cm Light Up Acorn Garland

H586 v001: 15/02/21

Please read and retain these instructions for future reference

GAINSBOROUGH
Garden & Wildlife

Always position in direct sunlight



Dimensions

Length: 150cm

Battery: 1x Ni-MH AA 600mAh 1.2V

9 x Warm White LED Lights (not replaceable)

ASSEMBLY INSTRUCTIONS / INSTRUCTIONS FOR USE:

Unpack the components carefully. Please check all parts have been removed from the packaging.

Find an ideal Place for the Solar Light.

Place the solar light in an area where it will receive direct sunlight for at least 8 hours per day. The number of hours the light will illuminate is directly proportional to the hours of sunlight it receives. If the light is placed in a shaded area, it will not be able to fully charge and its illumination time will be limited. Do not place the light near other outdoor lighting like porch or streetlights. These may fool the sensor and keep the light from coming on, or cause it to turn off automatically



ON/OFF

CHARGING AND OPERATION:

1. Firstly, press down button which is on the backside of the solar panel to "ON" position for charging and charge by placing it in direct sunlight for at least 8 hours. Secondly, press down the button again to "OFF" position, the light will be off and stop charging.
2. The light will work automatically after first pressing the button. It will charge in direct sunlight during the day time and illuminate at night.

NOTE: In order to check the solar function, firstly press down the button; then place the solar panel in the sunlight; finally, cover the solar panel with your hand and light should turn "ON" automatically.

IMPORTANT:

1. Install the solar light in an area where it can get direct sunlight.
2. Leave the button in the "ON" position.

*Calls cost 7 pence per minute plus your telephone company's network access charge

The Enterprise Department
Head Office: 11 Bridge Street
Bishop's Stortford, CM23 2JU
Tel: 0844 482 4400*
Fax: 01279 756 595
www.coopersofstortford.co.uk

3. Select an outdoor location away from other light sources at night, such as street lights which may cause the product not to turn on automatically at night.
4. Duration of light depends on solar product's level of sunshine exposure, geographical locations, weather conditions and the hours of daylight.

MAINTENANCE AND TROUBLESHOOTING:

1. Make sure the switch is set to "ON" position.
2. Keep the solar panel clean.
3. If solar product does not light up after it has been used for around 8 – 12 months, replace the rechargeable batteries as they may be weak or worn out. (Battery 1pc "AA" 1.2v 600Mah, Ni-MH, Rechargeable– Same equivalent type as recommended must be used).

Care and Maintenance Recommendations

1. Clean solar panel with a soft sponge every couple of weeks.
2. Make sure all connectors are still tight and no water getting in.
3. During the winter if you can bring it inside and give a good clean ready for next year.

BATTERY REPLACEMENT:

Step1: The battery compartment is located underneath the solar panel. Remove battery compartment cover by using a small Phillips head screwdriver (not included) .

Step2: Remove the exhausted battery and install 1pc new AA rechargeable battery according to the polarity symbol indicated on the battery compartment. Open the compartment carefully and ensure that welding wires inside the battery terminals are not damaged.

Step3: Replace battery compartment cover, screw it back into position and make sure it is properly sealed.

BATTERIES

- Keep batteries away from children and pets.
- Do not mix used and new batteries.
- Remove the batteries if left for long periods.
- Never dispose of batteries in a fire.
- Battery disposal, spent or expired batteries must be properly disposed of and recycled in compliance with local regulations. For detailed information, contact your local authority.
- Follow the battery manufacturer's safety, usage, and disposal instructions.

DISPOSAL

- Coopers of Stortford use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons, packaging in accordance with your local recycling regulations.
- Plastics, polybags – this is made from the following recyclable plastic.






150cm Light Up Acorn Garland H586

Instructions for Use

Please read and retain these instructions for future reference

v001: 15/02/21

Code & Symbol	 PP	 PS	 OTHER
Type of Plastic	Polypropylene	Polystyrene	ABS
Commonly used for	Microwaveable food containers, yoghurt pots, butter tubs, disposable plates and cups	Insulation boxes, water cups, protective packaging inserts, take away containers	CD's, crisp packets, various flexible packaging, baby bottles, sunglass lenses
Notes	Commonly recycled and collected from household recycling bins (packaging tape itself not recyclable but does not interfere with cardboard)	Not commonly recycled but waste management centres will recycle it.	Not often or widely recycled

- At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.



*Calls cost 7 pence per minute plus your telephone company's network access charge

The Enterprise Department
Head Office: 11 Bridge Street
Bishop's Stortford, CM23 2JU
Tel: 0844 482 4400*
Fax: 01279 756 595
www.coopersofstortford.co.uk