


1200W Compact Oscillating Ceramic Fan Heater

H616 v02: 11/10/21

Please read and retain these instructions for future reference

BERGSTRÖM

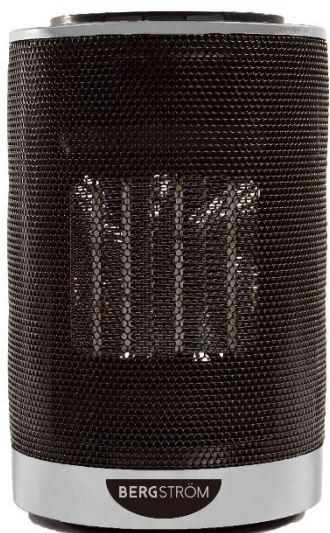

Dimensions

(H) 21.7cm x(W) 13.8cm x(D) 13.8cm

Composition

- COMPACT AND PORTABLE DESIGN
- POWERFUL 1200W HEATER CAN OPERATE AT 2 HEAT SETTINGS AS WELL AS A FAN
- LED DISPLAY
- EASY TO CONTROL
- HAS A BUILT IN TIMER WHICH CAN BE SET FOR UP TO 9 HOURS
- DIGITAL THERMOSTAT CAN BE SET BETWEEN 16-37 DEGREES C
- 70° OSCILLATION – CAN BE TURNED ON AND OFF AS PREFERRED
- SAFETY FEATURES – WILL AUTOMATICALLY SWITCH OFF IF TILTED OR OVERHEATS.
- EASY TO CONTROL WITH SIMPLE BUTTON CONTROLS ON THE TOP OF THE HEATER
- CERAMIC FAN HEATER HAS 2X POWERFUL SETTINGS AND WORKS FASTER AND STAYS WARM LONGER THAN TRADITIONAL HEATERS

Model Number	PTC-2018
Voltage	220-240 V ~ 50-60 Hz
Power	1200 W

This product is only suitable for well insulated spaces or occasional use.

ASSEMBLY INSTRUCTIONS / INSTRUCTIONS FOR USE:

Unpack the components carefully. Please check all parts have been removed from the packaging.

Important Safety Instructions

Warning: To avoid the risk of electrical shock, always make sure the products is unplugged from the electrical outlet before relocating, servicing, or cleaning it.

- This products is intended for indoor, non-commercial, household use for temporarily heating residential rooms. Do not use the product for any other purpose.
- Do not leave the product unattended while it is in use. Always unplug the product from the electrical outlet when it is not use.
- Keep the product out of the reach of children and pets. This product is not intended for use by children.
- Place the product on a flat, steady, stable, heat-resistant surface.

1200W Compact Oscillating Ceramic Fan Heater H616 Instructions for Use

Please read and retain these instructions for future reference

v002:11/10/21

- This product hasn't any arcing or sparking parts inside. Do not use it in areas where petrol, paint, or flammable liquids are used or stored, as there may be a risk of fire or explosion.
- Use the product in a well-ventilated area. This heater is hot when in use. To avoid burns, do not let bare skin touch a hot surface. If provided, use handle when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, paper, clothes, and curtains at least 3 feet (0.9 meters) from all sides of the heater.
- Use this heater only as described in this manual. Any other use is not recommended by the manufacturer. As it may cause fire, electric shock, or personal injury.
- Do not insert or allow other objects to enter any ventilation of or exhausted opening as this may cause an electric shock, fire or product damage.
- To prevent a possible fire, do not block air intake or exhaust in any manner. Do not use on soft surface, such as a bed, where air outlet may become blocked.
- Wipe the air openings clean if they become clogged.
- Do not use this product to dry or heater clothing, shoes, pipes or any other items.
- This heater is not intended for use in bathrooms, laundry areas, or other damp/wet locations.
- Never place the heater where it may fall into a bathtub or other water container.
- Plug the product into a standard AC240V electrical outlet.
- Do not allow the power cord to hang (e.g. over the edge of a table or counter) or place/run the power cord under rugs, carpeting, or in crowded areas where it may be tripped over or pulled.
- To disconnect the product, turn the switch off first, and then remove the plug from the electrical outlet. Pull directly on the plug; do not pull on the power cord.
- Do not put any stress on the power cord where it connects to the product, as the power cord could fray and break.
- Do not plug or unplug the product from the electrical outlet with a wet hand.
- Keep the power cord and product away from heated surfaces
- Do not operate the heater with a damaged cord or plug, once malfunctions occurred, or has been dropped or damaged in any manner. Please seek help from professional service facility for examination, electrical or mechanical adjustment, or repair.

*Calls cost 7 pence per minute plus your telephone company's network access charge

The Enterprise Department
Head Office: 11 Bridge Street
Bishop's Stortford, CM23 2JU
Tel: 0844 482 4400*
Fax: 01279 756 595
www.coopersofstortford.co.uk

1200W Compact Oscillating Ceramic Fan Heater H616 Instructions for Use

Please read and retain these instructions for future reference

v002:11/10/21

CAUTION: This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.


List of main parts

1. Operating panel
2. Indicator light:
3 blue – fan mode only
1 red – half power
3 red – full power
3. Air outlet grill
4. Main power switch



Images/colours may vary to actual product.

Operation panel

1. **8.8** : LED display
2. '+' : Temperature/Timer up
3. '-' : Temperature/Timer down
4.  : ON/OFF switch
5. 'Mode' :
5.1 Quick press to choose Regular Fan/Warm Fan/Hot Fan
5.1 Press 5s to set the timer
6. 'TURN' : Oscillation



Operation:

1. Plug the power cord into a standard 240V AC electrical outlet.
2. Press "ON/OFF" button, the product is working on 1200W, the three red lights are on.

*Calls cost 7 pence per minute plus your telephone company's network access charge

The Enterprise Department
Head Office: 11 Bridge Street
Bishop's Stortford, CM23 2JU
Tel: 0844 482 4400*
Fax: 01279 756 595
www.coopersofstortford.co.uk

1200W Compact Oscillating Ceramic Fan Heater H616 Instructions for Use

Please read and retain these instructions for future reference

v002:11/10/21

3. Press "MODE" button to change the Fan mode – Regular Fan(three blue lights), Warm Fan(one red light), Hot Fan(three red light)
4. Press "TURN" button, the heater will turn automatically with an angle about 70°
5. Press "+" or "-" button, setting the temperature.
7. Press "MODE" button for 5 seconds, display shows timer, press "+" or "-" button to set the timer you need to auto power off the heater(up to 9 hours), the display will flash 3 times to finish the setting.
8. This device has auto tip-over function, it will power off automatically if toppled over.
9. This device has thermostat inside, it will stop heating if the heater is over heated and will heat again after cooling down.

MAINTENANCE AND STORING

1. Always be sure that the appliance is switched OFF before cleaning or attempting to store the item. Do not immerse heater in water or allow water to drip into the interior of the heater, as this could create an electric shock hazard.
2. Allow the product to completely cool before handling or cleaning it. Ensure the heat select knob is in the shutdown position and the power cord is unplugged from the electrical outlet before cleaning the product.

STORING

- When storing heater, be sure to store it in dry area. Wrap the power cord into a neat package. The power cord should not be in contact with sharp edges, and it should not be compressed by heavy objects. Store the cord in a clean, dry location away from metal objects. Always check the plug before use.
- Do not place any heavy items on top of appliance during storage as this may result in possible damage of appliance.

PLUG WIRING (UK & IRELAND)

This appliance is fitted with a BS 1363 13-amp plug. If you have to replace the fuse, only those that are ASTA or BSI approved to BS1362 and with a rated current of 13-amperes should be used. If there is a fuse cover fitted, this cover must be re-fitted after changing the fuse. If the fuse cover is lost or damaged the plug must not be used. Spare fuse holders and fuses are available from electrical outlets. If the socket outlets in your home or office are not suitable for this product's plug, the plug must be removed and disposed of safely. Attempts to insert the plug into the wrong socket is likely to cause electric hazard. A replacement plug should be wired according to the following instructions:

The cable

A mains electricity cable contains two or three inner wires. Each has a core of copper and an outer layer of flexible plastic. This product is double insulated; the wires in the cord set are colour coded in the following way:

BLUE	NEUTRAL
BROWN	LIVE

*Calls cost 7 pence per minute plus your telephone company's network access charge

The Enterprise Department
Head Office: 11 Bridge Street
Bishop's Stortford, CM23 2JU
Tel: 0844 482 4400*
Fax: 01279 756 595
www.coopersofstortford.co.uk


1200W Compact Oscillating Ceramic Fan Heater H616 Instructions for Use

Please read and retain these instructions for future reference

v002:11/10/21

GREEN & YELLOW EARTH

The diagram below shows the key features of a correctly wired three-pin mains plug.

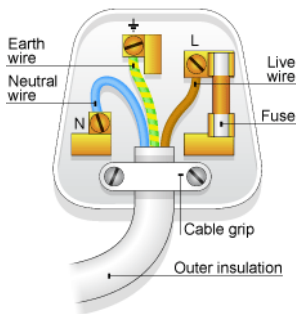



Note:

Double insulated appliances do not need the green & yellow Earth wire. They may only have the Brown and Blue wires.

DISPOSAL

- Coopers of Stortford use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons, packaging in accordance with your local recycling regulations.
- Plastics, polybags – this is made from the following recyclable plastic.



Code & Symbol	 PP	 OTHER
Type of Plastic	Polypropylene (LED light cover)	Top cover, Key switch, Transparent plastic sheet, Display panel, Display box, Front housing, Heating element support, Back housing, Eccentric axis, Base plate, Base
Commonly used for	Microwaveable food containers, yoghurt pots, butter tubs, disposable plates and cups	CD's, crisp packets, various flexible packaging, baby bottles, sunglass lenses
Notes	Commonly recycled and collected from household recycling bins (packaging tape itself not recyclable but does not interfere with cardboard)	Not often or widely recycled

- At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.

*Calls cost 7 pence per minute plus your telephone company's network access charge

The Enterprise Department
 Head Office: 11 Bridge Street
 Bishop's Stortford, CM23 2JU
 Tel: 0844 482 4400*
 Fax: 01279 756 595
www.coopersofstortford.co.uk

1200W Compact Oscillating Ceramic Fan Heater H616 Instructions for Use

Please read and retain these instructions for future reference

v002:11/10/21



*Calls cost 7 pence per minute plus your
telephone company's network access charge

The Enterprise Department
Head Office: 11 Bridge Street
Bishop's Stortford, CM23 2JU
Tel: 0844 482 4400*
Fax: 01279 756 595
www.coopersofstortford.co.uk

1200W Compact Oscillating Ceramic Fan Heater H616 Instructions for Use

Please read and retain these instructions for future reference

v002:11/10/21

Information requirements for electric local space heaters

Model identifier(s): H616(PTC-2018)					
Item	Symbol	Value	Unit	Item	Unit
Heat output			Type of heat input, for electric storage local space heaters only (select one)		
Nominal heat output	P _{nom}	1,2	kW	manual heat charge control, with integrated thermostat	NO
Minimum heat output (indicative)	P _{min}	0,6	kW	manual heat charge control with room and/or outdoor temperature feedback	NO
Maximum continuous heat output	P _{max,c}	1,2	kW	electronic heat charge control with room and/or outdoor temperature feedback	NO
Auxiliary electricity consumption			fan assisted heat output		
At nominal heat output	e _{lmax}	0,000	kW	Type of heat output/room temperature control (select one)	
At minimum heat output	e _{lmin}	0,000	kW	single stage heat output and no room temperature control	No
In standby mode	e _{lSB}	0,001	kW	Two or more manual stages, no room temperature control	No
				with mechanic thermostat room temperature control	No
				with electronic room temperature control	Yes
				electronic room temperature control plus day timer	No
				electronic room temperature control plus week timer	No
				Other control options (multiple selections possible)	
				room temperature control, with presence detection	No
				room temperature control, with open window detection	No
				with distance control option	No
				with adaptive start control	No
				with working time limitation	No
				with black bulb sensor	No
Contact details	Coopers of Stortford, 11 Bridge Street, Bishop's Stortford, Herts CM23 2JU, UK				



*Calls cost 7 pence per minute plus your telephone company's network access charge

The Enterprise Department
 Head Office: 11 Bridge Street
 Bishop's Stortford, CM23 2JU
 Tel: 0844 482 4400*
 Fax: 01279 756 595
www.coopersofstortford.co.uk