

HIFI Stacking System

H633 v02: 19/11/21

Please read and retain these instructions for future reference

BERGSTRÖM



INSTRUCTION MANUAL

- **DIMENSIONS:**
- **Unit size: 150 (W) x 193 (D) x 225 (H) mm**
- **Speaker size: 146 (W) x 160 (D) x 225 (H) mm, speaker cable length 120cm each**

COMPACT
disc
DIGITAL AUDIO

MP3
PLAYBACK

USB 

PLL
TUNING

 **Bluetooth**

*Calls cost 7 pence per minute plus your telephone company's network access charge

The Enterprise Department
Head Office: 11 Bridge Street
Bishop's Stortford, CM23 2JU
Tel: 0844 482 4400*
Fax: 01279 756 595
www.coopersofstortford.co.uk



HIFI Stacking System

H633

v02: 19/11/21

Please read and retain these instructions for future reference

BERGSTRÖM

 <p>The lightning flash and arrow head within the triangle is warning sign alerting you of dangerous voltage inside the product</p>	<p style="text-align: center;">CAUTION</p> <p style="text-align: center;">RISK OF ELECTRIC SHOCK DO NOT OPEN</p> <p>CAUTION : TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK). NO USER SERVICIABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>	 <p>The exclamation point within the triangle is a warning sign alerting you of important instructions accompanying the product</p>
--	--	--

IMPORTANT SAFETY INSTRUCTIONS:

1. Read the instructions. All uses guidelines must be read before start device.
2. Keep the instructions for future use.
3. Attention, use and security guidelines must be respected.
4. The device must not be used near water or be put in contact with moisture.
5. Make sure has no liquid is spilled on device and device openings.
6. Move device carefully, avoid shocks.
7. Do not block the breakdown of the device outputs.
8. Do not place the device near from a heat source (e.g. radiator). Do not expose it to the Sun.
9. Plug the device as indicate on this information form.
10. This device has a connection with overload protection (security device) decision-making. If the replacement of decision-making is required, please you send has an experienced or the device manufacturer technician.
11. For cleaning the device, please follow the recommendations of the notice.
12. The sector cord should be unplugged a long period of use.
13. Device shall be repaired by a qualified person when:
 - a. the power cord is damaged,
 - b. objects have fallen into the apparatus or a liquid has been spilled into device,
 - c. device was exposes to the rain,
 - d. device does not work correctly without notable exterior change,
 - e. the unit is broken.
14. The user shall not try to maintain device beyond that which is described in this information form. The guarantee would negate.
15. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.
16. The mains plug is used as disconnect device. The mains plug of apparatus should not be obstructed OR should be easily accessed during intended use. To be completely disconnect the power input, the mains plug of apparatus shall be disconnected from the mains.
17. Ensure a minimum distance of 8 cm around the apparatus for sufficient ventilation.

*Calls cost 7 pence per minute plus your telephone company's network access charge

The Enterprise Department
Head Office: 11 Bridge Street
Bishop's Stortford, CM23 2JU
Tel: 0844 482 4400*
Fax: 01279 756 595
www.coopersofstortford.co.uk

HIFI Stacking System

H633

v02: 19/11/21

 
Please read and retain these instructions for future reference

BERGSTRÖM

18. Ensure that the ventilation is not impeded by covering the ventilation openings with items such as newspapers, table-cloths, curtains, etc.
19. Do not place naked flame sources, such as lighted candles on the apparatus.
20. Take attention to the environmental aspects of battery disposal.
21. Use the apparatus only in moderate climates (not in tropical climates).
22. Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
23. The main plug shall remain readily operable.

Caution:


- **Under the environment with electrostatic discharge, this device may malfunction and require user to reset.**
- **ELECTRIC SHOCK HAZARD is possible if the unit is opened;
Never open and disassemble the unit to avoid ELECTRIC SHOCK.**

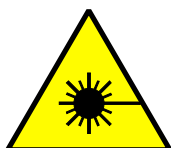

**CLASS I LASER
PRODUCT**

LOCATION OF CONTROLS

- 1) LCD DISPLAY
- 2) POWER LED INDICATOR
- 3) CD PLAY/PAUSE ►|| / ST / MONO BUTTON
- 4) CD SKIP / TUNING UP ►►► / DOWN ◄◄◄ BUTTON
- 5) CD STOP ■ / AM / FM BUTTON
- 6) POWER ON/STANDBY BUTTON
- 7) FUNCTION SELECTOR BUTTON
- 8) USB SOCKET
- 9) STEREO HEADPHONE JACK
- 10) CASSETTE DOOR
- 11) TAPE RECORDING KEY
- 12) TAPE PLAY KEY
- 13) TAPE REWIND KEY
- 14) CD DOOR OPEN BUTTON
- 15) STANDBY LED INDICATOR
- 16) REMOTE SENSOR
- 17) REPEAT / RANDOM BUTTON
- 18) PRE-UP BUTTON
- 19) VOLUME UP/DOWN KNOB
- 20) PRE-DOWN BUTTON
- 21) MEMORY / CLOCK ADJUST BUTTON
- 22) PRESET EQ BUTTON
- 23) TAPE PAUSE KEY

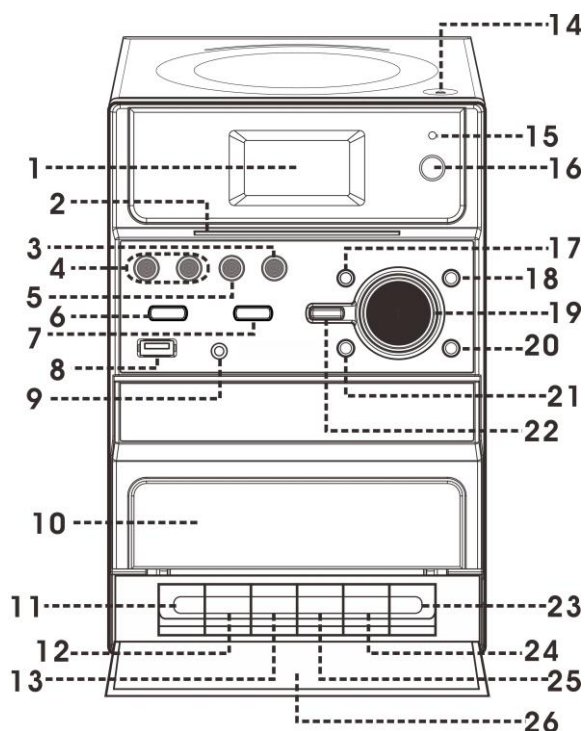 

*Calls cost 7 pence per minute plus your telephone company's network access charge

The Enterprise Department
Head Office: 11 Bridge Street
Bishop's Stortford, CM23 2JU
Tel: 0844 482 4400*
Fax: 01279 756 595
www.coopersofstortford.co.uk

HIFI Stacking System

H633 v02: 19/11/21

Please read and retain these instructions for future reference

BERGSTRÖM

- 24) TAPE STOP/EJECT KEY
- 25) TAPE FAST FORWARD KEY
- 26) CASSETTE KEY COVER
- 27) FM WIRE ANTENNA
- 28) SPEAKER WIRE CONNECTOR (L/R)
- 29) AC POWER CORD

 
CAUTION:

USAGE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

THIS UNIT SHOULD NOT BE ADJUSTED OR REPAIRED BY ANYONE EXCEPT QUALIFIED SERVICE PERSONNEL.

IMPORTANT:

SINCE MOVEMENT OF THE CD MECHANISM AND THE SENSITIVE CIRCUITRY MAY CAUSE INTERFERENCE TO THE RADIO TUNER NEARBY, SWITCH THIS UNIT OFF WHILE OPERATING OTHER RADIO DEVICES.

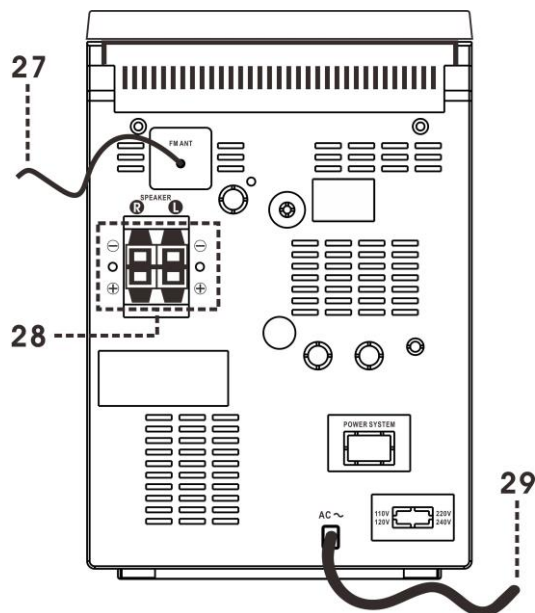

PRECAUTION FOR USE

INSTALLATION

- UNPACK ALL PARTS AND REMOVE PROTECTIVE MATERIAL.
- DO NOT CONNECT THE UNIT TO THE MAINS BEFORE CHECKING THE MAIN VOLTAGE AND BEFORE ALL OTHER CONNECTIONS HAVE BEEN MADE.
- DO NOT COVER ANY VENTS AND MAKE SURE THAT THERE IS A SPACE OF SEVERAL CENTIMETERS AROUND THE UNIT FOR VENTILATION.

CONNECTION

1. CONNECT THE POWER CORD TO AC OUTLET
2. WHEN YOU FIRST PLUG THE UNIT INTO THE MAINS, THE UNIT WILL GO INTO STANDBY MODE AND THE STANDBY LED INDICATOR (15) WILL LIGHT UP, THE DISPLAY WILL SHOW THE TIME.
3. CONNECT THE SPEAKER WIRE TO THE SPEAKER TERMINAL (28) LOCATED ON THE REAR SIDE OF UNIT.
4. TURN ON THE POWER (6), IF THE LCD DISPLAY IS ON WITH BACKLIGHTING, IT MEANS THE POWER SUPPLY IS NORMAL. NOW YOUR SYSTEM IS READY TO PLAY THE MUSIC.

SETTING THE CLOCK

1. SET THE UNIT IN STANDBY MODE
2. PRESS THE "MEM/ CLK-ADJ" BUTTON (21) AND DISPLAY WILL SHOW "24HR".
3. PRESS THE "SKIP UP▶▶▶" BUTTON (4) BUTTON TO SELECT 24 HOUR DISPLAY OR 12 HOUR DISPLAY. PRESS "MEM/ CLK-ADJ" BUTTON (21) TO CONFIRM.
4. THE DISPLAY WILL SHOW THE TIME AND THE HOUR DIGITS WILL FLASH. PRESS THE SKIP UP▶▶▶ OR

*Calls cost 7 pence per minute plus your telephone company's network access charge




The Enterprise Department
Head Office: 11 Bridge Street
Bishop's Stortford, CM23 2JU
Tel: 0844 482 4400*
Fax: 01279 756 595
www.coopersofstortford.co.uk

HIFI Stacking System

H633 v02: 19/11/21



Please read and retain these instructions for future reference

The logo for BERGSTRÖM is a black semi-circle with the word "BERGSTRÖM" in white, bold, sans-serif capital letters inside it.



- DOWN  BUTTONS (4) TO SELECT THE HOUR AND PRESS "MEM/CLK-ADJ" BUTTON (21) TO CONFIRM.
- THE MINUTE DIGITS WILL BE FLASHING. PRESS THE SKIP UP  OR DOWN  BUTTONS (4) TO SELECT THE MINUTE AND PRESS "MEM/CLK-ADJ" BUTTON (21) TO CONFIRM.
 - TIM WILL BE SHOWN ON THE LCD DISPLAY.
- **THE PRE-SET TIME WILL BE RE-SET COMPLETELY IF DIS-CONNECTING THE MAIN POWER SUPPLY. YOU ARE RECOMMENDED TO SWITCH THE SYSTEM INTO STANDBY MODE FOR CONVENIENCE USAGE.**

LISTENING TO RADIO

MANUAL TUNING


 
- PRESS FUNCTION BUTTON (7) TO SELECT "TUNER" MODE.
- PRESS "AM/FM" BUTTON (5) TO SELECT DESIRED RADIO BAND (AM OR FM).
- TUNE TO THE DESIRED STATION BY PRESSING THE TUNING " OR " BUTTON (4).
- ADJUST VOLUME CONTROL (19) TO THE DESIRED VOLUME LEVEL.

AUTO TUNING

- PRESS FUNCTION BUTTON (7) TO SELECT "TUNER" MODE.
- PRESS "AM/FM" BUTTON (5) TO SELECT DESIRED BAND (AM OR FM).
- PRESS AND HOLD THE TUNING " OR " BUTTON (4) FOR 3-4 SECONDS AND THEN RELEASE.
- THE UNIT WILL START SEEKING AUTOMATICALLY AND STOP UNTIL A RADIO STATION IS REACHED.
- REPEAT STEP 3 & 4 UNTIL THE DESIRED RADIO STATION IS BEING REACHED.
- ADJUST VOLUME CONTROL (19) TO THE DESIRED VOLUME LEVEL.

PRESET STATIONS

YOU CAN STORE- UP TO 20 RADIO STATIONS IN THE MEMORY (10-FM/10-AM).

- SET TO TUNER MODE.
 - TURN TO THE DESIRED RADIO STATION BY "MANUAL" OR "AUTO" TUNING METHOD.
 - PRESS "MEM/CLK-ADJ" BUTTON (21) TO ENABLE PROGRAM STAGE AND "MEMORY" INDICATOR IS SHOW UP ON LCD DISPLAY (1) WITH A FLASHING DIGIT REPRESENTING THE PRESET STORE NUMBER.
 - PRESS AND HOLD THE TUNING " OR " BUTTON (4) TO SELECT THE DESIRED STATION MEMORY FOR STORAGE.
 - PRESS "MEM/CLK-ADJ" BUTTON (21) AGAIN TO CONFIRM THE SETTING.
 - REPEAT STEP 2 TO 5 TO STORE OTHER STATIONS.
 - TO RETURN NORMAL TUNER MODE, LEAVE KEYS FREE.
 - NOW YOU CAN SELECT THE PRESETS STATIONS IN ORDER BY PRESSING THE "PRE-UP" BUTTON (18) OR "PRE-DOWN" BUTTON (20)
- **THE PRE-SET MEMORIES WILL BE CANCELLED COMPLETELY IF DIS-CONNECTING THE MAIN POWER SUPPLY. YOU ARE RECOMMENDED TO SWITCH THE SYSTEM INTO STANDBY MODE FOR CONVENIENCE USAGE.**
- YOU CAN OVERWRITE A PRESENT STATION BY STORING ANOTHER FREQUENCY IN ITS PLACE.

*Calls cost 7 pence per minute plus your telephone company's network access charge

The Enterprise Department
Head Office: 11 Bridge Street
Bishop's Stortford, CM23 2JU
Tel: 0844 482 4400*
Fax: 01279 756 595
www.coopersofstortford.co.uk

HIFI Stacking System

H633 v02: 19/11/21

Please read and retain these instructions for future reference

The logo for BERGSTRÖM is a black semi-circle with the word "BERGSTRÖM" written in white, bold, sans-serif capital letters across its center.

FM & FM-STEREO RECEPTION

- PRESS THE "ST / MONO " BUTTON (3) REPEATEDLY, THE FM PROGRAMS ARE RECEIVING IN MONO AND STEREO MODE REPEATEDLY. IN PARTICULAR WHEN STEREO SIGNALS ARE WEAK. IT IS PREFERABLE TO RECEIVE THE PROGRAM IN MONO.
- IF STEREO SIGNAL IS BEING RECEIVED, THE "ST" INDICATOR " (ST) " WILL APPEAR ON LCD (1) TO SHOW FM STEREO PROGRAM IS NOW RECEIVING.

HINTS FOR BEST RECEPTION:-

- AM : THE RECEIVER HAS A BUILT-IN AM BAR ANTENNA. IF AM RECEPTION IS WEAK, SLIGHT ROTATE OR RE-POSITIONING OF THE UNIT WILL USUALLY IMPROVE THE AM RECEPTION.
- FM : THE RECEIVER HAS A BUILT-IN FM WIRE ANTENNA (27) HANGING AT THE REAR CABINET. THIS WIRE SHOULD BE TOTALLY UNRAVELED AND EXTENDED FOR THE BEST RECEPTION.

PLAYING COMPACT DISC AND MP3 DISC

● GETTING START

1. PRESS FUNCTION BUTTON (7) TO SELECT " CD " MODE.
2. OPEN THE CD DOOR BY PRESSING THE BOTTOM RIGHT HAND CORNER OF THE CD DOOR (OPEN/CLOSE).
3. PLACE A CD WITH THE PRINTED SIDE FACING UP INSIDE THE TRAY & THEN CLOSE THE CD DOOR.
4. FOCUS SEARCH IS PERFORMING, THE UNIT WILL START PLAYBACK THE DISC AUTOMATICALLY. THE LCD DISPLAY (1) WILL SHOW THE TRACK NUMBER AND PLAYING TIME.

● PLAY / PAUSE MODE ►||

1. DURING PLAYBACK OF THE DISC, PRESS THE "PLAY/PAUSE►||" BUTTON (3) ONCE TO STOP THE PLAYBACK TEMPORARILY AND THE LCD DISPLAY WILL SHOW "PAUSE" AND FLASHING . PRESS AGAIN TO RESUME NORMAL PLAYBACK.

● STOP MODE ■

1. IF CD "STOP" BUTTON (5) IS PRESSED DURING PLAY OR PAUSE MODE, SYSTEM WILL GO TO STOP MODE.

● SKIP MODE (SKIP UP ►► / SKIP DOWN ◄◄)

1. DURING PLAY MODE, IF "SKIP UP►►" BUTTON (4) IS PRESSED. IT WILL GO TO NEXT TRACK AND DISPLAY THE TRACK NO AND CONTINUOUS THE PLAYBACK MODE.
2. DURING PLAY MODE, IF "SKIP DOWN◄◄" BUTTON (4) IS PRESSED. IT WILL GO BACK TO THE BEGINNING OF THE TRACK, ORIGINAL TRACK NO. IS DISPLAY AND REMAIN THE PLAY MODE.
3. AFTER STEP 2, PRESS "SKIP DOWN◄◄" BUTTON (4) AGAIN WILL GO TO THE PREVIOUS TRACK AND REMAIN THE PLAY MODE.

- PRESS AND HOLD THE " SKIP UP►► " OR " SKIP DOWN◄◄ " BUTTON WILL PERFORM THE SEARCH FORWARD/BACKWARD FUNCTION.

*Calls cost 7 pence per minute plus your telephone company's network access charge

The Enterprise Department
Head Office: 11 Bridge Street
Bishop's Stortford, CM23 2JU
Tel: 0844 482 4400*
Fax: 01279 756 595
www.coopersofstortford.co.uk

HIFI Stacking System

H633 v02: 19/11/21

Please read and retain these instructions for future reference

BERGSTRÖM

MP3 TRACK FORMAT REQUIREMENT:-

- THE PERFORMANCE OF PLAYING MP3/WMA DISC OR FILE IS VARIOUS FROM THE QUALITY OF RECORDING DISC AND THE METHOD OF RECORDING. FURTHERMORE, THE SEARCHING LEAD-TIME FOR MP3 IS LONGER THAN NORMAL CD DUE TO DIFFERENCE FORMAT.

● REPEAT / RANDOM MODE

PRESS THE " REP/RAN " BUTTON (17) BEFORE OR DURING PLAYBACK, A SINGLE TRACK, SINGLE FOLDER (MP3 ONLY), ALL THE TRACKS CAN BE REPEATED.



RANDOM MODEL ALLOWS THE DISC PLAYBACK IN RANDOM ORDER

EACH PRESS SWITCH THE REPEAT / RANDOM MODE AS FOLLOW:-

FOR CD

(1) REPEAT 1 → (2) REPEAT ALL → (3) RANDOM → (4) OFF






REPEAT MODE	REPEAT INDICATOR ON LCD DISPLAY
REPEAT 1 TRACK	
REPEAT ALL TRACKS	 ALL
RANDOM	RAN.
OFF	-----

FOR MP3 DISC

(1) REP. 1 → (2) REP. ALL → (3) REP. FOLDER → (4) RANDOM → OFF



REPEAT MODE	REPEAT INDICATOR ON LCD DISPLAY
REPEAT SINGLE TRACK	
REPEAT ALL TRACKS	 ALL
REPEAT CURRENT FOLDER	 FOLDER
RANDOM	RAN.
OFF	-----

*Calls cost 7 pence per minute plus your telephone company's network access charge

The Enterprise Department
Head Office: 11 Bridge Street
Bishop's Stortford, CM23 2JU
Tel: 0844 482 4400*
Fax: 01279 756 595
www.coopersofstortford.co.uk

HIFI Stacking System

H633

v02: 19/11/21

Please read and retain these instructions for future reference

BERGSTRÖM

CD DISC / MP3 DISC PROGRAMMING

UP TO 20 TRACKS CAN BE PROGRAMMED IN ANY ORDER. BEFORE USE, BE SURE TO PRESS THE CD "STOP" BUTTON (5)


1. SET IN CD MODE & STOP THE CD PLAYBACK.
2. PRESS THE "MEM/CLK-ADJ" BUTTON (21), "MEMORY" WILL APPEAR ON LCD DISPLAY (1). MOREOVER, IT WILL INDICATE PROGRAM NO. AND DIGITS FOR TRACK NO. TO BE PROGRAMMED.
3. SELECT A DESIRED TRACK BY PRESSING THE SKIP UP▶▶▶ OR DOWN◀◀◀ BUTTONS (4).
4. PRESS THE "MEM/CLK-ADJ" BUTTON (21) TO STORE THE TRACK INTO MEMORY.
5. REPEAT STEPS 3 AND 4 TO ENTER ADDITIONAL TRACKS INTO THE MEMORY IF NECESSARY.
6. WHEN ALL THE DESIRED TRACKS HAVE BEEN PROGRAMMED, PRESS CD "PLAY/PAUSE▶||" BUTTON (3) TO PLAY THE DISC IN ASSIGNED ORDER.
7. PRESS CD "STOP■" BUTTON (5) TO TERMINATE PROGRAM PLAY.
8. PRESS CD "STOP■" BUTTON (5) AGAIN TO CLEAR THE PROGRAM AND THE "MEMORY" WILL DISAPPEAR ON LCD DISPLAY.

PLAYBACK OF MP3 SONG VIA USB STORAGE MEDIA

CONNECTING

THE SYSTEM IS ABLE TO DECODE AND PLAYBACK ALL MP3 FILE WHICH STORED IN THE MEMORY MEDIA WITH USB CONNECTING PORT.

 1. BEFORE SWITCHING ON THE UNIT, PLUG-IN THE USB PLUG & MAKE SURE IT GOING INTO COMPLETELY
- **CONNECTING THE USB UPSIDE DOWN COULD DAMAGE THE AUDIO SYSTEM OR THE STORAGE MEDIA (USB PEN DRIVE). CHECK TO BE SURE THE DIRECTION IS CORRECT BEFORE CONNECTION.**
2. TURN ON THE UNIT (6) AND PRESS FUNCTION BUTTON (7) TO SELECT "USB" MODE.
3. THE SYSTEM WILL START READING THE STORAGE MEDIA AND WILL START PLAYBACK THE DISC AUTOMATICALLY. THE LCD DISPLAY (1) WILL SHOW THE TRACK NUMBER AND PLAYING TIME.
4. REPEAT THE SAME PLAYBACK PROCEDURE AS PLAYING CD/MP3 DISC AS ABOVE

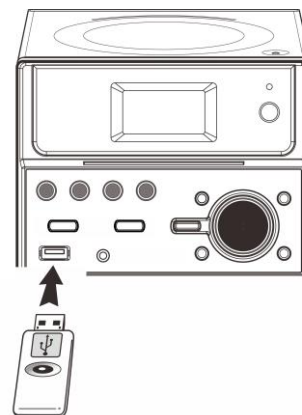

REMARK

- THE SYSTEM CAN DETECT AND READ THE FILE UNDER MP3 FORMAT ONLY THROUGH THE USB PORT.
- **IF CONNECT THE SYSTEM TO MP3 PLAYER VIA THE USB SOCKET, DUE TO VARIANCES IN MP3 ENCODING FORMAT, SOME MP3 PLAYER MAY NOT BE ABLE TO PLAY VIA THE USB SOCKET. THIS IS NOT THE MALFUNCTION OF THE SYSTEM.**

REMOVING OF USB

TO REMOVE THE USB, TURN OFF THE POWER OR SWITCH THE FUNCTION MODE TO EITHER CD OR TUNER FIRST. UN-PLUG THE USB BY PULLING OUT THE USB SOCKET DIRECTLY,

BLUETOOTH CONNECTING AND PLAYBACK

*Calls cost 7 pence per minute plus your telephone company's network access charge

The Enterprise Department
Head Office: 11 Bridge Street
Bishop's Stortford, CM23 2JU
Tel: 0844 482 4400*
Fax: 01279 756 595
www.coopersofstortford.co.uk

HIFI Stacking System

H633

v02: 19/11/21

Please read and retain these instructions for future reference

The logo for BERGSTRÖM is a black semi-circle with the word "BERGSTRÖM" written in white, bold, sans-serif capital letters across its top edge.

1. PRESS THE POWER ON/STANDBY BUTTON (6) TO TURN ON THE UNIT AND PRESS THE FUNCTION BUTTON (7) TO SWITCH THE FUNCTION TO BT (BLUETOOTH) MODE.
2. THE TEXT "BT" ON THE DISPLAY WILL FLASH MEANING THE UNIT IS SEARCHING AND WAITING TO CONNECT TO BLUETOOTH.
3. SWITCH THE BLUETOOTH FUNCTION OF YOUR BLUETOOTH DEVICE ON (SUCH AS A MOBILE PHONE) AND SELECT THE BLUETOOTH EQUIPMENT CODE "H633" TO CONNECT.
4. WHEN THE BLUETOOTH DEVICE HAS CONNECTED SUCCESSFULLY, THE TEXT " BT " WILL NO LONGER FLASH BUT BE STATIC.
5. START PLAYBACK OF THE MUSIC ON YOUR BLUETOOTH DEVICE AND ENJOY THE MUSIC THROUGH THE SPEAKERS OF THIS UNIT.
6. ADJUST THE VOLUME KNOB (19) TO THE DESIRED VOLUME LEVEL.
7. IF YOU WANT TO CONNECT THE UNIT TO ANOTHER BLUETOOTH ENABLED DEVICE AFTER YOU'VE ALREADY SUCCESSFULLY PAIRED, PRESS AND HOLD THE " PLAY/PAUSE▶|| " BUTTON (3) FOR 2-3 SECONDS OR TURN OFF THE BLUETOOTH ON THE DEVICE THAT WAS PREVIOUSLY PAIRED WITH THE UNIT. THE TEXT "BT" ON THE DISPLAY WILL BEGIN FLASHING, REPEAT STEP 3-6 ABOVE.

NOTES:

1. REFER TO THE MANUAL OF YOUR CELL PHONE, TABLET PC, COMPUTER OR OTHER BLUETOOTH ENABLED DEVICES FOR BLUETOOTH OPERATION SINCE IT MAY VARY FROM MODEL TO MODEL.
2. IF YOUR BLUETOOTH ENABLED DEVICE DOES NOT SUPPORT A2DP PROFILE, IT WILL NOT PLAY THE MUSIC THROUGH THE SPEAKER, EVEN IF PAIRED (LINKED).
3. REMEMBER TO TURN OFF THE UNIT WHEN YOU HAVE FINISHED LISTENING,
4. DON'T FORGET TO SWITCH OFF THE POWER OF YOUR BLUETOOTH DEVICE AS WELL.
5. THE MUSIC PLAYBACK WILL AUTOMATICALLY BE PAUSED WHEN YOU HAVE AN INCOMING CALL. WHEN THE CALL IS ENDED, THE UNIT WILL START PLAYING AGAIN.

LISTING TO TAPE

GENERAL OPERATION

- | | |
|---|--|
| STOP / EJECT KEY (24) | PRESS TO STOP ALL DECK OPERATION. PRESS AGAIN TO OPEN THE CASSETTE DOOR |
| FAST FORWARD KEY (25)
& FAST REWIND KEY (13) | PRESS TO START TAPE WINDING IN EITHER FORWARD OR REVERSE DIRECTION |
| PLAY KEY (12) | PRESS TO START PLAYING CASSETTE TAPE |
| PAUSE KEY (23) | PRESS TO STOP TAPE OPERATION TEMPORARILY. PRESS AGAIN TO RESUME PLAYBACK |

*Calls cost 7 pence per minute plus your telephone company's network access charge

The Enterprise Department
Head Office: 11 Bridge Street
Bishop's Stortford, CM23 2JU
Tel: 0844 482 4400*
Fax: 01279 756 595
www.coopersofstortford.co.uk

HIFI Stacking System

H633

v02: 19/11/21

Please read and retain these instructions for future reference

The logo for BERGSTRÖM is a black semi-circle with the word "BERGSTRÖM" in white, bold, sans-serif capital letters inside it.

RECORD KEY (11) PRESS TOGETHER WITH PLAY KEY TO START TAPE RECORDING

PLAYBACK

- PRESS "FUNCTION" BUTTON (7) TILL IT REACH "TAPE" MODE.
- INSERT A BLANK CASSETTE TAPE WHICH IS SUITABLE FOR RECORDING.
- PRESS PLAY KEY (12) TO ACTIVE PLAYBACK
- ADJUST THE VOLUME CONTROL (19) TO THE DESIRED LEVEL.
- USE PAUSE KEY (23) WHEN YOU WANT TO STOP PLAYBACK TEMPORARILY.
- PRESS STOP / EJECT KEY (24) WHEN FINISHED.

RECORDING

A. RECORDING FROM RADIO

- SET TO "RADIO" MODE.
- TUNE TO THE DESIRED STATION AND INSERT A BLANK CASSETTE TAPE.
- PRESS "RECORD" KEY (11) TO START RECORDING.
- PRESS "PAUSE" KEY (23) AND THEN "STOP/EJECT" KEY (24) WHEN FINISHED.

B. RECORDING FROM CD/USB/BLUETOOTH

- SET TO "CD/USB/BT" MODE.
- INSERT A BLANK CASSETTE TAPE WHICH IS SUITABLE FOR RECORDING.
- PRESS "PAUSE" KEY (23) FIRST AND THEN "RECORD" KEY (11), RECORDING FUNCTION IS NOW STANDBY.
- START PLAYBACK OF CD/USB, OR CONNECT THE BLUETOOTH AND TO START PLAYBACK. AND THEN RELEASE THE "PAUSE KEY" (23) TO START RECORDING.
- TO STOP RECORDING, PRESS "STOP" BUTTON (5) FIRST, THEN PRESS THE "PAUSE" KEY (23) AND THEN "STOP/EJECT" KEY (24) ON CASSETTE TAPE DECK.

MORE FEATURES

A. MUTE FUNCTION (BY REMOTE HANDSET)

PRESS TO TERMINATE THE SOUND OUTPUT FROM SPEAKER TEMPORARILY AND PRESS AGAIN TO RESUME NORMAL PLAYBACK.

B. PRE-SET EQ FUNCTION

THIS UNIT PROVIDES 5 DIFFERENCES SOUND MODE TO ENHANCE YOUR LISTENING EXPERIENCE. YOU CAN SELECT THE DESIRED EFFECT BY PRESSING THE "EQ" BUTTON REPEATEDLY AT FOLLOWING SEQUENCE:-

FLAT → CLASSIC → ROCK → POP → JAZZ

*Calls cost 7 pence per minute plus your telephone company's network access charge

The Enterprise Department
Head Office: 11 Bridge Street
Bishop's Stortford, CM23 2JU
Tel: 0844 482 4400*
Fax: 01279 756 595
www.coopersofstortford.co.uk

HIFI Stacking System

H633

v02: 19/11/21

Please read and retain these instructions for future reference

BERGSTRÖM



REMOTE CONTROL TRANSMITTER

BATTERY INSTALLATION (BATTERY NOT PROVIDED)

THE INFRA-RED TRANSMITTER REQUIRE 2 PCS "AAA" BATTERY FOR OPERATION

BUTTON DESCRIPTION

POWER	PRESS TO SWITCH ON/STANDBY THE SYSTEM
MUTE	PRESS TO ACTIVE MUTE FUNCTION
FUNCTION	PRESS TO SELECT THE FUNCTIONS (CD/TUNER/USB)
SKIP UP▶▶/DOWN◀◀	IN CD/MP3 MODE : TO SELECT PREVIOUS / NEXT TRACK IN TUNER MODE : PRESS TO TUNE THE RADIO FREQUENCY
PLAY/PAUSE▶	IN CD MODE : PRESS ONCE TO START PLAYBACK. PRESS ONCE AGAIN TO STOP THE DISC PLAY TEMPORARILY IN TUNER MODE : PRESS TO SELECT STEREO OR MONO FM RECEPTION
STOP■	IN CD MODE : PRESS TO TERMINATE CD PLAYBACK OR CANCEL PROGRAMMED CD MEMORY IN TUNER MODE : PRESS TO SELECT AM OR FM BAND
REP-DOWN / PRE-UP	IN TUNER MODE : PRESS TO CALL OUT THE PRESET MEMORY IN ORDER
EQ	PRESS TO SELECT EQ MODE FOR ENJOYMENT
VOLUME -/+	PRESS TO ADJUST VOLUME LEVEL UP/ DOWN

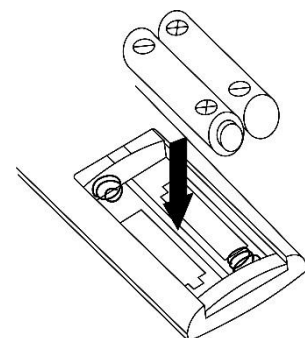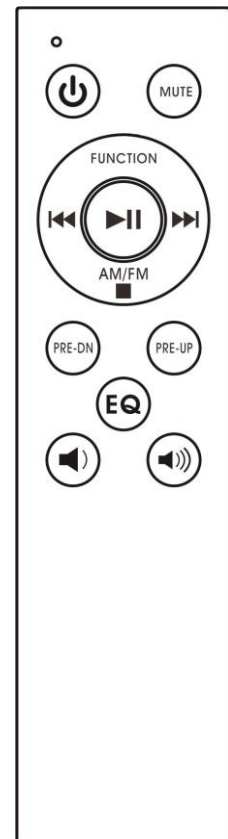  

BATTERY INSTALLATION

- 1) OPEN THE BATTERY COMPARTMENT COVER.
- 2) INSERT TWO "AAA" (UM-4) BATTERIES (NOT INCLUDED) AND OBSERVE THE POLARITY AS INDICATED INSIDE THE BATTERY COMPARTMENT WHEN INSTALLING.
- 3) REPLACE THE COVER.

*Calls cost 7 pence per minute plus your telephone company's network access charge

The Enterprise Department
Head Office: 11 Bridge Street
Bishop's Stortford, CM23 2JU
Tel: 0844 482 4400*
Fax: 01279 756 595
www.coopersofstortford.co.uk

HIFI Stacking System

H633

v02: 19/11/21

Please read and retain these instructions for future reference

The logo for BERGSTRÖM, featuring the brand name in a bold, white, sans-serif font inside a black semi-circular shape.

BATTERIES

- Keep batteries away from children and pets.
- Do not mix used and new batteries.
- Remove the batteries if left for long periods.
- Never dispose of batteries in a fire.
- Battery disposal, spent or expired batteries must be properly disposed of and recycled in compliance with local regulations. For detailed information, contact your local authority.
- Follow the battery manufacturer's safety, usage, and disposal instructions.

NOTE: Due to ERP stage two requirements and to protect the environment, the unit will switch to standby mode automatically if no music is playing after 15 minutes.

PLUG WIRING (UK & IRELAND)

This appliance is fitted with a BS 1363 13-amp plug. If you have to replace the fuse, only those that are ASTA or BSI approved to BS1362 and with a rated current of 3-amperes should be used. If there is a fuse cover fitted, this cover must be re-fitted after changing the fuse. If the fuse cover is lost or damaged the plug must not be used. Spare fuse holders and fuses are available from electrical outlets. If the socket outlets in your home or office are not suitable for this product's plug, the plug must be removed and disposed of safely. Attempts to insert the plug into the wrong socket is likely to cause electric hazard. A replacement plug should be wired according to the following instructions:

The cable

A mains electricity cable contains two or three inner wires. Each has a core of copper and an outer layer of flexible plastic. This product is earthed; the wires in the cord set are colour coded in the following way:

*Calls cost 7 pence per minute plus your telephone company's network access charge

The Enterprise Department
Head Office: 11 Bridge Street
Bishop's Stortford, CM23 2JU
Tel: 0844 482 4400*
Fax: 01279 756 595
www.coopersofstortford.co.uk

 
HIFI Stacking System

H633

v02: 19/11/21

Please read and retain these instructions for future reference

BERGSTRÖM

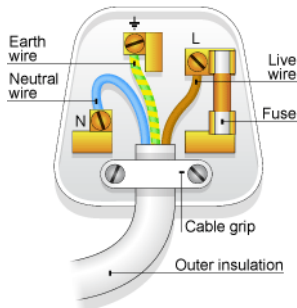

BLUE NEUTRAL
 BROWN LIVE
 GREEN & YELLOW EARTH

The diagram shows the key features of a correctly wired three-pin mains plug.

DISPOSAL

- Coopers of Stortford use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons, packaging in accordance with your local recycling regulations.
- Plastics, polybags – this is made from the following recyclable plastic.



Code & Symbol	PETE	HDPE	PVC	LDPE	PP	PS	OTHER
Type of Plastic	Polyethylene Terephthalate	High-Density Polyethylene	Polyvinyl Chloride	Low Density Polyethylene	Polypropylene	Polystyrene	Please Specify (includes ABS, Nylon)
Commonly used for	Soft drink and juice bottles, shampoo bottles, meat trays, fruit punnets	Milk bottles, cleaning product bottles, yoghurt pots, butter tubs and other food	Pipes, construction material, flooring, windows, guttering, plaster packs	Shopping bags, bread bags, squeeze bottles, stretch/pallet wrap, bubble wrap, multi-pack can	Microwaveable food containers, yoghurt pots, butter tubs, disposable plates and cups	Insulation boxes, water cups, protective packaging inserts, take away containers	CD's, crisp packets, various flexible packaging, baby bottles, sunglasses

The Enterprise Department
 Head Office: 11 Bridge Street
 Bishop's Stortford, CM23 2JU
 Tel: 0844 482 4400*
 Fax: 01279 756 595
 www.coopersofstortford.co.uk

*Calls cost 7 pence per minute plus your telephone company's network access charge

HIFI Stacking System

H633 v02: 19/11/21

Please read and retain these instructions for future reference



		containers		holders			lenses
Notes	Commonly recycled and collected from household recycling bins. Check with your local authority	Commonly recycled and collected from household recycling bins. Check with your local authority	Not usually collected from household recycling bins, Sometimes recycled at local waste management centres.	Usually recyclable supermarket deposit points. Check other plastic films as any non-polythene film e.g. cling film, crisp packets film lids	Commonly recycled and collected from household recycling bins (packaging tape itself not recyclable but does not interfere with cardboard)	Not commonly recycled but waste management centres will recycle it.	Not often or widely recycled

- At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.



*Calls cost 7 pence per minute plus your telephone company's network access charge

The Enterprise Department
 Head Office: 11 Bridge Street
 Bishop's Stortford, CM23 2JU
 Tel: 0844 482 4400*
 Fax: 01279 756 595
www.coopersofstortford.co.uk