



Neck Massager Beige



Thank you for purchasing our Neck Massager. We hope you will be satisfied with your purchase.

This product is intended to relax tense neck and shoulder muscles and may help to relieve tension and stress headaches.

Instructions for use:

1. Remove the Neck Massager from the carrying bag.
2. Unzip the cover to reveal battery compartment.
3. Insert 2 x AA batteries (not included)
4. Zip the product to reveal battery compartment
5. Place the unit around your neck or shoulder
6. Choose HIGH or LOW intensity setting
7. The product is ready to use.

I LOW SETTING
O: PRE-SET
II: HIGH SETTING

Battery Warning:

Do not mix alkaline, standard (carbon-zinc) and rechargeable batteries (including hydride)

Do not mix old and new batteries

Exhausted batteries are to be removed

The supply terminals are not to be short circuited

Only batteries of the same or equivalent type as recommended are to be used

Batteries are to be inserted with the correct polarity

Battery disposal:

The wheellie bin symbol indicates the product and batteries must not be disposed of in the domestic waste as they can contain substances that are damaging to the environment. Please use designated collection points or recycling facilities when disposing of the item or batteries. Batteries should be removed from the product. Contact your local waste disposal agency or your retailer for further information.



Product Code: G100079BEIGE

Made in China for S&S Enterprises Ltd. 28 Perivale Park Middlesex UB7RL

