

Basic Metal Detector

 
H673 v01: 26/03/21

Please read and retain these instructions for future reference



- EVER WONDERED WHAT HIDDEN TREASURES THERE MAY BE OUT THERE? WELL NOW YOU CAN FIND OUT!
- GET OUT AND ABOUT HUNTING, WHETHER ITS YOUR GARDEN, ALONG A BEACH, IN A FIELD ETC
- HEIGHT ADJUSTABLE STEM, WILL GIVE OFF A BUZZING SOUND AND A FLASHING LIGHT WHEN METAL IS DETECTED
- WITH WATERPROOF COILS (UP TO 16.5CM) AND A SEARCH DEPTH OF 8CM.
- POWERED BY 1X9V BATTERY (NOT INCLUDED)

Parts

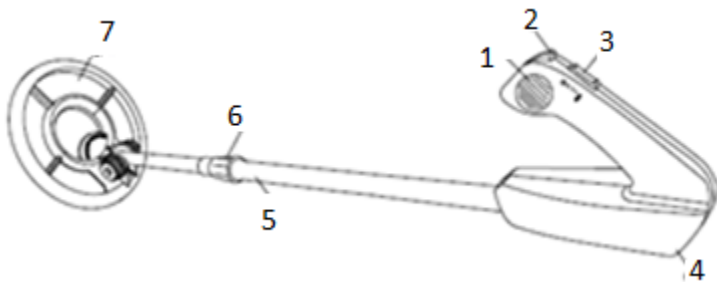


1. BUZZER
2. LED INDICATOR
3. ON/OFF SWITCH
4. BATTERY COMPARTMENT COVER
5. STEM
6. STEM LOCKNUT
7. SEARCH COIL

This metal detector comes to you ready to use. The only adjustments required are the length of the stem and the angle of the search coil.


With this metal detector, you can hunt for hidden coins, relics, jewellery, gold and silver.

ADJUSTING THE STEM

 1. Turn the stem's locknut clockwise until it loosens. (Picture A)
2. Adjust the stem to the required length. (Picture B)

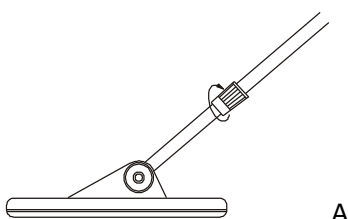

A

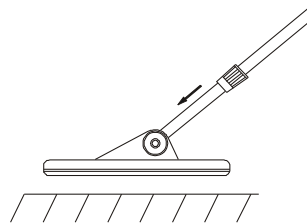 

B

 
3. Retighten the stem's locknut counter-clockwise to lock it in place.

*Calls cost 7 pence per minute plus your telephone company's network access charge

The Enterprise Department
Head Office: 11 Bridge Street
Bishop's Stortford, CM23 2JU
Tel: 0844 482 4400*
Fax: 01279 756 595
www.coopersofstortford.co.uk


Adjusting the search coil

1. Loosen the knobs at the search coil and rotate the coil angle until it is parallel with the ground.
2. Tighten the knobs so that it is just enough to keep the search coil from rotating or wobbling.

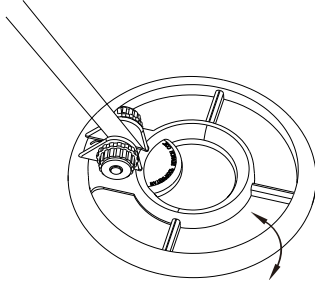


INSTALLATION OF BATTERY

 1. Loosen the screw with a screwdriver, then remove the battery compartment cover. (Picture C).
2. Insert a 9 volt battery (not included) in the battery compartment matching the polarities marked inside.




(C)

 

(D)


Operation

 1. Push the power switch to turn on the detector. At this time, red, orange and green LED light respectively. When green LED lights steadily, the detector is ready for operation. Slide down the power switch to turn off the detector.
2. Hold the search coil level and about 1-2 inches above the ground, slowly sweep the search coil over the ground in a side-to-side motion.
3. When the detector finds a metallic object, red LED lights, beep sounds will be heard.
4. When orange LED lights, replace the battery.

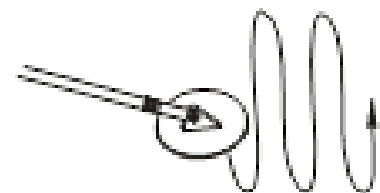

HINTS FOR SEARCH

 1. Never sweep the search coil as if it were a pendulum.



2. Take your time. You may miss a target if you walk too fast.

RULES TO BE OBSERVED







 
1. Always get permission before searching any site.
2. Respect the rights and property of others.
3. Observe all national, state, and local laws while treasure hunting.
4. Never destroy historical or archaeological treasures. If you are not sure about an object you have found, contact a museum or historical society in your area.
5. Leave the land and vegetations as it was. Fill in any holes you dig.
6. Do not carry out metal detection on protected sites such as; those defined as Scheduled Monuments, Sites of Special Scientific Interest or military crash sites, and those involving human remain), and also those other sites on which metal-detecting might also be restricted (such as land under Countryside Stewardship or other agriculture/environment schemes).
7. You must report any potential treasure to your local Finds Liaison Officer (<https://finds.org.uk/contacts> or the British Museum (treasure@britishmuseum.org)).

CARE AND MAINTENANCE

1. The search coil pad is waterproof and can be submerged in either fresh or salt water. However, do not let water enter into the handle part. After using the search coil in salt water, rinse it with fresh water to prevent corrosion of the metal parts.
2. When the sound of the metal detector weakens, replace with a fresh battery.
3. Never attempt to recharge the non-rechargeable battery.
4. Remove exhausted battery to avoid leaking.
5. Handle the metal detector gently and carefully. Dropping it can damage the circuit board and cases and can cause the metal detector to malfunction.

BATTERIES

- Keep batteries away from children and pets.
- Do not mix used and new batteries.
- Remove the batteries if left for long periods.
- Never dispose of batteries in a fire.
- Battery disposal, spent or expired batteries must be properly disposed of and recycled in compliance with local regulations. For detailed information, contact your local authority.
- Follow the battery manufacturer's safety, usage, and disposal instructions.

Code & Symbol	 PETE	 HDPE	 PVC	 LDPE	 PP	 PS	 OTHER
Type of Plastic	Polyethylene Terephthalate	High-Density Polyethylene	Polyvinyl Chloride	Low Density Polyethylene	Polypropylene	Polystyrene	Please Specify (includes ABS, Nylon)
Commonly used for	Soft drink and juice bottles, shampoo	Milk bottles, cleaning product	Pipes, construction material,	Shopping bags, bread bags, squeeze	Microwaveable food containers,	Insulation boxes, water cups,	CD's, crisp packets, various

The Enterprise Department

Head Office: 11 Bridge Street
Bishop's Stortford, CM23 2JU

Tel: 0844 482 4400*

Fax: 01279 756 595

www.coopersofstortford.co.uk

*Calls cost 7 pence per minute plus your telephone company's network access charge

Basic Metal Detector

H673

Instructions for Use

Please read and retain these instructions for future reference

v001: 26/03/21

	bottles, meat trays, fruit punnets	bottles, yoghurt pots, butter tubs and other food containers	flooring, windows, guttering, blister packs	bottles, stretch/pallet wrap, bubble wrap, multi-pack can holders	yoghurt pots, butter tubs, disposable plates and cups	protective packaging inserts, take away containers	flexible packaging, baby bottles, sunglasses lenses
Notes	Commonly recycled and collected from household recycling bins. Check with your local authority	Commonly recycled and collected from household recycling bins. Check with your local authority	Not usually collected from household recycling bins, Sometimes recycled at local waste management centres.	Usually recyclable supermarket deposit points. Check other plastic films as any non-polythene film e.g. cling film, crisp packets film lids	Commonly recycled and collected from household recycling bins (packaging tape itself not recyclable but does not interfere with cardboard)	Not commonly recycled but waste management centres will recycle it.	Not often or widely recycled

- At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.



*Calls cost 7 pence per minute plus your telephone company's network access charge



The Enterprise Department
Head Office: 11 Bridge Street
Bishop's Stortford, CM23 2JU
Tel: 0844 482 4400*
Fax: 01279 756 595
www.coopersofstortford.co.uk