

Basic Metal Detector

 
H673 v02: 15/06/22

Please read and retain these instructions for future reference



- EVER WONDERED WHAT HIDDEN TREASURES THERE MAY BE OUT THERE? WELL NOW YOU CAN FIND OUT!
- GET OUT AND ABOUT HUNTING, WHETHER ITS YOUR GARDEN, ALONG A BEACH, IN A FIELD ETC
- HEIGHT ADJUSTABLE STEM, WILL GIVE OFF A BUZZING SOUND AND A FLASHING LIGHT WHEN METAL IS DETECTED
- WITH WATERPROOF COILS (UP TO 16.5CM) AND A SEARCH DEPTH OF 8CM.
- POWERED BY 1X9V BATTERY (NOT INCLUDED)

Parts

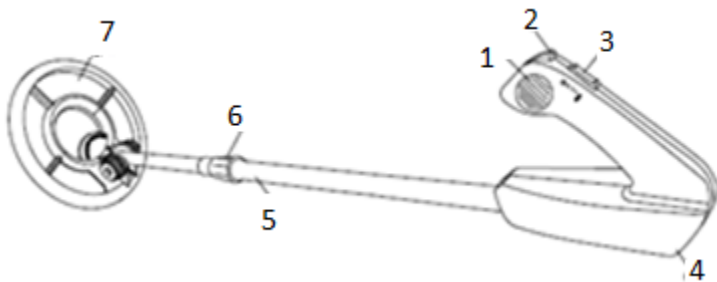


1. BUZZER
2. LED INDICATOR
3. ON/OFF SWITCH
4. BATTERY COMPARTMENT COVER
5. STEM
6. STEM LOCKNUT
7. SEARCH COIL

This metal detector comes to you ready to use. The only adjustments required are the length of the stem and the angle of the search coil.


With this metal detector, you can hunt for hidden coins, relics, jewellery, gold and silver.

ADJUSTING THE STEM

 1. Turn the stem's locknut clockwise until it loosens. (Picture A)
2. Adjust the stem to the required length. (Picture B)

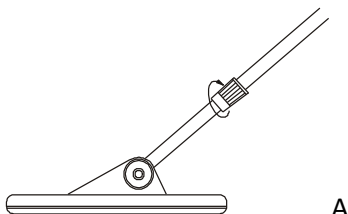

A

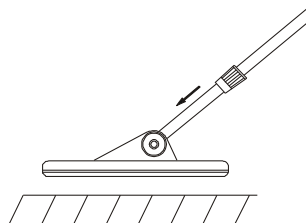 

B

3. Retighten the stem's locknut counter-clockwise to lock it in place.

The Enterprise Department

UK Head Office, 11 Bridge Street, Bishop's Stortford, CM23 2JU

Tel: 0844 4824400*, Fax: 01279 756595

www.coopersofstortford.co.uk

 
EU address: D.S.B. LD, 160 Bd. de Fourmies, 59100 Roubaix, France

Tel: (+44) 1279 701269

*UK Calls cost around 7 pence per minute plus your telephone company's network access.
Please check with your telephone supplier.

Adjusting the search coil

1. Loosen the knobs at the search coil and rotate the coil angle until it is parallel with the ground.
2. Tighten the knobs so that it is just enough to keep the search coil from rotating or wobbling.

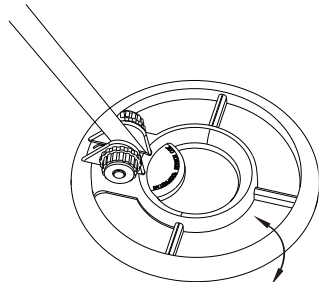


INSTALLATION OF BATTERY

1. Loosen the screw with a screwdriver, then remove the battery compartment cover. (Picture C).
2. Insert a 9 volt battery (not included) in the battery compartment matching the polarities marked inside.



 
(C)



(D)


Operation

 1. Push the power switch to turn on the detector. At this time, red, orange and green LED light respectively. When green LED lights steadily, the detector is ready for operation. Slide down the power switch to turn off the detector.
2. Hold the search coil level and about 1-2 inches above the ground, slowly sweep the search coil over the ground in a side-to-side motion.
3. When the detector finds a metallic object, red LED lights, beep sounds will be heard.
4. When orange LED lights, replace the battery.

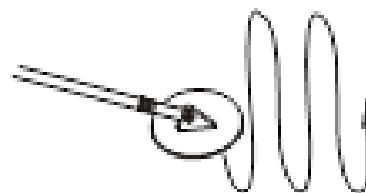

HINTS FOR SEARCH

 1. Never sweep the search coil as if it were a pendulum.



2. Take your time. You may miss a target if you walk too fast.

The Enterprise Department

UK Head Office, 11 Bridge Street, Bishop's Stortford, CM23 2JU

Tel: 0844 4824400*, Fax: 01279 756595

www.coopersofstortford.co.uk

EU address: D.S.B. LD, 160 Bd. de Fourmies, 59100 Roubaix, France

Tel: (+44) 1279 701269

*UK Calls cost around 7 pence per minute plus your telephone company's network access.
Please check with your telephone supplier.

RULES TO BE OBSERVED








1. Always get permission before searching any site.
2. Respect the rights and property of others.
3. Observe all national, state, and local laws while treasure hunting.
4. Never destroy historical or archaeological treasures. If you are not sure about an object you have found, contact a museum or historical society in your area.
5. Leave the land and vegetations as it was. Fill in any holes you dig.
6. Do not carry out metal detection on protected sites such as; those defined as Scheduled Monuments, Sites of Special Scientific Interest or military crash sites, and those involving human remain), and also those other sites on which metal-detecting might also be restricted (such as land under Countryside Stewardship or other agriculture/environment schemes).
7. You must report any potential treasure to your local Finds Liaison Officer <https://finds.org.uk/contacts> or the British Museum (treasure@britishmuseum.org).

CARE AND MAINTENANCE

1. The search coil pad is waterproof and can be submerged in either fresh or salt water. However, do not let water enter into the handle part. After using the search coil in salt water, rinse it with fresh water to prevent corrosion of the metal parts.
2. When the sound of the metal detector weakens, replace with a fresh battery.
3. Never attempt to recharge the non-rechargeable battery.
4. Remove exhausted battery to avoid leaking.
5. Handle the metal detector gently and carefully. Dropping it can damage the circuit board and cases and can cause the metal detector to malfunction.

BATTERIES

- Keep batteries away from children and pets.
- Do not mix used and new batteries.
- Remove the batteries if left for long periods.
- Never dispose of batteries in a fire.
- Battery disposal, spent or expired batteries must be properly disposed of and recycled in compliance with local regulations. For detailed information, contact your local authority.
- Follow the battery manufacturer's safety, usage, and disposal instructions.

| Code & Symbol |  PETE |  HDPE |  PVC |  LDPE |  PP |  PS |  OTHER |
|-----------------|---------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------|
| Type of Plastic | Polyethylene Terephthalate | High-Density Polyethylene | Polyvinyl Chloride | Low Density Polyethylene | Polypropylene | Polystyrene | Please Specify (includes ABS, Nylon) |

The Enterprise Department

UK Head Office, 11 Bridge Street, Bishop's Stortford, CM23 2JU

Tel: 0844 4824400*, Fax: 01279 756595

www.coopersofstortford.co.uk

EU address: D.S.B. LD, 160 Bd. de Fourmies, 59100 Roubaix, France

Tel: (+44) 1279 701269

*UK Calls cost around 7 pence per minute plus your telephone company's network access.
Please check with your telephone supplier.

Basic Metal Detector

H673

Instructions for Use

Please read and retain these instructions for future reference

v002: 15/06/22

| | | | | | | | |
|-------------------|------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------|--------------------------------------------------------------------------------|
| Commonly used for | Soft drink and juice bottles, shampoo bottles, meat trays, fruit punnets | Milk bottles, cleaning product bottles, yoghurt pots, butter tubs and other food containers | Pipes, construction material, flooring, windows, guttering, blister packs | Shopping bags, bread bags, squeeze bottles, stretch/pallet wrap, bubble wrap, multi-pack can holders | Microwaveable food containers, yoghurt pots, butter tubs, disposable plates and cups | Insulation boxes, water cups, protective packaging inserts, take away containers | CD's, crisp packets, various flexible packaging, baby bottles, sunglass lenses |
| Notes | Commonly recycled and collected from household recycling bins. Check with your local authority | Commonly recycled and collected from household recycling bins. Check with your local authority | Not usually collected from household recycling bins, Sometimes recycled at local waste management centres. | Usually recyclable supermarket deposit points. Check other plastic films as any non-polythene film e.g. cling film, crisp packets film lids | Commonly recycled and collected from household recycling bins (packaging tape itself not recyclable but does not interfere with cardboard) | Not commonly recycled but waste management centres will recycle it. | Not often or widely recycled |

- At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.

UK
CA

CE



**The Enterprise
Department**

UK Head Office, 11 Bridge Street, Bishop's Stortford, CM23 2JU

Tel: 0844 4824400*, Fax: 01279 756595

www.coopersofstortford.co.uk

EU address: D.S.B. LD, 160 Bd. de Fourmies, 59100 Roubaix, France

Tel: (+44) 1279 701269

*UK Calls cost 17p per minute plus your telephone company's network access. Please check your local rates.

