



Touch Lamp Tree Design

Maximum power : **40W MAX**

Power Supply : 230 Volts

Nominal Frequenz: 50Hz

Lampholder : **E 14**

Do not connect the lamp to the power supply while the lamp is still in its packing.

Avoid any damage on the insulation wire. If the lamp does not light up, please verify that the bulb is correctly inserted in the support.

If the flexible cable external or the cord of this luminary is damaged, it must be replaced exclusively by the manufacturer, his service of maintenance or any person of equivalent qualification, this in order to avoid any risk.

Please take extra care when handling item after turning of the power.

Lamp shade and bulb might be hot

Do not use this lamp outdoors, in contact with water neither in humid places.

INTERIOR USE EXCLUSIVELY

How to replace a bulb :

Make sure the lamp is not connected to the power supply.

The bulb should be unscrewed out and replaced by new one to screw in.

Please, use only spare bulbs of the same type as the one indicated on the packaging (**40 W MAX**)

BULB NOT INCLUDED

NOTE:

To enable to use a dimmable function, ensure to use a E14 40W Dimmable Bulb

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

Product Code: M120910TREE

Made in China for S&S Enterprises Ltd. 26 Perivale Park Middlesex UB6 7RL

