
Instructions for Use

Please read and retain these instructions for future reference

v001: 19/03/21

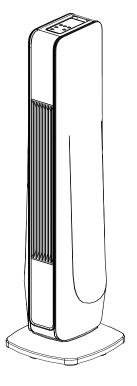

Dimensions

(H) 21.5 x (W) 22.1 x (D) 73.6cm

Voltage: 220-240V AC Frequency: 50Hz Output power: 2400W

- COMPACT TOWER DESIGN SAVES ON FLOOR SPACE
- CERAMIC FAN HEATER HAS 2X POWERFUL SETTINGS AND WORKS FASTER AND STAYS WARM LONGER THAN TRADITIONAL HEATERS
- 2X POWERFUL SETTINGS 1200 AND 2400W
- USE ALL YEAR ROUND THE FAN SETTING WILL KEEP YOU COOL IN THE SUMMER WHILE THE HEATER WILL KEEP YOU WARM ALL WINTER LONG!
- OSCILLATING TO FILL YOUR ROOM WITH WARMTH
- SET THE TIMER BETWEEN 1-8 HOURS
- CONTROL EASILY USING THE LED DISPLAY OR FROM THE COMFORT OF YOUR CHAIR WITH THE REMOTE CONTROL (WITH HANDY REMOTE SLOT ON THE TOP OF THE HEATER SO YOU NEVER LOSE THE REMOTE!)
- LARGE LED DISPLAY SHOWS THE TEMPERATURE AND FUNCTION
- OVERHEAT AND TILT PROTECTION FOR SAFETY

This product is only suitable for well insulated spaces or occasional use.



CAUTION! THIS ELECTRICAL APPLIANCE'S EXTERNAL SURFACES WILL GET HOT IN NORMAL USE.

ALLOW TO COOL BEFORE TOUCHING THE EXTERNAL SURFACES.

ASSEMBLY INSTRUCTIONS / INSTRUCTIONS FOR USE:

Unpack the components carefully. Please check all parts have been removed from the packaging.

In order to prevent the risks of a fire, an electrical shock, burns and other injuries, it is imperative to observe basic safety measures when using electrical appliances.





Instructions for Use

Please read and retain these instructions for future reference

v001: 19/03/21

Please read the following information carefully before using the appliance for the first time for your own safety and to ensure correct use.

IMPORTANT NOTES

- 1. THE SPECIFIED VOLTAGE MUST MATCH THE MAINS VOLTAGE.
- 2. THE APPLIANCE AIR INLET AND OUTLET OPENINGS MUST NOT BE OBSTRUCTED IN ANY WAY!
- 3. NEVER MOVE THE HEATER DURING OPERATION, ALWAYS UNPLUG HEATER WHEN NOT IN USE.
- 4. NEVER USE THE APPLIANCE IF THE APPLIANCE OR CORD IS DAMAGED. THE APPLIANCE MAY ONLY BE OPENED UP AND REPAIRED BY AUTHORIZED QUALIFIED PERSONNEL.

SAFETY INSTRUCTIONS


This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

- Children of less than 3 years should be kept away unless continuously supervised.

Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.

CAUTION - Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.

- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- CAUTION: In order to avoid a hazard due to inadvertent resetting of the thermal cutout, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.
- WARNING: In order to avoid overheating, do not cover the heater.

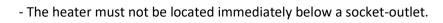



Instructions for Use

Please read and retain these instructions for future reference

v001: 19/03/21

- Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.

LOCATION

1. The appliance should be placed with a minimum distance of 90 cm away from flammable objects (e.g. curtains), walls or other structures!

POWER CORD

- 1. Use only an approved extension cord that is suitable for the appliance rating!
- 2. Do not lay the cord under a carpet. Do not lay rugs, mats or similar articles on it. Position the cord so that it does not pose an obstruction or a tripping hazard.
- 3. Never pull the plug out of the socket at the cord!
- 4. Always disconnect the mains plug when the appliance is not in use.

 Attention! The appliance may only be used for normal domestic use and not for industrial purpose.

BEFORE USE

- 1. Before use, remove all packaging and inspect the appliance for any damages. If there are appears to be any damages, please take back to place of purchase for a replacement.
- 2. Ensure that all the accessories are included as per diagram above before you can continue with the installation.
- 3. Ensure that the location of the heater installed is not directly under a power socket and that a power socket is available to power the appliances for use.


KNOW THE HEATER




Instructions for Use

Please read and retain these instructions for future reference

v001: 19/03/21

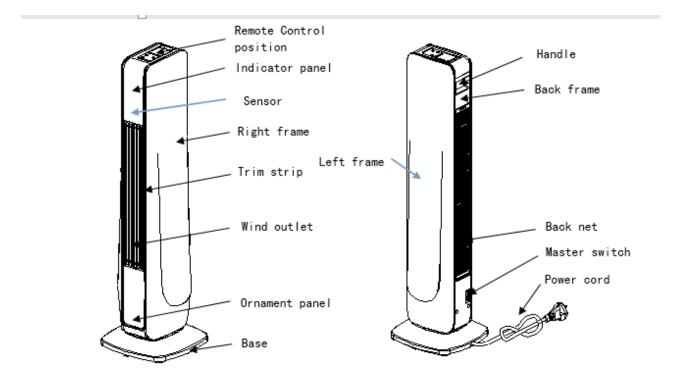

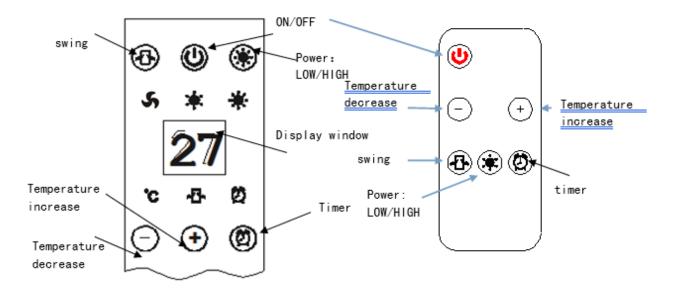



Please read and retain these instructions for future reference

v001: 19/03/21

USING THE HEATER

- Carefully remove the heater from the plastic bag and the carton.
- Place the heater on a firm level surface.
- Setting the master button to "off", on the base of the unit, plug the cord set into a 220-240v AC electrical outlet.
- Plug in, turn the master button on the heater to the on position, the heater is in standby mode,

 LED display room temperature, centigrade light.
- Turn the heater ON by pressing the ON/OFF button "O". The unit is now in fan mode. This will conduct recirculation of the room air, LED display room temperature, centigrade light.
- Upon pressing the "button the unit will be in the LOW heat mode, it's 1200W rating power. light.
- Pressing the " button second time will put the heater into HIGH heat mode, it's 2400W rating power, together light
- Pressing the "button third time will run the heater in fan mode ,LED display room temperature, centigrade light.
- To turn the heater OFF, press the ON/OFF button "O".
- NOTE: To assist in maintaining the internal components, after pressing the "ON/OFF" button "O" the fan will continue to blow room air for a period of 30-60 seconds before shutting down to standby.
- OSCILLATING BUTTON
- This heater has an oscillating function. To switch the function on, press the "button and "light, To stop it, press the swing button again.

TIMER FUNCTION



Instructions for Use

Please read and retain these instructions for future reference

v001: 19/03/21

This function will work in any mode. The timer function allows you to set the length of operation from 1 to 8 hours.

To set the timer, press the TIMER button. The LED display will show 1 h for 5 second, then display room temperature., indicating the heater will operate for 1 hour before shutting down to standby. To increase the operation time, continue to press the timer button until the desired operation time is displayed. To cancel the timer feature press the timer button until all time indicator light off. This returns the heater to continuous running. Each press increases the timer by 1 hour.

TEMPERATURE SETTING:

- 1) Operate the Heating Mode as per above instructions.
- 2) The LED screen will display the room temperature, to adjust the temperature, press "+" to increase the desired temperature and "-" to decrease the desired temperature.
- 3) When the set temperature reaches same or below the air temperature, the heater will cut off. The heater stops working but the fan continues working to allow the product to cool down and maintain the temperature.
- 4) When the set temperature reaches 2 degrees above the air temperature, the unit will turn to low heat 1200W, above 4°C will turn to high heat 2400W.
- 5) Temperature can be set from 10 degrees to 49 degrees, by pressing the "+" and "-".



Instructions for Use

Please read and retain these instructions for future reference

v001: 19/03/21

Model identifier(s): H765 (KPT-2000 5162L)					
Item	Sym bol	Val ue	Unit	Item	Unit
Heat output				Type of heat input, for electric storage local space heaters only (select one)	
Nominal heat output	P _{nom}	2,4	kW	manual heat charge control, with integrated thermostat	NA
Minimum heat output (indicative)	P _{min}	0	kW	manual heat charge control with room and/or outdoor temperature feedback	
Maximum continuous heat output	P _{max,c}	2,4	kW	electronic heat charge control with room and/or outdoor temperature feedback	
Auxiliary electricity consumption				fan assisted heat output	NA
At nominal heat output	el _{max}	N/A	kW	Type of heat output/room temperature control (select one)	
At minimum heat output	el _{min}	N/A	kW	single stage heat output and no room temperature control	
In standby mode	el _{sb}	0,00	kW	Two or more manual stages, no room temperature control	No
				with mechanic thermostat room temperature control	No
				with electronic room temperature control	Yes
				electronic room temperature control plus day timer	No
				electronic room temperature control plus week timer	No

COOPERS

Instructions for Use


Please read and retain these instructions for future reference

v001: 19/03/21

		Other control options (multiple selections poss	sible)		
		room temperature control, with presence detection	No		
		room temperature control, with open window detection	No		
		with distance control option	No		
		with adaptive start control	No		
		with working time limitation	Yes		
		with black bulb sensor	No		
Contact details	Coopers of Stortford, Head Office, 11 Bridge Street, Bishops Stortford CM23 2JU, Hertfordshire, UK				

Battery

The remote control requires one button cells, model No. CR2025 (3V). We recommend the use of Lithium type battery for longer use.

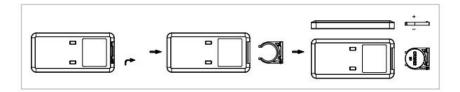

SAFETY SYSTEM

• In the event of abnormal overheating, a safety device shuts down the appliance automatically. After a short cooling down phase, the appliance is ready for use again.

COOPER

Instructions for Use

Please read and retain these instructions for future reference

v001: 19/03/21

- If you still notice the same defect as above mentioned, remove the plug from the socket and consult your authorized dealer to your after-sales service department.
- During use, do not touch or cover the air outlet. This may cause the unit to overheat, and the safety device to operate.
- The unit is also fitted with a tip over switch. Do not use on thick and long pile carpets, as the heater may not work, due the tip over switch not been activated.

MAINTENANCE

- Your appliance must be switch OFF via the main power supply and unplugged before proceeding with any cleaning work.
- Clean the housing with a lightly damp cloth, a vacuum cleaner or a dusting brush.
- Never use flammable or abrasive cleaning agents such as benzene or spirit to clean the appliance.
- Never immerse the appliance in water!
- Clean the air inlet and outlet regularly with a vacuum cleaner.
- If the appliance is not used for an extended period it must be protected against excessive dust and dirt. Please dismount the heater and store in a dry place away from sunlight and dirt.

BATTERIES

- Keep batteries away from children and pets.
- Do not mix used and new batteries.
- Install batteries in accordance with its polarity symbols.
- Remove the batteries if left for long periods.
- Never dispose of batteries in a fire.
- Keep batteries away from children and pets.
- Battery disposal, spent or expired batteries must be properly disposed of and recycled in compliance with local regulations. For detailed information, contact your local authority.
- Follow the battery manufacturer's safety, usage, and disposal instructions.

PLUG WIRING (UK & IRELAND)

This appliance is fitted with a BS 1363 13-amp plug. If you have to replace the fuse, only those that are ASTA or BSI approved to BS1362 and with a rated current of 13-amps should be used. If there is a fuse cover fitted, this cover must be re-fitted after changing the fuse. If the fuse cover is lost or damaged the plug must not be used. Spare fuse holders and fuses are available from electrical outlets. If the socket outlets in your home or office are not suitable for this product's plug, the plug must be removed and disposed of safely. Attempts to insert the plug into the wrong socket is likely to cause electric hazard. A replacement plug should be wired according to the following instructions:

The cable


A mains electricity cable contains two or three inner wires. Each has a core of copper and an outer layer of flexible plastic. This product is earthed; the wires in the cord set are colour coded in the following way:

COOPERS

Instructions for Use

Please read and retain these instructions for future reference

v001: 19/03/21

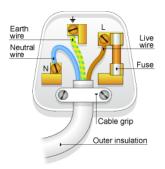

BLUE NEUTRAL
BROWN LIVE
GREEN & YELLOW EARTH

The diagram shows the key features of a correctly wired three-pin mains plug.

DISPOSAL

- Coopers of Stortford use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons, packaging in accordance with your local recycling regulations.



Plastics, polybags – this is made from the following recyclable plastic.

Code & Symbol	23) PVC	OTHER
Type of Plastic	Polyvinyl Chloride	ABS
Commonly used for	Pipes, construction material, flooring, windows, guttering, plister packs	CD's, crisp packets, various flexible packaging, baby bottles, sunglass lenses
Notes	Not usually colellected from household recycling bins, Sometimes recycled at local waste management centres.	Not often or widely recycled

• At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.



