

# Globe Touch Lamp

H810 v01: 30/04/21

Please read and retain these instructions for future reference

# BERGSTRÖM



## Dimensions

(H) 31 x (W) 20 x (D) 20cm

LAMP SIZE:  $\varnothing$  15\*H31CM

SIZE of globe:(  $\varnothing$  20)

Exposed cable length:1.5M

 
- BLACK AND SILVER GLOBE LAMP
- TOUCH LAMP WITH 3X DIFFERENT BRIGHTNESS SETTINGS. SWITCH ON AND OFF EASILY WITH THE TOUCH SENSITIVE BASE
- PERFECT GIFT
- DISPLAYS ALL COUNTRIES AND CAPITAL CITIES
- REQUIRES SMALL SCREW BULB – NOT INCLUDED

Size: E14 GLS 1\*Max.15W or diming compatible LED bulb 6W

## ASSEMBLY INSTRUCTIONS / INSTRUCTIONS FOR USE:


Unpack the components carefully. Please check all parts have been removed from the packaging.

### Assembly

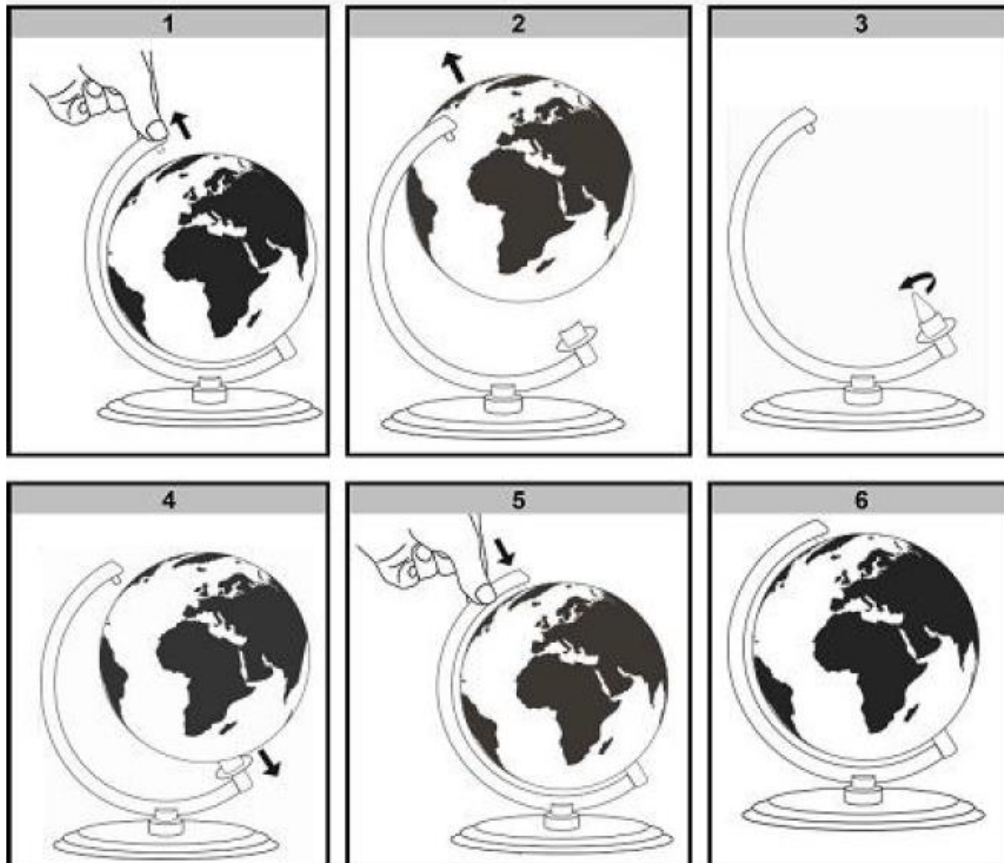

1-3  
Remove globe to insert bulb pull pin and lift up globe. Twist in bulb.

 4-6  
To put the globe back, push onto bottom pin with bulb then push in top pin to hold in position.

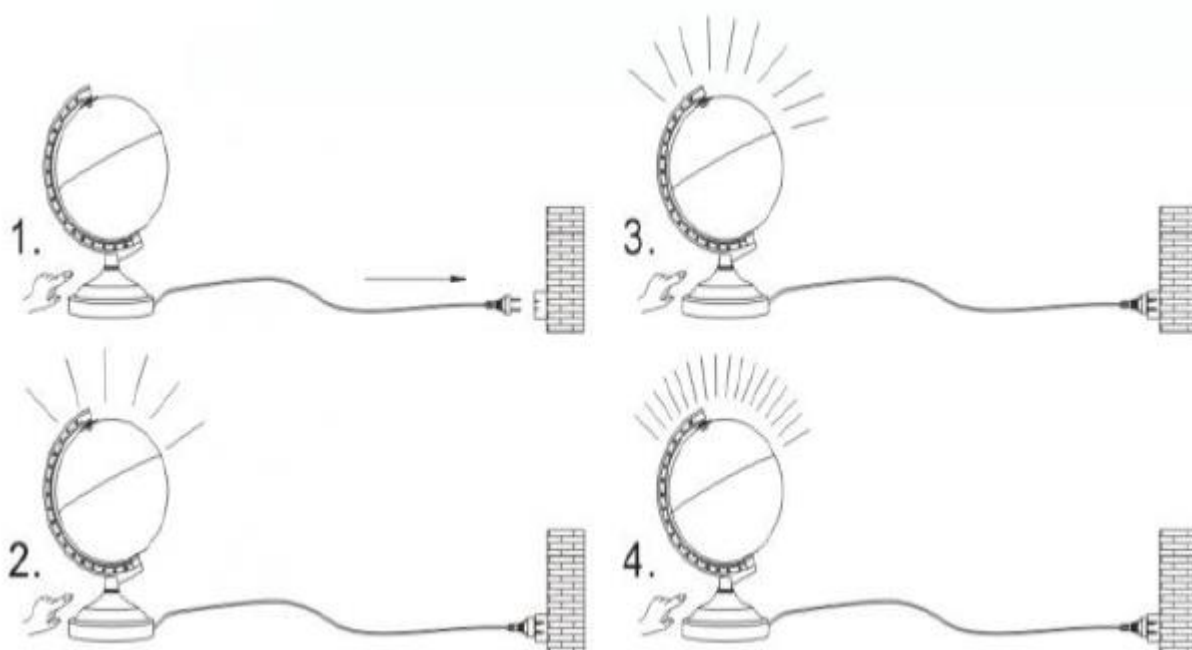

1. Connect the power cable.
2. Touch the base to turn on.
3. & 4. Touch the base again to increase brightness



Press base to turn off.

#### WARNINGS AND SAFETY INSTRUCTIONS:

- READ ALL INSTRUCTIONS BEFORE USE
- FOR DOMESTIC INDOOR USE ONLY.
- THE EXTERNAL FLEXIBLE CABLE OR CORD OF THIS LUMINAIRE CANNOT BE REPLACED. IF THE CORD IS DAMAGED, THE LUMINAIRE MUST BE DESTROYED SAFELY. NEVER USE THE UNIT IF ANY PART IS DAMAGED.
- BEFORE USE, CHECK THOROUGHLY FOR ANY DEFECTS AND DO NOT USE IF DEFECTS ARE FOUND. TAKE CARE NOT TO DROP THE APPLIANCE AS HEAVY IMPACTS MAY CAUSE INTERNAL DAMAGE.
- BEFORE CONNECTING THE APPLIANCE, CHECK IF THE VOLTAGE INDICATED ON THE BOTTOM OF THE APPLIANCE IS IN ACCORDANCE WITH THE MAINS VOLTAGE IN YOUR HOME.
- DO NOT PLACE ON OR NEAR HEAT SOURCES.
- USE ON A LEVEL, STABLE SURFACE.

- THERE ARE NO USER SERVICEABLE PARTS. IF A FAULT DEVELOPS, STOP USING THIS IMMEDIATELY AND DESTROY SAFELY. IF FAULT IS WITHIN THE GUARANTEE CONDITIONS THEN PLEASE RETURN TO THE RETAILER FOR REPLACEMENT OR REFUND.
- DO NOT LOOK DIRECTLY AT THE LIT LEDS.
- ROUTE THE POWER CABLE SO THAT IT WILL NOT GET WALKED ON OR PULLED TO AVOID TRIP HAZARDS.
- DO NOT ALLOW CHILDREN TO PLAY WITH THIS UNIT. IT IS NOT A TOY.
- THIS APPLIANCE CAN BE USED BY CHILDREN AGED FROM 8 YEARS AND ABOVE, AND PERSONS WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES OR LACK OF EXPERIENCE AND KNOWLEDGE ONLY IF THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE IN A SAFE WAY AND UNDERSTAND THE HAZARDS INVOLVED. CHILDREN SHALL NOT PLAY WITH THE APPLIANCE. CLEANING AND USER MAINTENANCE SHALL NOT BE MADE BY CHILDREN WITHOUT SUPERVISION.
- CHILDREN OF LESS THAN 3 YEARS SHOULD BE KEPT AWAY UNLESS CONTINUOUSLY SUPERVISED.
- THE UNIT IS NOT INTENDED TO BE OPERATED BY MEANS OF AN EXTERNAL TIMER, DIMMER SWITCH OR SEPARATE REMOTE-CONTROL SYSTEM.
- DO NOT COVER THE ITEM IN ANY WAY WHEN IN USE AS THIS MAY CAUSE OVERHEATING.
- DO NOT USE THIS APPLIANCE FOR ANY OTHER USE THAN THE INTENDED USE IT IS DESIGNED FOR.
- TO PROTECT AGAINST ELECTRIC SHOCK, DO NOT IMMERSE POWER CABLE, PLUG OR APPLIANCE, IN WATER OR ANY OTHER LIQUID. DO NOT ALLOW THE UNIT TO GET WET.
- UNPLUG FROM OUTLET WHEN NOT IN USE AND BEFORE CLEANING.
- DO NOT OPERATE ANY APPLIANCE WITH A DAMAGED POWER CABLE OR PLUG OR AFTER THE APPLIANCE MALFUNCTIONS, OR HAS BEEN DAMAGED IN ANY MANNER. WE RECOMMEND THAT THE POWER CABLE IS NOT KINKED OR STORED IN A TWISTED MANNER, AND THAT YOU REGULARLY CHECK ITS CONDITION.

#### Cleaning and Maintenance

 
- Wipe with a dry cloth.

#### PLUG WIRING (UK & IRELAND)

This appliance is fitted with a BS 1363 13-amp plug. If you have to replace the fuse, only those that are ASTA or BSI approved to BS1362 and with a rated current of 13-amperes should be used. If there is a fuse cover fitted, this cover must be re-fitted after changing the fuse. If the fuse cover is lost or damaged the plug must not be used. Spare fuse holders and fuses are available from electrical outlets. If the socket outlets in your home or office are not suitable for this product's plug, the plug must be removed and disposed of safely. Attempts to insert the plug into the wrong socket is likely to cause electric hazard. A replacement plug should be wired according to the following instructions:

#### The cable

A mains electricity cable contains two or three inner wires. Each has a core of copper and an outer layer of flexible plastic. This product is earthed; the wires in the cord set are colour coded in the following way:

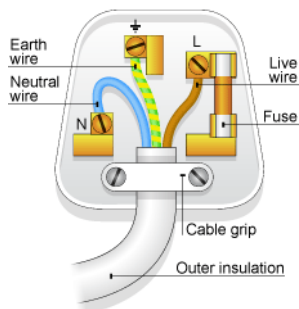


BLUE	NEUTRAL
BROWN	LIVE
GREEN & YELLOW	EARTH

The diagram shows the key features of a correctly wired three-pin mains plug.

### DISPOSAL

- Coopers of Stortford use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons, packaging in accordance with your local recycling regulations.
- Plastics, polybags – this is made from the following recyclable plastic.



Code & Symbol	 PVC
Type of Plastic	Polyvinyl Chloride
Commonly used for	Pipes, construction material, flooring, windows, guttering, plaster packs
Notes	Not usually collected from household recycling bins, Sometimes recycled at local waste management centres.

- At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.

