




Digital Coin Counter & Sorter

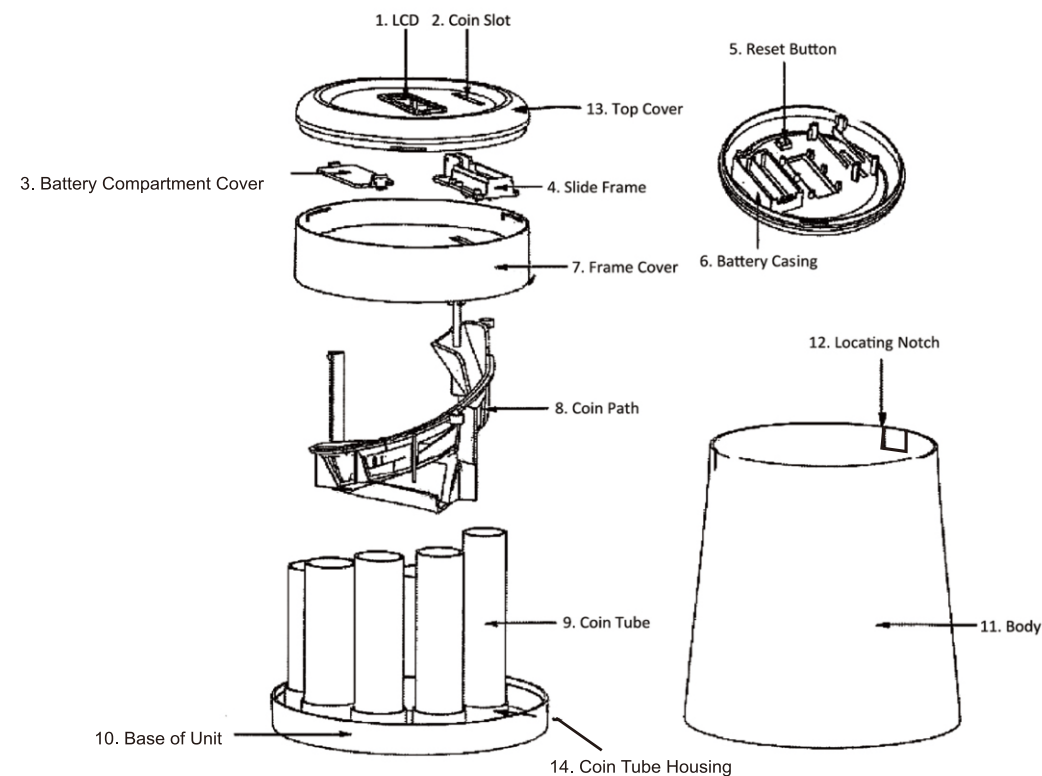

Features:

1. The inductor mechanism automatically and accurately identifies coin values.
2. It displays the individual coin values first, then accumulates the total amount and displays it on the LCD.
3. Coins are sorted to the correct coin tubes by their diameter.
4. After the batteries are removed, the LCD screen will still display for at least 8 seconds.
5. GBP coins that can be inserted: 1p, 2p, 5p, 10p, 20p, 50p, £1, £2.
6. Press the reset button (number 5 in the diagram above) to reset the total amount to zero.

To install or replace the batteries:

1. Remove the lid of the Coin Sorting Jar.
2. Remove the screw in the battery cover.
3. Insert 2 x 'AAA' batteries (not included) in the battery compartment, following the polarity signs as indicated.
4. Secure the battery cover with the screw.
5. Replace the lid, and lock into place until secure.

To Operate:

1. Insert coins into the coin slot; the inserted coins will automatically descend into the correct coin tube, (number 9 in the diagram above).
2. To empty the Coin Sorting Jar, remove the lid and remove the coins from the coin tubes.

Note:

If removing coins from the jar; please remove all the coins at once and reset the stored value back to "0" (number 5 in the diagram above). You cannot adjust the stored value manually, it can only be reset back to "0". Not removing all the coins at once will mean the LCD will show an inaccurate amount.

Important:

1. The coin tubes (number 9 in the diagram above) and their housings, (number 14 in the diagram above) are marked with the numbers 1 to 8. You can see this on the base of the coin tube housings. The black arrow must be aligned with the locating notch on the body and it should click into place.
2. The black arrow sticker (located near the battery compartment) must be aligned with the locating notch (number 12 on the diagram above) and should click into place. If the black arrow and the locating notch are not aligned and it does not click into place then the coins will not fall into the correct coin tubes.
3. If you find that the coins do not fall into the correct coin tubes, this means that the black arrow and the locating notch are not aligned. Make sure the black arrow and the locating notch are aligned correctly, and clicked into place to sort the coins properly.

Battery Warning:

Do not mix alkaline, standard (carbon-zinc) and rechargeable batteries (including hydride)
Do not mix old and new batteries
Exhausted batteries are to be removed
The supply terminals are not to be short-circuited
Only batteries of the same or equivalent type as recommended are to be used
Batteries are to be inserted with the correct polarity

Battery Disposal:

The wheelie bin symbol indicates the product and batteries must not be disposed of in the domestic waste as they can contain substances that are damaging to the environment. Please use designated collection points or recycling facilities when disposing of the item or batteries. Batteries should be removed from the product. Contact your local waste disposal agency or your retailer for further information



Product Code: J192099

Made in China for S&S Enterprises Ltd. 26 Perivale Park Middlesex UB6 7RL

