



Technical Data

220V-240V~50-60Hz, IP20, Class II,
1500W

This product is only suitable for well insulated spaces or occasional use.

ASSEMBLY INSTRUCTIONS / INSTRUCTIONS FOR USE:

Unpack the components carefully. Please check all parts have been removed from the packaging.

IMPORTANT

Read these instructions fully before using the heater. Retain these instructions for future reference.

SAFETY INSTRUCTIONS (to be read before operating the heater)

1. Check whether or not the local power supply mains matches the appliance electric rating printed on the label before operation.
2. Children should be supervised to ensure that they do not play with the appliance. If the appliance is damaged, do not use it any more.
3. Ensure the power supply to the socket into which the heater is plugged is in accordance with the rating label on the heater and that the socket is earthed.
4. When the appliance is not in operation, please remove plug from mains supply.
5. The plug must be removed from the socket-outlet before cleaning or maintaining the appliance
6. Do not remove the plug by pulling the power cord.
7. Avoid the use of an extension lead as this may overheat and cause a risk of fire.
8. Keep the mains lead away from the hot body of the heater.
9. **WARNING:** In order to avoid overheating, do not cover heater.
10. Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool. Never locate the heater where it may fall into bathtub or other water container.
11. The device is intended for household use. Do not use outdoors.
12. Do not cover or obstruct any of the heat outlet grilles or the air intake openings of the heater.
13. Always ensure that the heater is not positioned close to curtains or furniture as this could create a fire hazard.
14. The heater must not be located immediately below an electrical socket-outlet.
15. Do not insert any object through the heat outlet or air intake grilles of the heater.

Head Office, 11 Bridge Street,
Bishop's Stortford CM23 2JU
Tel: 0844 482 4400*
Fax: 01279 756 595

www.coopersofstortford.co.uk

Coopers
OF STORTFORD

*Calls cost 7 pence per minute plus your
telephone company's network access charge

16. Do not place this heater near flammable materials, surfaces or substances, as there may be a risk of fire.
17. Particular care should be taken when the heater is situated in areas occupied by children or invalids.
18. Always unplug the heater when moving it.
19. The room which is to be heated should not contain any easy inflammable materials (e.g., petrol, solvents, spray canisters etc.) or other easy combustible materials (e.g., wood or paper). Keep such materials away from equipment. Risk of fire!!
20. Do not operate the heater with a damaged cord or plug, or after the heater malfunctions, has been dropped, or damaged in any manner.
21. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
22. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
23. Children should be supervised to ensure that they do not play with the appliance.

OPERATION OF THE HEATER

NOTE: It is normal when the heaters are turned on for the first time or when they are turned on after having not been used for a long period of time the heaters may emit some smell and fumes. This will disappear when the heater has been on a short while.

SAFETY FEATURES :


1. A thermal overload protector is built in to prevent overheating.
2. When an overheat temperature is reached, the Heater will be automatically shut off. It can only resume operation when the user resets the unit.
(See reset instructions below)

To Reset the Heater :

1. Unplug the Heater and wait 5-10 minutes for the unit to cool down.
2. Then, turn on the unit again and operate normally.

Controls

1. Temperature control
2. Power control
3. Power indicator light
4. Overturn switch
5. Oscillation switch

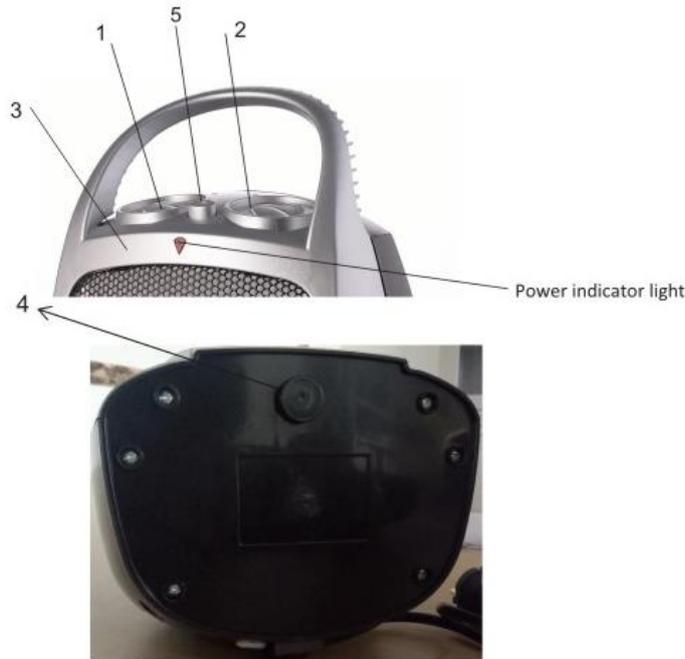

Power control

There are three levels and four positions on rotary switch. The first level is ventilation only, the second level is 750W and the third level is 1500 W.

Temperature control

0-40°C adjustable thermostat to control the room temperature. The thermostat/temperature control button can be turned from 0 to 270 degrees.

Item	Symbol	Value	Unit	Item	Unit
Heat output				Type of heat input, for electric storage local space heaters only (select one)	
Nominal heat output	P_{nom}	1.5	KW	Manual heat charge control, with integrated thermostat	N/A
Minimum heat output (indicative)	P_{min}	0.7	KW	Manual heat charge control, with room and/or outdoor temperature feedback	N/A
Maximum continuous heat output	$P_{max,c}$	1.5	KW	Electronic heat charge control with room and/or outdoor temperature feedback	N/A
Auxiliary electricity consumption				Fan assisted heat output	N/A
At nominal heat output	e_{lmax}	1.5	KW	Type of heat output/room temperature control (select one)	
At minimum heat output	e_{lmin}	0.7	KW	Single stage heat output and no room temperature control	[no]

In standby mode	eISB	N/A	W		
				Two or more manual stages, no room temperature control	[no]
				With mechanic thermostat room temperature control	[yes]
				With electronic thermostat room temperature control	[no]
				Electronic room temperature control plus day timer	[no]
				Electronic room temperature control plus week timer	[no]
				Other control options (multiple selections possible)	
				Room temperature control, with presence detection	[no]
				Room temperature control, with open window detection	[no]
				With distance control option	[no]
				With adaptive start control	[no]
				With working time limitation	[no]
				With black bulb sensor	[no]
Contact details					

CLEANING THE HEATER

1. Always unplug the heater from the wall socket and allow it to cool down before cleaning.
2. Clean the outside of the heater by wiping with a damp cloth and buff with a dry cloth.
3. Do not use any detergents or abrasives and do not allow any water to enter the heater.

STORING THE HEATER


When the heater is not used for long periods of time it should be protected from dust and stored in a clean dry place.

PLUG WIRING (UK & IRELAND)

This appliance is fitted with a BS 1363 **10-amp** plug. If you have to replace the fuse, only those that are ASTA or BSI approved to BS1362 and with a rated current of **10-amps** should be used. If there is a fuse cover fitted, this cover must be re-fitted after changing the fuse. If the fuse cover is lost or damaged the plug must not be used. Spare fuse holders and fuses are available from electrical outlets. If the socket outlets in your home or office are not suitable for this product's plug, the plug must be removed and disposed of safely. Attempts to insert the plug into the wrong socket is likely to cause electric hazard. A replacement plug should be wired according to the following instructions:

The cable

A mains electricity cable contains two or three inner wires. Each has a core of copper and an outer layer of flexible plastic. This product is **double insulated**; the wires in the cord set are colour coded in the following way:

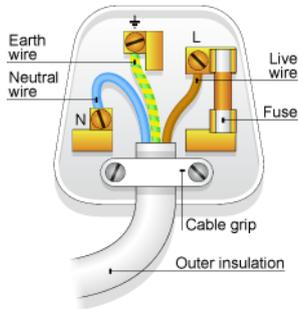

BLUE	NEUTRAL
BROWN	LIVE
GREEN & YELLOW	EARTH

The diagram below shows the key features of a correctly wired three-pin mains plug.

Note:

Double insulated appliances do not need the green & yellow Earth wire. They may only have the Brown and Blue wires.

DISPOSAL

- Coopers of Stortford use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons, packaging in accordance with your local recycling regulations.
- Plastics, polybags – Contains the following recyclable plastic.



Code & Symbol	 LDPE (bag)
Type of Plastic	Low Density Polyethylene
Commonly used for	Shopping bags, bread bags, squeeze bottles, stretch/pallet wrap, bubble wrap, multi-pack can holders
Notes	Usually recyclable supermarket deposit points. Check other plastic films as any non-polythene film e.g. cling film, crisp packets film lids

- At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.

