

Handheld Sewing Machine

K029 v01: 12/07/21

Please read and retain these instructions for future reference

 


Powered by
4x AA 1.5V batteries
required (not included)
Or USB cable - included

Dimensions


(H) 22.5 x (W) 6 x (D) 11.7cm

- WORK WITH SINGLE THREAD POCKET-SIZE
- USEFUL ACCESSORIES (4X BOBBINS, 1X NEEDLE, 1X THREADER, 1x EXTENDED SPINDLE)
- FIX, MEND IN SECONDS, IDEAL FOR HOMEOWNERS, CRAFTSPEOPLE AND SO ON
- MINI SIZE, LIGHT AND WITH GOOD SPACE FOR GUIDING SEWING CLOTH BY HAND
- DC OPERATION. REQUIRES 4x AA BATTERIES (NOT INCLUDED) OR USB CABLE OPERATED (INCLUDED)
- TWO WORKING SPEEDS WITH THREAD CUTTER

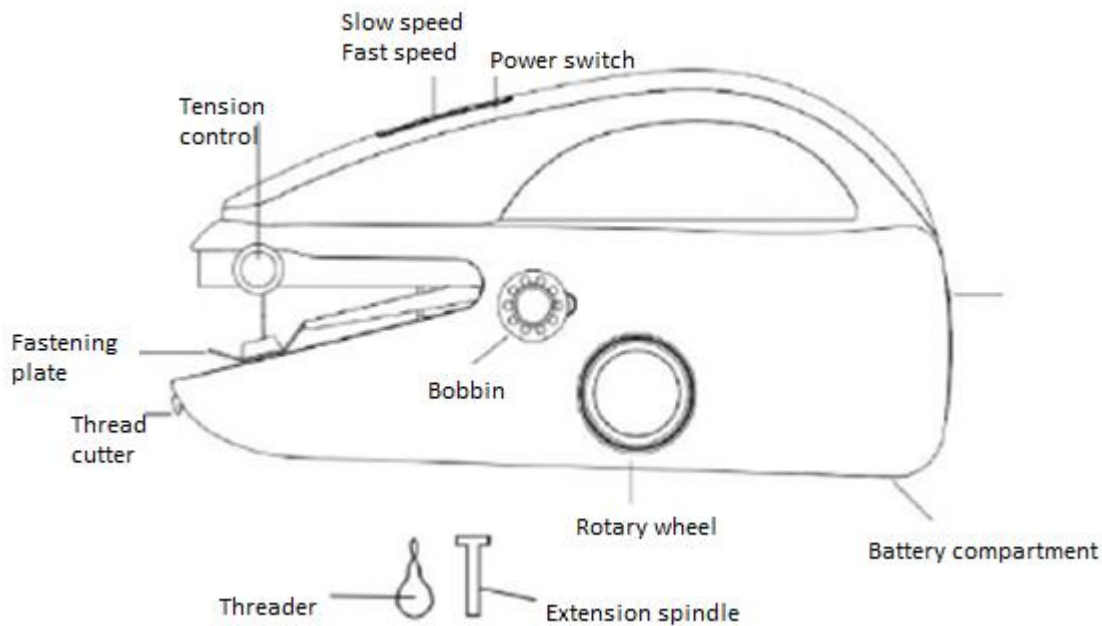

*Calls cost 7 pence per minute plus your telephone company's network access charge

 The Enterprise Department
Head Office: 11 Bridge Street
Bishop's Stortford, CM23 2JU
Tel: 0844 482 4400*
Fax: 01279 756 595
www.coopersofstortford.co.uk

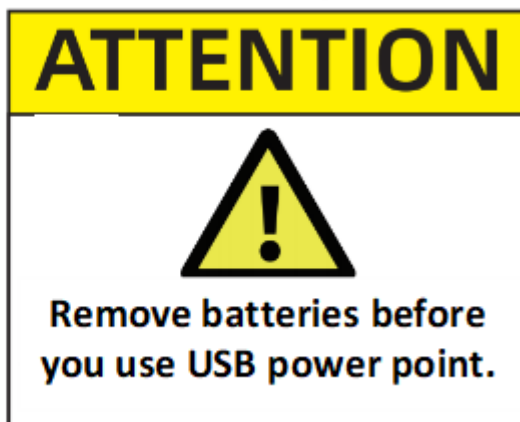

Threading the Needle:

While threading the Needle make sure the machine is unplugged and in the "OFF" position.



1. Start by raising the needle arm to its highest point by turning the rotary wheel in either direction.



2. Remove the bobbin pin and place the spool of thread on the bobbin and begin to thread through the thread guide to the tension control. Note: The spring must be in place before installing the bobbin.




3. Draw the thread from the spool through the thread guide and pull the thread through the tension control. Do not wrap the thread around the tension control. Note: To loosen the tension control turn the dial clockwise.

4. Now pass the thread down and into the needle eye from back to front, pull about 2-4 inches of thread to the rear beyond the needle eye. Note: Must thread from back to front.



To begin sewing

1. Make sure your needle is properly threaded.
2. Lift up the fastening plate and place in the desired fabric underneath.
3. Make sure you have at least 2-4 inches of thread through the needle from back to front prior to sewing.

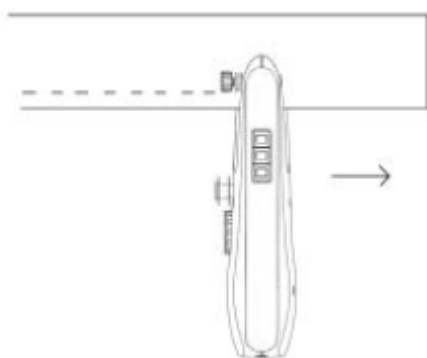

4. Hold the handle of the sewing machine and operate the power switch with your thumb.

5. Choose the speed you want, 2 dots for fast or 1 dot for slow by pressing the respective button.

Power connection:

Remove batteries before you use the USB power point. Insert the USB receiver into the energizing port of the Handheld Sewing Machine and plug the other end into the power port.

This product is suitable for general USB interface line, which can be connected to mobile power supply, computer, etc. The Handheld Sewing Machine needs to be kept plugged into USB port when being used at all times.


BATTERIES

- Keep batteries away from children and pets.
- Do not mix used and new batteries.
- Remove the batteries if left for long periods.
- Never dispose of batteries in a fire.
- Battery disposal, spent or expired batteries must be properly disposed of and recycled in compliance with local regulations. For detailed information, contact your local authority.
- Follow the battery manufacturer's safety, usage, and disposal instructions.

DISPOSAL

- Coopers of Stortford use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons, packaging in accordance with your local recycling regulations.
- Plastics, polybags – Contains the following recyclable plastic.



Code & Symbol	 OTHER
Type of Plastic	ABS
Commonly used for	CD's, crisp packets, various flexible packaging, baby bottles, sunglass lenses
Notes	Not often or widely recycled

- At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.

