Knife Sharpener

K057 v01: 08/09/21

Please read and retain these instructions for future reference






Knife and cutting board not included Colours may vary from image shown. NOT SUITABLE FOR CERAMIC KNIVES AND SCISSORS. **Dimensions** (H) 8 x (W) 5 x (L) 29cm

- SAFE AND COMFORTABLE TO USE WITH BIG HOLDING HANDLE AND ANTI-SLIP RUBBER COATED BASE
- EASY ADJUST KNOB ALLOWS SHARPENING AT A WIDE RANGE OF ANGLES (14-24 DEGREES)
- SCISSOR SLOT WITH UNIQUE PATENTED SPRING MECHANISM SLOT FOR A VARIETY OF SCISSOR AND SINGLE BLADE TOOLS
- SLOTS FOR BOTH COARSE AND FINE SHARPENING AND SPECIAL BLADE FOR SCISSORS

INSTRUCTIONS FOR USE:

Unpack the components carefully. Please check all parts have been removed from the packaging.

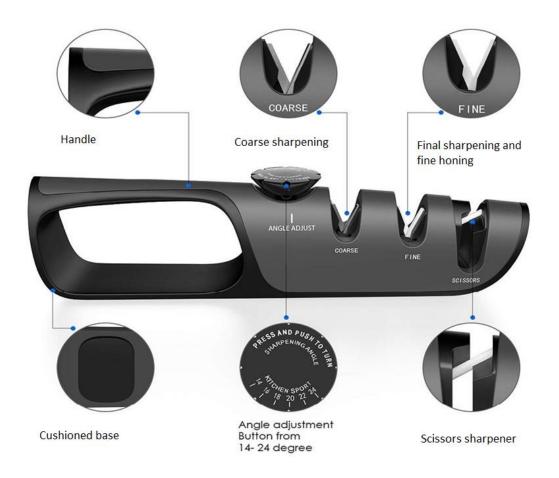

Knife Sharpener

K057

Please read and retain these instructions for future reference

Angles for different types of knives:

Fillet knives – 16 degrees per side Kitchen knives – 20 degrees per side Pocket knives – 20 degrees per side Hunting knives – 22 degrees per side Cleaver – 24 degrees per side

Scissor Sharpening



Sharpen scissor blades as shown. The scissor slot is open ended. Care must be taken when holding the scissors by the open blade.

CARE AND CLEANING INSTRUCTIONS

- Always wash knives after sharpening and before use.
- Clean the sharpener with a damp soft cloth.

DISPOSAL

- Coopers of Stortford use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons, packaging in accordance with your local recycling regulations.



 At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.

Calls cost 7 pence per minute plus your telephone company's network access charge The Enterprise Department Head Office: 11 Bridge Street Bishop's Stortford, CM23 2JU Tel: 0844 482 4400 Fax: 01279 756 595 www.coopersofstortford.co.uk