Long Handle Silicone Massage Bath Brush

K106 v01: 30/07/21

Please read and retain these instructions for future reference





Dimensions

45 x3.7 x6.5cm Weight: 360g

- VIBRATES TO GIVE A DEEPER CLEAN AND RELAXING MASSAGE
- GENTLY EXFOLIATES SKIN TO REFRESH AND REGENERATE NEW SKIN CELLS CLEANING
- WATER PROOF SO YOU CAN USE IN THE SHOWER
- SOFT SILICONE BRISTLES ON BRUSH HEAD
- 4 SPEEDS, SLOW VIBRATION/FAST VIBRATION/SLOW FLASHING VIBRATION/FAST FLASHING VIBRATION
- LONG HANDLED TO GIVE YOU AN EASIER CLEAN CLEAN HARD TO REACH AREAS LIKE YOUR BACK
- HANGABLE.

2x AA Batteries required (not included)


ASSEMBLY INSTRUCTIONS / INSTRUCTIONS FOR USE:

Unpack the components carefully. Please check all parts have been removed from the packaging.

SPECIFATION

Voltage	3V
Power	1.3W

Deep Cleansing Care

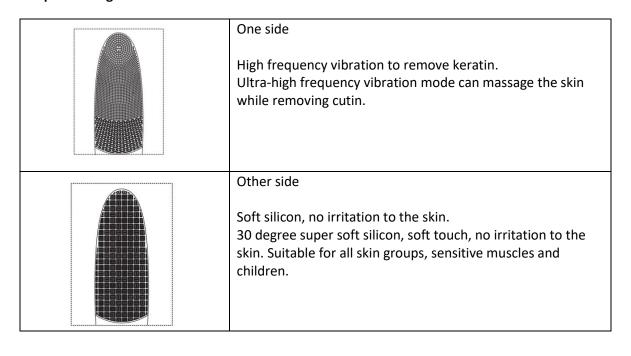


Please read and retain these instructions for future reference

v001: 30/07/21

BATH BRUSH FUNCTION

Cleans the skin and allows the skin to absorb more skin care nutrition and moisturization.

 Brush head design



SOFT BENDING 30 DEGREES

Silicon bath brushes have a super-large silicon cleaning surface. The flexible silicon can be bent by 30 degree head and feel as smooth as baby skin.

Wave multi-effect massage area gives a soothing massage, which can weaken the effect of false wrinkles in the neck and improve absorption of skin care products.


PRECAUTIONS FOR USE

- 1. Please read this manual before using the Massage Bath Brush. This brush is only suitable for the purposes specified in this manual.
- 2. If you suspect or determine that the product is damaged, do not use it.
- 3. Insert batteries before use. Store in a dry place.
- 4. When not in use, be sure to press the power button to turn off the power and store it.
- 5. For hygiene reasons, it is not recommended to share the cleansing device with others.
- 6. To prevent skin damage, it is recommended that the brush is used for a maximum of 10 minutes.
- 7. Do not place the product in direct sunlight to avoid contact with heat. Do not expose to boiling water, otherwise it may cause deformation.
- 8. Do not immerse the instrument in water, this may cause a malfunction.
- Do not use on patients suffering from dermatitis. If you suffer from allergic skin conditions, please consult your GP before using. If you experience skin irritation during use, stop using the brush and consult your GP.
- 10. Do not press on brush excessively to avoid irritation to the skin. If you suffer from skin allergies or irritations please adjust to low intensity.


Please read and retain these instructions for future reference

v001: 30/07/21

Parts

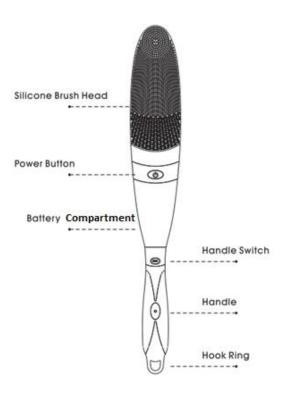

Inserting/Replacing the batteries (2x AA not included)

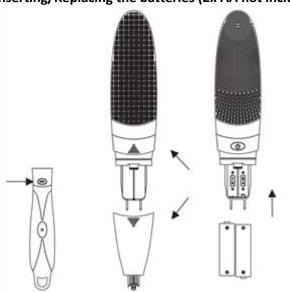

REMOVE HANDLE

The handle can be easily removed by pressing the OPEN button on the handle.

REPLACEMENT OF BATTERIES

- 1. Press the handle button and remove the handle.
- 1. Pull down and remove battery cover.
- 2. Observe battery polarity when inserting batteries.
- 3. When installing the battery cover, two arrows face one side.

BATTERY BUTTON FUNCTION

- 1 . Turn on (slow 75 %) + LED light
- 2 . Fast 100%
- 3 . Slow flash

The Enterprise Department Head Office: 11 Bridge Street Bishop's Stortford, CM23 2JU Tel: 0844 482 4400* Fax: 01279 756 595 www.coopersofstortford.co.uk

Please read and retain these instructions for future reference

v001: 30/07/21

- 4 . Fast flash
- 5. Shutdown

User Instructions

STEP.1 First wet your whole body with warm water.	000000000000000000000000000000000000000	STEP.2 Wet the brush head with warm water and apply appropriate amount. Apply bath or shower lotion to the silicon bath brush.
STEP.3 Brush the whole body.		Step.4 Repeat twice.
STEP.5 Rinse off all bubbles.	* *	STEP.6 Clean the bath brush and hang it up in a cool and dry place.

BATTERIES

- Keep batteries away from children and pets.
- Do not mix used and new batteries.
- Remove the batteries if left for long periods.
- Never dispose of batteries in a fire.
- Battery disposal, spent or expired batteries must be properly disposed of and recycled in compliance with local regulations. For detailed information, contact your local authority.
- Follow the battery manufacturer's safety, usage, and disposal instructions.

DISPOSAL

Coopers of Stortford use recyclable or recycled packaging where possible.



Please read and retain these instructions for future reference

v001: 30/07/21

- Please dispose of all packaging, paper, cartons, packaging in accordance with your local recycling regulations.
- Plastics, polybags this is made from the following recyclable plastic.

Code & Symbol	OTHER	
Type of Plastic	Silicone/ABS	
Commonly used for CD's, crisp packets, various flexible packaging, baby sunglass lenses		
Notes	Not often or widely recycled	

• At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.