

# Hair Dryer Styling Brush

K108 v001: 6/9/21

Please read and retain these instructions for future reference

vivadia



40mm Bristle  
Brush for larger waves

Comb vent brush

Curling Tong Barrel

Slim 32mm round  
brush  
Great for fringes

Concentrator



## Technical details

AC 220-240V, 50-60Hz 1000W

## Dimensions

(H) 5.76x (W) 23.02x (D) 5.76cm

Length of mains lead: 180cm

- USE 1 TOOL NOT 2 WHEN STYLING YOUR HAIR, GREAT IF YOU FIND USING A HAIRDRYER AND BRUSH IN EACH HAND CUMBERSOME
- USED BY PROFESSIONALS TO GIVE YOU SALON WORTHY HAIR IN YOUR OWN HOME
- DRIES AND STYLES – SMOOTHES AND STYLES
- RESURRECT HAIR BETWEEN WASHES
- POWERFUL BLOW DRYER GIVES YOUR ROOTS A BLAST TO FRESHEN UP INBETWEEN WASHES
- 3 SETTINGS, 1 COLD 2 X HOT
- FEATURES:
- HAIR DRYING TOOL WITH 5 TOOLS/HEADS



**Caution**  
Hot surface


CAUTION! THIS ELECTRICAL APPLIANCE'S EXTERNAL SURFACES WILL GET HOT IN NORMAL USE. ALLOW TO COOL BEFORE TOUCHING THE EXTERNAL SURFACES.

## ASSEMBLY INSTRUCTIONS / INSTRUCTIONS FOR USE:

Unpack the components carefully. Please check all parts have been removed from the packaging.

## SAFETY PRECAUTIONS:

**THE APPLIANCE'S HEATING PLATE BECOMES VERY HOT DURING USE. AVOID CONTACT WITH SKIN. MAKE SURE THAT THE SUPPLY CORD NEVER COMES INTO CONTACT WITH THE HOT PARTS OF THE APPLIANCE.**

- THE APPLIANCE MUST BE UNPLUGGED:
  - BEFORE CLEANING AND MAINTENANCE PROCEDURES.
  - IF IT IS NOT WORKING CORRECTLY.
  - AS SOON AS YOU HAVE FINISHED USING IT.
  - IF YOU LEAVE THE ROOM, EVEN IF ONLY FOR A SHORT WHILE.
- CAUTION: NEVER USE THE APPLIANCE IN THE BATHROOM, UNPLUG IT AFTER USE AS THE PRESENCE OF WATER NEARBY MAY POSE A DANGER EVEN WHEN THE APPLIANCE IS TURNED OFF.
-  THIS APPLIANCE MUST NEVER BE USED NEAR WATER (E.G. A FILLED WASH BASIN, BATHTUB OR SHOWER). DO NOT ALLOW THE APPLIANCE TO GET WET.
- **WARNING – DO NOT USE THIS APPLIANCE NEAR WATER IN BATHTUBS, BASINS OR OTHER VESSELS.**
- DO NOT PLACE HOT BRUSH ON SOFT MATERIAL E.G. CARPET, BEDDING, TOWELS, RUGS ETC.
- FOR ADDITIONAL PROTECTION, THE INSTALLATION OF A RESIDUAL CURRENT DEVICE (RCD) HAVING A RATED RESIDUAL OPERATING CURRENT NOT EXCEEDING 30MA IS ADVISABLE IN THE ELECTRICAL CIRCUIT SUPPLYING THE BATHROOM. ASK YOUR INSTALLER FOR ADVICE.

## WARNINGS AND SAFETY INSTRUCTIONS:

WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED:

- READ ALL INSTRUCTIONS BEFORE USE.
- FOR DOMESTIC INDOOR USE ONLY.
- DO NOT USE OUTDOORS OR FOR COMMERCIAL USE.
- BEFORE USE, CHECK THOROUGHLY FOR ANY DEFECTS AND DO NOT USE IF DEFECTS ARE FOUND. TAKE CARE NOT TO DROP THE APPLIANCE AS HEAVY IMPACTS MAY CAUSE INTERNAL DAMAGE.
- BEFORE CONNECTING THE APPLIANCE, CHECK IF THE VOLTAGE INDICATED ON THE BOTTOM OF THE APPLIANCE IS IN ACCORDANCE WITH THE MAINS VOLTAGE IN YOUR HOME.
- CHECK THE APPLIANCE AND POWER CABLE CAREFULLY FOR DAMAGE BEFORE EACH USE.
- THIS APPLIANCE CAN BE USED BY CHILDREN AGED FROM 8 YEARS AND ABOVE AND PERSONS WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES OR LACK OF EXPERIENCE AND KNOWLEDGE IF THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE IN A SAFE WAY AND UNDERSTAND THE HAZARDS INVOLVED. CHILDREN SHALL NOT PLAY WITH THE APPLIANCE. CLEANING AND USER MAINTENANCE SHALL NOT BE MADE BY CHILDREN WITHOUT SUPERVISION.
- CHILDREN OF LESS THAN 3 YEARS SHOULD BE KEPT AWAY UNLESS CONTINUOUSLY SUPERVISED.
- **SOME PARTS OF THIS PRODUCT CAN BECOME VERY HOT AND CAUSE BURNS. PARTICULAR ATTENTION HAS TO BE GIVEN WHERE CHILDREN AND VULNERABLE PEOPLE ARE PRESENT.**

- THE USE OF ANY ACCESSORY ATTACHMENTS NOT RECOMMENDED BY COOPERS OF STORTFORD MAY CAUSE INJURIES AND INVALIDATE ANY WARRANTY YOU MAY HAVE.
- DO NOT LET THE POWER CABLE HANG OVER THE EDGE OF A TABLE OR COUNTER, OR TOUCH HOT SURFACES.
- DO NOT PLACE ON OR NEAR HEAT SOURCES.
- DO NOT COVER THE ITEM IN ANY WAY WHEN IN USE AS THIS MAY CAUSE OVERHEATING.
- DO NOT USE THIS APPLIANCE FOR ANY OTHER USE THAN THE INTENDED USE IT IS DESIGNED FOR.
- TO PROTECT AGAINST ELECTRIC SHOCK, DO NOT IMMERSE POWER CABLE, PLUG OR APPLIANCE, IN WATER OR ANY OTHER LIQUID. DO NOT LEAVE THIS APPLIANCE UNATTENDED WHEN PLUGGED IN. RISK OF HEAT DAMAGE.
- UNPLUG FROM OUTLET WHEN NOT IN USE AND BEFORE CLEANING.
- DO NOT WRAP THE CORD AROUND THE APPLIANCE.
- DO NOT USE OUTDOORS OR OPERATE WHERE AEROSOL (SPRAY) PRODUCTS ARE BEING USED OR WHERE OXYGEN IS BEING ADMINISTERED.
- DO NOT USE AN EXTENSION CORD WITH THIS APPLIANCE.
- THE WORKING SURFACES OF THE HOT BRUSH ARE HOT WHEN IN USE. DO NOT LET EYES AND BARE SKIN TOUCH HEATED SURFACES.
- DO NOT OPERATE WITH A VOLTAGE CONVERTER.
- CLEAN THE APPLIANCE AFTER USE TO AVOID THE ACCUMULATION OF GREASE AND OTHER RESIDUES.
- DO NOT OPERATE ANY APPLIANCE WITH A DAMAGED POWER CABLE OR PLUG OR AFTER THE APPLIANCE MALFUNCTIONS, OR HAS BEEN DAMAGED IN ANY MANNER. WE RECOMMEND THAT THE POWER CABLE IS NOT KINKED OR STORED IN A TWISTED MANNER, AND THAT YOU REGULARLY CHECK ITS CONDITION.
- ANY REPAIRS MUST BE CONDUCTED BY A QUALIFIED ELECTRICIAN OR ELECTRICAL SERVICE AGENT.

## Parts

### Parts identification


- A. Main Body
- B. Attachment Release Button
- C. Air Outlet
- D. Hang Ring
- E. Air Inlet
- F. Power Switch/Speed Selector

0=OFF Position

C = COOL Position

1=Low: low speed

2=HIGH: high speed

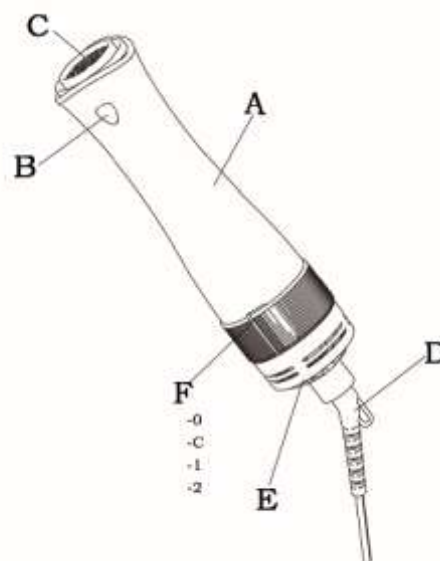

## HOW TO USE THE HAIR STYLING BRUSH

### Fixing the Attachment

- Align the attachment with the hair styler as shown. Ensure that the groove of the attachment and the hook of the body are aligned with each other. Insert the hair styler in the attachment until it clicks.
- Press the attachments release button and pull out the attachments to remove it.



### Blow Brush

- Take a small amount of hair and brush from the inside pulling it down gently.
- Use your free hand to support the motion.



## Maintaining the Hair Styler

Clean the air inlets and outlets to prevent blockages that may cause overheating.

The hair styler should be cleaned at least once a month.

To clean the hair styling brush, turn the power switch to [0] and unplug the hair styler from the power outlet.


- Clean the air outlet.
- To clean the air inlet, remove the filter by turning it anti clockwise direction and pull the filter towards your direction, Remove dust or hair.
- To re-attach the filter, ensure that the groove of the connector and the projection of the filter are in line. Twist to fit.

## PLUG WIRING (UK & IRELAND)

This appliance is fitted with a BS 1363 10-amp plug. If you have to replace the fuse, only those that are ASTA or BSI approved to BS1362 and with a rated current of 10-amperes should be used. If there is a fuse cover fitted, this cover must be re-fitted after changing the fuse. If the fuse cover is lost or damaged the plug must not be used. Spare fuse holders and fuses are available from electrical outlets. If the socket outlets in your home or office are not suitable for this product's plug, the plug must be removed and disposed of safely. Attempts to insert the plug into the wrong socket is likely to cause electric hazard. A replacement plug should be wired according to the following instructions:

## The cable

A mains electricity cable contains two or three inner wires. Each has a core of copper and an outer layer of flexible plastic. This product is double insulated; the wires in the cord set are colour coded in the following way:

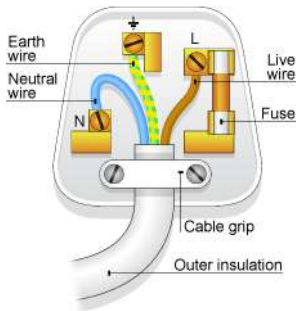

BLUE	NEUTRAL
BROWN	LIVE
GREEN & YELLOW	EARTH

The diagram shows the key features of a correctly wired three-pin mains plug.

## DISPOSAL

- Coopers of Stortford use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons, packaging in accordance with your local recycling regulations.
- Plastics, polybags – this is made from the following recyclable plastic.



Code & Symbol	 OTHER
Type of Plastic	ABS, Polyamide
Commonly used for	CD's, crisp packets, various flexible packaging, baby bottles, sunglass lenses
Notes	Not often or widely recycled

- At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.

