

Solar Bird Feeder Stake

K143 v001: 23/08/21

Please read and retain these instructions for future reference

GAINSBOROUGH
Garden & Wildlife

ALWAYS POSITION IN DIRECT SUNLIGHT



Dimensions

(H) 120 x (W) 43 x (D) 17cm


- VERSATILE BIRD FEEDER STAKE, COMES WITH A MESH BIRD FEEDING BASKET IDEAL FOR SEEDS AND NUTS AND A PLASTIC DISH FOR WATER, SITTING ON TOP OF THE STAKE IS A CLASSIC COACH STYLE SOLAR LANTERN THAT AUTOMATICALLY ILLUMINATES AT DUSK
- Solar panel 3pc 1V 40MA

Battery 1x AA 1.2v 200Mah, Ni-MH, Rechargeable


ASSEMBLY INSTRUCTIONS / INSTRUCTIONS FOR USE:

Unpack the components carefully. Please check all parts have been removed from the packaging.

Parts

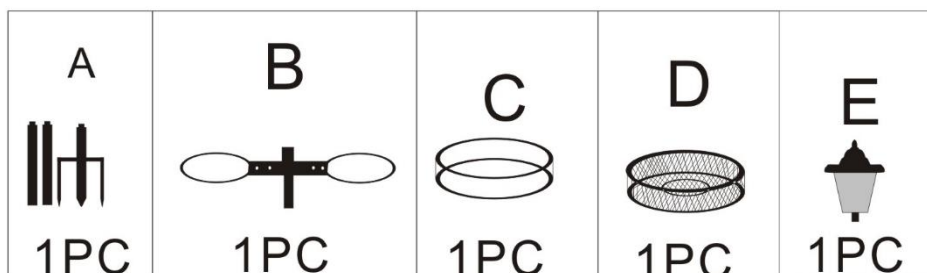


Assembly

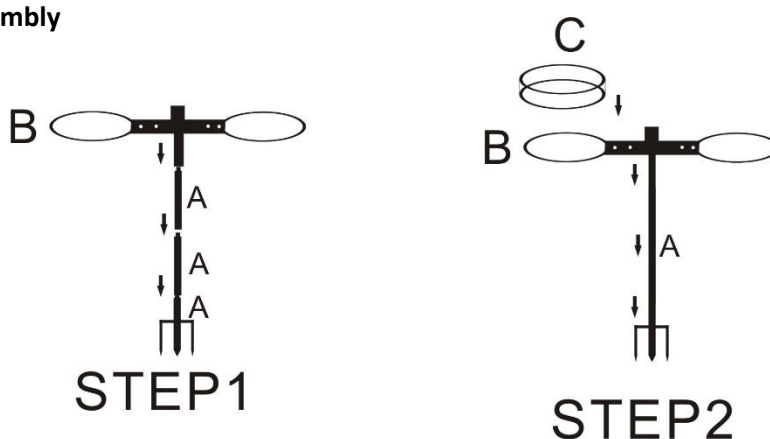

*Calls cost 7 pence per minute plus your telephone company's network access charge

The Enterprise Department
Head Office: 11 Bridge Street
Bishop's Stortford, CM23 2JU
Tel: 0844 482 4400*
Fax: 01279 756 595
www.coopersofstortford.co.uk

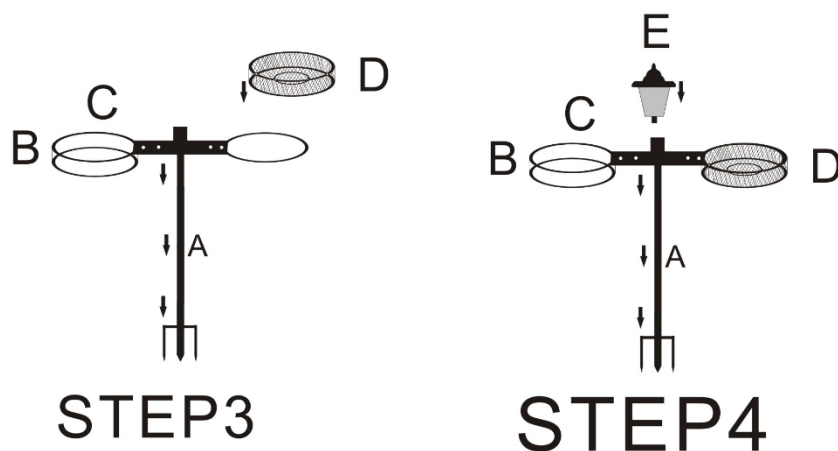

Before using first time

Remove the protective film from the solar panel.

CHARGING AND OPERATION:

1. There is an "on/off" switch at the back of the solar panel case. Twist the lamp shade and find the switch then push the switch to "on" position. Then replace the cover and position the light in a sunny location. Charge the solar product by placing it under direct sunlight for at least 8 hours.
2. The light will work automatically. It will charge under direct sunlight during the daytime and illuminate at night.
3. Leave the switch to "ON" position.

NOTE: In order to test the lights simply cover the solar panel with your hand and the light should turn on automatically.

Find an ideal Place for the Solar Light.

Place the solar light in an area where it will receive direct sunlight for at least 8 hours per day. The number of hours the light will illuminate is directly proportional to the hours of sunlight it receives. If the light is placed in a shaded area, it will not be able to fully charge and its illumination time will be limited. Do not place the light near other outdoor lighting like porch or streetlights. These may fool the sensor and keep the light from coming on, or cause it to turn off automatically

To easily insert stakes into the ground, it is recommended to wet the ground first. To avoid damaging garden stakes when inserting into the ground, select a spot in soft, rock-free soil. Insert the base of the stake first then gently insert the rest of the stake into the base. DO NOT push directly against the solar cell or the ornament housing containing the actual LED light.

Replacing Battery

If the light stops working after it has been used for a long time (about 18 months), the battery may be beyond its lifespan. Please open the cover of the battery compartment to replace the rechargeable battery.

Step 1: Unscrew the battery compartment cover by using a Phillips head screwdriver (not included).

Step 2: Remove the exhausted battery and install 1x new AA rechargeable battery according to the +/- polarity as beside image. Open the compartment carefully and ensure that wire inside the battery terminals is not damaged.

Step 3: Replace battery compartment cover, screw it back into position and make sure is properly sealed.

Step 4: Charge the new battery for 8 hours.

Care and Maintenance Recommendations

1. Clean solar panel with a soft sponge every couple of weeks.
2. Make sure all connectors are still tight and no water getting in.


BATTERIES

- Keep batteries away from children and pets.
- Do not mix used and new batteries.
- Remove the batteries if left for long periods.
- Never dispose of batteries in a fire.
- Battery disposal, spent or expired batteries must be properly disposed of and recycled in compliance with local regulations. For detailed information, contact your local authority.
- Follow the battery manufacturer's safety, usage, and disposal instructions.

DISPOSAL

- Coopers of Stortford use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons, packaging in accordance with your local recycling regulations.
- Plastics, polybags – this is made from the following recyclable plastic.



Code & Symbol	
Type of Plastic	Polypropylene
Commonly used for	Microwaveable food containers, yoghurt pots, butter tubs, disposable plates and cups
Notes	Commonly recycled and collected from household recycling bins (packaging tape itself not recyclable but does not interfere with cardboard)

- At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.

