 


20V CORDLESS GRASS TRIMMER & EDGER LAWN CUTTER

K200 v01: 13/09/21

Please read and retain these instructions for future reference

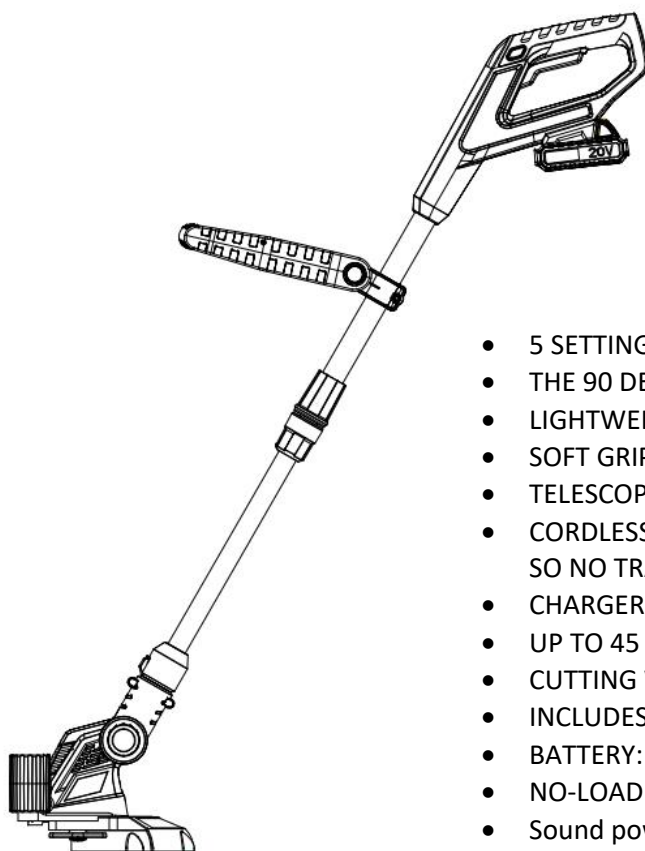

- 5 SETTING PIVOTING HEAD AND PLANT PROTECTOR
- THE 90 DEGREE PIVOTING HEAD
- LIGHTWEIGHT WEIGHING LESS THAN 3KG
- SOFT GRIP ERGONOMIC HANDLE
- TELESCOPIC HANDLE EXPANDING FROM 94 TO 126 CM
- CORDLESS POWERED BY A 20V 2.0AH LITHIUM BATTERY SO NO TRAILING CABLES
- CHARGER INCLUDED AND CHARGING TIME 4 HOURS
- UP TO 45 MIN RUN TIME
- CUTTING WIDTH 25CM
- INCLUDES 20 EXTRA BLADES
- BATTERY: 20V d.c., 2.0AH/ Lithium Ion – 2000mAh
- NO-LOAD SPEED: 8500rpm
- Sound power level: 92 dB(A)

USE: THIS ITEM REQUIRES TWO HANDS TO USE SAFELY.

Please read this instruction manual thoroughly before starting and ensure you are familiar with the operation of your new 20V Cordless Grass Trimmer & Edger Cutter.

RECOMMENDED FOR PERSONS OVER 18 YEARS OF AGE.

ALWAYS USE HEAD, EYE AND EAR PROTECTION EQUIPMENT AND SAFETY SHOES AND HAND GLOVES

THESE INSTRUCTIONS SHOULD BE READ IN CONJUNCTION WITH THE INSTRUCTION MANUAL FOR THE BATTERY PACK AND CHARGER.

PRODUCT SPECIFICATION

Model	K200/57288
Rated Voltage	20V DC
No Load Speed	8500 rpm
Cutting Device	Trim fast blade
Cutting Swath Diameter	10"/250mm
Weight (with battery pack)	2.0kg
Guaranteed sound power level	92 dB(A)
Battery Pack	Lithium Ion – 2000mAh

20V CORDLESS GRASS TRIMMER & EDGER LAWN CUTTER k200 Instructions for Use

Please read and retain these instructions for future reference

v001: 13/09/21

SAFETY INSTRUCTIONS

---General safety instructions



WARNING! Read all safety warnings and all instructions.

Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

Save all warnings and instructions for future reference.

The term "power tool" in the warnings refers to your corded power tool or battery pack-operated power tool.

- This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Only use the product in the manner and for the functions described in these instructions.

Work area safety

- Keep work area clean and well lit. Cluttered or dark areas invite accidents
- Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust. Power tools create sparks which may ignite the dust or fumes.
- Keep children and bystanders away while operating a power tool. Distractions can cause you to lose control.

Electrical safety

- Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed power tools. Unmodified plugs and matching outlets will reduce risk of electric shock.
- Do not expose power tools to rain or wet conditions. Water entering a power tool will increase the risk of electric shock.
- Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increase the risk of electric shock.
- When operating a power tool outdoors, use an extension cord suitable for outdoor use. Use of a cord suitable for outdoor use reduces the risk of electric shock.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- It is recommended that appliances should be supplied via a residual current device (RCD) with a tripping current of not more than 30mA.

*Calls cost 7 pence per minute plus your telephone company's network access charge

The Enterprise Department
Head Office: 11 Bridge Street
Bishop's Stortford, CM23 2JU
Tel: 0844 482 4400*
Fax: 01279 756 595
www.coopersofstortford.co.uk

20V CORDLESS GRASS TRIMMER & EDGER LAWN CUTTER k200 Instructions for Use

Please read and retain these instructions for future reference

v001: 13/09/21

Personal safety

- Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating power tools may result in serious personal injury.
- Use personal protective equipment. Always wear eye protection. Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.
- Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool. Carrying power tools with your finger on the switch or energizing power tools that have the switch on invites accidents.
- Remove any adjusting key or wrench before turning the power tool on. A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
- Do not overreach. Keep proper footing and balance at all times. This enables better control of the power tool in unexpected situations.
- Dress properly. Do not wear loose clothing or jewellery. Keep your hair, clothing and gloves away from moving parts. Loose clothes, jewellery or long hair can be caught in moving parts.

Power tool use and care

- **Do not force the power tool.** Use the correct power tool for your application. The correct power tool will do the job better and safer at the rate for which it was designed.
- **Do not use the power tool if the switch does not turn it on and off.** Any power tool that cannot be controlled with the switch is dangerous and must be repaired
- **Disconnect the plug from the power source and/or the battery pack from the power tool before making any adjustments, changing accessories, or storing power tools.** Such preventive safety measures reduce the risk of starting the power tool accidentally.
- **Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool.** Power tools are dangerous in the hands of untrained users.
- Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools.
- **Keep cutting parts sharp and clean.** Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.

*Calls cost 7 pence per minute plus your telephone company's network access charge

The Enterprise Department
Head Office: 11 Bridge Street
Bishop's Stortford, CM23 2JU
Tel: 0844 482 4400*
Fax: 01279 756 595
www.coopersofstortford.co.uk

20V CORDLESS GRASS TRIMMER & EDGER LAWN CUTTER k200 Instructions for Use

Please read and retain these instructions for future reference

v001: 13/09/21

- Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed. Use of the power tool for operations different from those intended could result in a hazardous situation.

CORDLESS GRASS TRIMMER SAFETY WARNINGS

1. **Keep all parts of the body away from the cutting blade. Do not remove cut material or hold material to be cut when blades are moving. Make sure the product is switched off when clearing jammed material.** A moment of inattention while operating the product may result in serious personal injury.
2. **Carry the product by the handle with the cutter blade stopped. When transporting or storing the product always fit the cutting device cover.** Proper handling of the product will reduce possible personal injury from the cutter blades.
3. **Hold the product by insulated gripping surfaces only, because the cutter blade may contact hidden wiring of its own cord.** Cutter blades contacting a “live” wire may make exposed metal parts of the product “live” and could give the operator an electric shock.
4. Check the hedge for foreign objects before operation, e.g. wire fences.
5. Hold the product properly, e.g. with both hands if two handles are provided. Loss of control can cause personal injury.

ADDITIONAL SAFETY WARNINGS

IMPORTANT. Read carefully before use. Keep for future reference

Training

- Read the instructions carefully. Be familiar with the controls and the proper use of the appliance.
- Never allow children to use the product.
- Never allow people unfamiliar with these instructions to use the appliance. Local regulations may restrict the age of the operator.
- Never operate the appliance while people, especially children, or pets are nearby.
- The operator or user is responsible for accidents or hazards occurring to other people or their property.

Preparation

- Wear safety goggles and ear muffs while operating.
- Always wear substantial footwear and long trousers. Do not operate the equipment when barefoot or wearing open sandals.
- Always wear suitable working clothes while operating, which allows freedom of movement.
- Never operate the appliance which is damaged, incomplete or changed without approval of the manufacturer.

Operation

- Disconnect the battery from the product:
 - whenever you leave the product,
 - before clearing a blockage,
 - before checking, cleaning or working on the product,
 - if the product starts to vibrate abnormally.
- Operate the product only in daylight or in good artificial light.
- Do not overreach and keep your balance at all times.
- Always be sure of your footing on slopes.

*Calls cost 7 pence per minute plus your telephone company's network access charge

The Enterprise Department
Head Office: 11 Bridge Street
Bishop's Stortford, CM23 2JU
Tel: 0844 482 4400*
Fax: 01279 756 595
www.coopersofstortford.co.uk

20V CORDLESS GRASS TRIMMER & EDGER LAWN CUTTER K200 Instructions for Use

Please read and retain these instructions for future reference

v001: 13/09/21

- Walk, never run.
- Keep all ventilation openings clear of debris.
- Never blow debris in the direction of bystanders.

Maintenance and storage

1. Keep all nuts, bolts and screws tight to be sure the product is in safe working condition.
2. Replace worn or damaged parts.
3. Store the product only in a dry place.

Residual risks

Even if you are operating this product in accordance with the provisions, residual risks will always still remain. The following dangers can arise in connection with the structure and design of this product:

- 1) Health defects resulting from vibration emission if the product is being used over longer period of time or not adequately managed and properly maintained.
- 2) Injuries and damage to property due to broken accessories or hidden objects that are thrown in the process of using the Grass Trimmer.
- 3) Injuries and damage to property due to thrown and fallen objects.

WARNING! This product produces an electromagnetic field during operation!

This field may under some circumstances interfere with active or passive medical implants!

To reduce the risk of serious or fatal injury, we recommend persons with medical implants to consult their physician and the medical implant manufacturer before operating this product!

Vibration and noise reduction

To reduce the impact of noise and vibration emission, limit the time of operation, use low-vibration and low-noise operating modes as well as wear personal protective equipment.

Emergency

Familiarize yourself with the use of this product by means of this instruction manual. Memorize the safety directions and follow them to the letter. This will help to prevent risks and hazards.

- 1) Always be alert when using this product, so that you can recognize and handle risks early. Fast intervention can prevent serious injury and damage to property.
- 2) Stop the motor and disconnect the battery from the product if there is any malfunction. Have the product checked by a qualified professional and repaired, if necessary, before you put it into operation again.

Safety Warnings and Instructions: Batteries

- Do not disassemble or open, drop (mechanical abuse), crush, bend or deform, puncture, or shred.
- Do not modify or remanufacture, attempt to insert foreign objects into the battery, immerse or expose to water or other liquids, or expose to fire, excessive heat including soldering irons, or put in microwave oven.
- Only use the battery/tool with a charging system specified by the manufacturer/supplier.
- Do not short-circuit a battery or allow metallic or conductive objects to contact both battery terminals simultaneously.
- Dispose of used batteries promptly according to the manufacturer/supplier's instructions.
- Improper battery/tool use may result in a fire, explosion, or other hazard.
- Battery/tool usage by children should be supervised.

*Calls cost 7 pence per minute plus your telephone company's network access charge

The Enterprise Department
Head Office: 11 Bridge Street
Bishop's Stortford, CM23 2JU
Tel: 0844 482 4400*
Fax: 01279 756 595
www.coopersofstortford.co.uk

20V CORDLESS GRASS TRIMMER & EDGER LAWN CUTTER k200 Instructions for Use

Please read and retain these instructions for future reference

v001: 13/09/21

Safety Warnings and Instructions: Charging

1. This manual contains important safety and operating instructions.
2. Before using battery charger, read all instructions and cautionary warnings on battery charger and product using battery. **CAUTION:** To reduce the risk of injury, use this charger only with this product. Batteries in other products may burst causing personal injury or damage.
3. Do not expose charger to rain or snow.
4. Use of an attachment not recommended may result in a risk of fire, electric shock, or injury to persons.
5. To reduce risk of damage to electric plug and cord, pull by plug rather than cord when disconnecting charger.
6. Make sure cord is located so that it will not be stepped on, tripped over, or otherwise subjected to damage or stress.
7. An extension cord should not be used unless absolutely necessary. Use of improper extension cord could result in a risk of fire, electric shock or electrocution.
8. Use only the supplied charger when charging your tool. The use of any other charger could damage the tool or create a hazardous condition.
9. Use only one charger when charging.
10. Do not attempt to open the charger. There are no customer serviceable parts inside.
11. DO NOT incinerate the tool or batteries even if they are severely damaged or completely worn out. The batteries can explode in a fire. Toxic fumes and materials are created when lithium ion battery packs are burned.
12. Do not charge or use battery in explosive atmospheres, such as in the presence of flammable liquids, gases or dust. Inserting or removing the battery from the charger may ignite the dust or fumes.
13. If battery contents come into contact with the skin, immediately wash area with mild soap and water. If battery liquid gets into the eye, rinse water over the open eye for three minutes or until irritation ceases. If medical attention is needed, the battery electrolyte is composed of a mixture of liquid organic carbonates and lithium salts.

WARNING: Burn hazard. Battery liquid may be flammable if exposed to spark or flame.

*Calls cost 7 pence per minute plus your
telephone company's network access charge









The Enterprise Department
Head Office: 11 Bridge Street
Bishop's Stortford, CM23 2JU
Tel: 0844 482 4400*
Fax: 01279 756 595
www.coopersofstortford.co.uk

20V CORDLESS GRASS TRIMMER & EDGER LAWN CUTTER K200 Instructions for Use

Please read and retain these instructions for future reference

v001: 13/09/21

SYMBOLS

	Warning, safety alert.
	Read and follow all safety precautions in the owner's manual.
	Protective goggles/visor, protective helmet & hearing protection.
	Do not expose to rain.
	Beware of thrown or flying objects to bystanders. Keep bystanders a safe distance away from the machine.
	Thrown objects can ricochet and result in personal injury or property damage. Wear protective clothing and boots.
	Beware of falling objects. Keep bystanders away.
	Warning! Do not touch the rotating blade under the machine while it is running. Always switch the power OFF and unplug from the mains before carrying out any maintenance or cleaning.

CHARGING PROCEDURE

IMPORTANT: The battery pack is not fully charged at the factory. Before attempting to charge them, thoroughly read all of the safety instructions.

*Calls cost 7 pence per minute plus your telephone company's network access charge

 
The Enterprise Department
Head Office: 11 Bridge Street
Bishop's Stortford, CM23 2JU
Tel: 0844 482 4400*
Fax: 01279 756 595
www.coopersofstortford.co.uk

20V CORDLESS GRASS TRIMMER & EDGER LAWN CUTTER k200 Instructions for Use

Please read and retain these instructions for future reference

v001: 13/09/21

- (1) To assure that the charger you use is applicable to the battery pack.
- (2) Plug the charger plug into the charging hole of the battery pack.
- (3) Plug the charger into any suitable standard outlet.
- (4) Let the battery pack charge initially for the green light is twinkled. If the power lights are all lighting, the battery pack is fully charged.

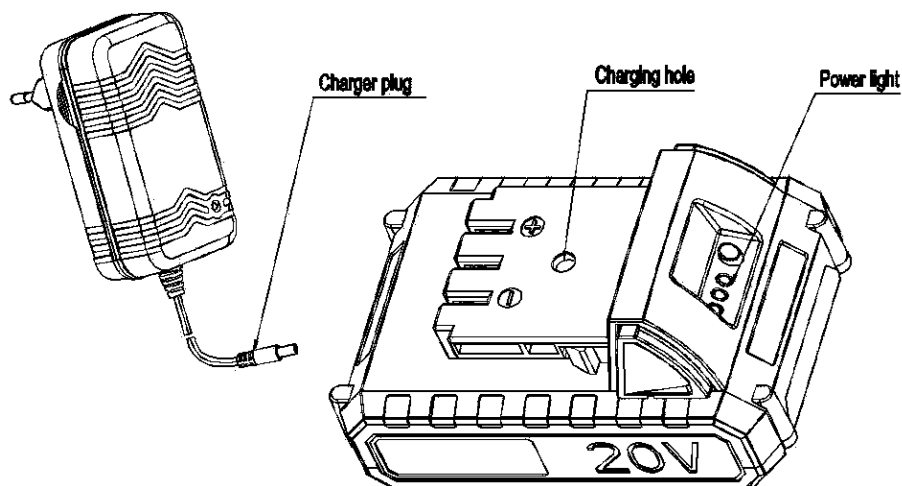

Recharge discharged batteries as soon as possible after use or battery life may be greatly diminished. For longest battery life, do not discharge batteries fully.

It is recommended that the batteries be recharged after each use.

WARNING: Fire Hazard. When unplug the output plug from the charging hole, be sure to unplug the charger from the outlet first, then disconnect the charger output plug from the charging hole.

Important Charging Notes

1. Your tool was sent from the factory in an uncharged condition. Before attempting to use it, it must be charged.
2. CAUTION: To reduce the risk of damage to the batteries, NEVER charge them in an air temperature below 4.5°C or above 40.5°C. Also, NEVER charge them if the battery temperature is below 4.5°C or above 40.5°C. Longest life and best performance occurs when batteries are charged with an air temperature of approximately 24°C. NOTE: The tool will not charge if the tool temperature is below approximately 0°C or above 45°C.
3. While charging, the charger may hum and become warm to touch. This is a normal phenomenon and does not indicate a problem.
4. If the batteries do not charge properly—(1) Check current at receptacle by plugging in a lamp or other appliance. (2) Check to see if receptacle is connected to a light switch which turns power off when you turn out the lights. (3) Move charger and tool to a surrounding air temperature of 4.5°C to +40.5°C. (4) If the receptacle and temperature are OK, and you do not get proper charging, take or send the tool and charger to your local service centre.
5. The tool should be recharged when it fails to produce sufficient power on jobs which were easily done previously. Battery life may be greatly diminished if batteries are discharged deeply. DO NOT CONTINUE using product with its batteries in a depleted condition. Recharge discharged batteries promptly.
6. To maximize battery life:
 - a. Do not fully discharge batteries.

*Calls cost 7 pence per minute plus your telephone company's network access charge

The Enterprise Department
Head Office: 11 Bridge Street
Bishop's Stortford, CM23 2JU
Tel: 0844 482 4400*
Fax: 01279 756 595
www.coopersofstortford.co.uk

 
20V CORDLESS GRASS TRIMMER & EDGER LAWN CUTTER K200 Instructions for Use

Please read and retain these instructions for future reference

v001: 13/09/21

- b. Fully recharge batteries after each use.
- c. Store tool in a location where the surrounding air temperature is approximately 4.5°C - 24°C.
- d. Disconnect charger from tool after charge is complete. **WARNING: Fire Hazard.** When disconnecting the charger from the tool, be sure to unplug the charger from the outlet first, then disconnect the charger cord from the tool.

Parts

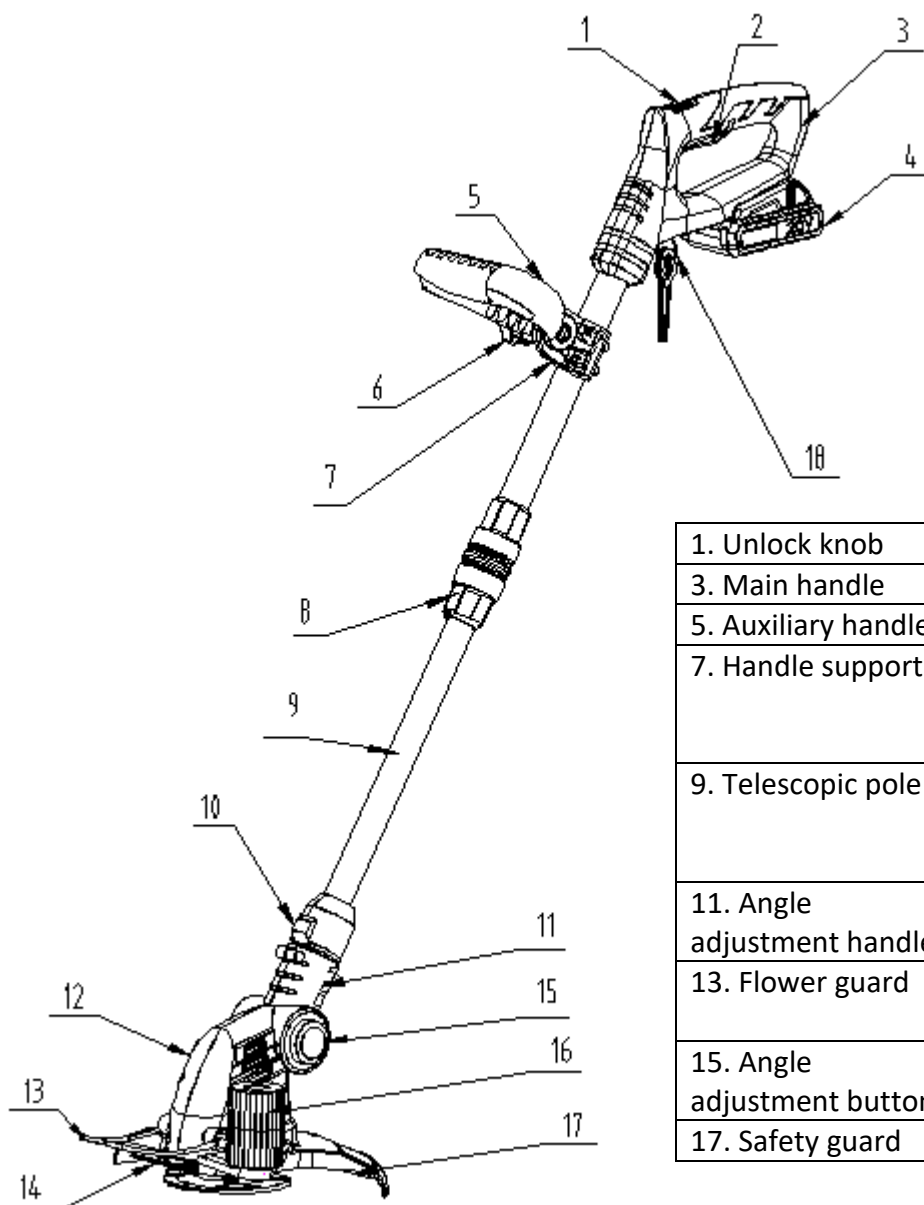

1. Unlock knob	2. Switch handle
3. Main handle	4. Battery pack
5. Auxiliary handle	6. Handle lock nut
7. Handle support	8. Locking sleeve (length adjustment)
9. Telescopic pole	10. Lock sleeve and edging function button
11. Angle adjustment handle	12. Trimmer head
13. Flower guard	14. Cutting device (blade)
15. Angle adjustment button	16. Edging function wheel
17. Safety guard	18. Blade pendant

*Calls cost 7 pence per minute plus your telephone company's network access charge

The Enterprise Department
Head Office: 11 Bridge Street
Bishop's Stortford, CM23 2JU
Tel: 0844 482 4400*
Fax: 01279 756 595
www.coopersofstortford.co.uk

20V CORDLESS GRASS TRIMMER & EDGER LAWN CUTTER k200 Instructions for Use

Please read and retain these instructions for future reference

v001: 13/09/21

PARTS

- Grass trimmer
- Battery pack
- Charger
- Safety guard

ASSEMBLY



Warning! Remove the battery pack before cleaning or maintaining the tool, fitting the plant guard before making any adjustments to the tool, especially around the string head. Remove battery pack before transporting or storing the tool.

Attaching or Replacing Blade

Place the wider eyelet of cutting blade over the metal stud and firmly pull until blade is completely seated on stud.

Remove in opposite order

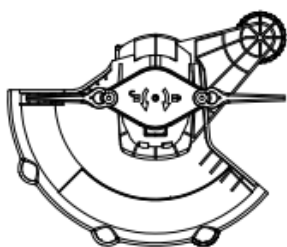 


Fig.1

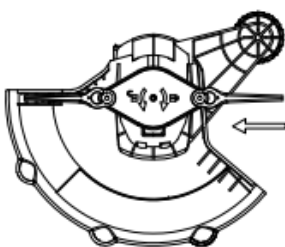 


Fig.2

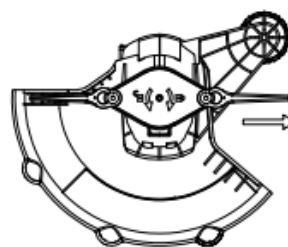 


Fig.3

Fitting the guard

The guard is an essential part of the tool and must ALWAYS be used. Otherwise damage to the trimmer and injury to the operator may occur. The guard is not fitted to the trimmer when it is delivered to you to avoid damage in transit.

Align the guard with the trimmer head as shown (Fig.4)

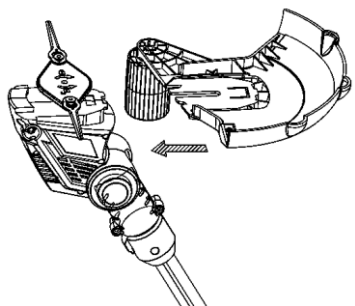 


Fig.4

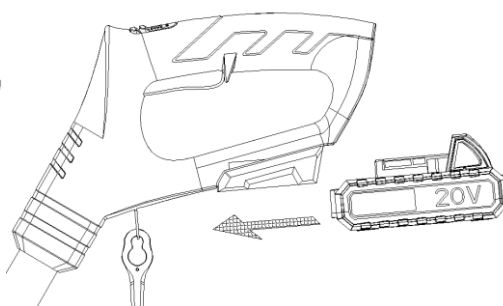 


Fig.5

20V CORDLESS GRASS TRIMMER & EDGER LAWN CUTTER K200 Instructions for Use

Please read and retain these instructions for future reference

v001: 13/09/21

Fitting and removing the battery



The battery should always be removed whenever you are not using the tool and especially when you are adjusting or transporting the tool to avoid accidental operation.

To insert the battery, slide it into the grass trimmer until it latches into place. Check that the battery is securely locked into place (Fig.5)

To remove the battery, press and hold the button on the two side of the battery pack and slide the battery away from the trimmer.

OPERATION

BEFORE OPERATING THIS TOOL, ENSURE THAT THE GUARD IS FITTED TO THE HEAD OF THE MACHINE.

NEVER USE THE MACHINE WITHOUT THE GUARD



Starting/Stopping the trimmer:

To switch the trimmer on, first push forward the unlock knob (1) then hold the switch handle (2), the trimmer is now running. You can release the unlock knob.

To switch the trimmer off, release the switch handle. Be aware that the blade will continue to rotate for a short period.

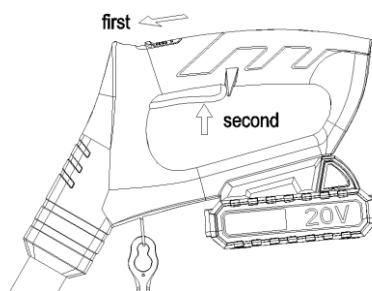 


Fig.6

Adjusting Auxiliary handle (Fig.7,8 and 9)

The auxiliary handle (5) is height and angle adjustable. To adjust the handle, first release the handle lock nut on the side of the handle. Rotate the auxiliary handle to desired position and slide the handle support to the desired height, clamp (6) in position. Tighten the lock nut.



Fig.7

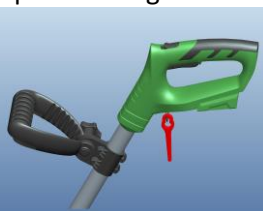 


Fig.8



Fig.9

Setting the trimmer head angle (Fig.10,11 and 12)

The angle of trimmer head can be set to different working positions.

Press the angle adjustment button (15) with one hand and rotate the trimmer head (12) to the required position. Release the button and the head will lock into place. There are 3 preset lock positions

20V CORDLESS GRASS TRIMMER & EDGER LAWN CUTTER k200 Instructions for Use

Please read and retain these instructions for future reference

v001: 13/09/21

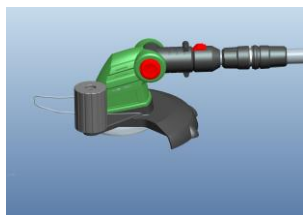 


Fig.10

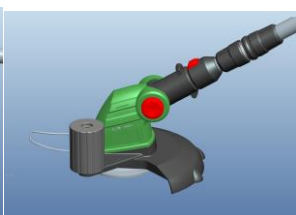 


Fig.11



Fig.12

Setting the handle length

Turn the lock sleeve (8) towards the 'unlock' symbol about half a turn. Slide the lower part of the trimmer up or down to the desired length. Lock it in position by turning the lock sleeve towards the 'lock' symbol.

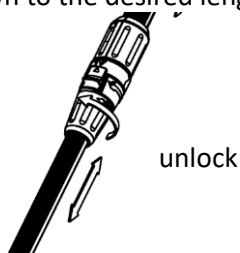 


Fig.13

Trimming Mode

There are 2 working positions, for normal trimming (shown in Fig.14) and for edging (shown in Fig.15).



Fig.14



Fig.15

To use the trimmer in edging mode, as shown in Fig.16. Slide the lock sleeve and edging function button (10) and rotate the lower part of the trimmer 90° until the button aligns with the angle adjustment handle (11). Release the locking knob. Then set the trimmer head angle as shown in FIG.10. The trimmer will lock into edging mode (Fig.15). Return to normal trimming mode as shown in Fig.17.

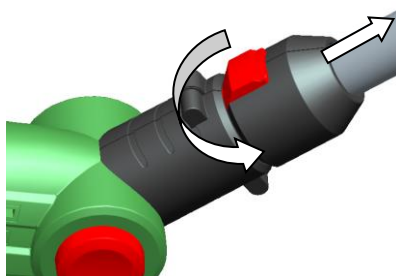 


Fig.16

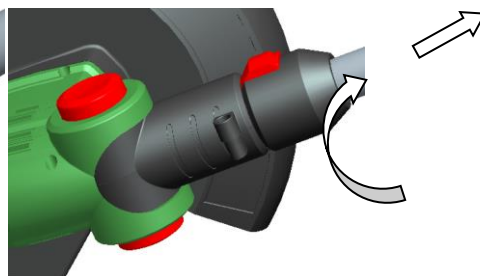 


Fig.17

*Calls cost 7 pence per minute plus your telephone company's network access charge

The Enterprise Department
Head Office: 11 Bridge Street
Bishop's Stortford, CM23 2JU
Tel: 0844 482 4400*
Fax: 01279 756 595
www.coopersofstortford.co.uk

20V CORDLESS GRASS TRIMMER & EDGER LAWN CUTTER k200 Instructions for Use

Please read and retain these instructions for future reference

v001: 13/09/21

Maintenance, storage and disposal

1. Disconnect the battery pack from the machine before carrying out maintenance or cleaning work.
2. When not in use store the machine out of the reach of children.
3. To clean the tool, remove battery pack and use only mild soap and a damp cloth to clean the tool. Do not immerse tool in water or spray with a hose. Do not allow any liquid to get inside it. Do not clean with a pressure washer.
4. Inspect and maintain the machine regularly. Have the machine repaired only by an authorized repairer.
5. The battery must be removed from the appliance before it is scrapped.
6. The appliance must be disconnected from the supply mains when removing the battery.
7. The battery is to be disposed of safely.

TROUBLESHOOTING:

The following chart lists problem symptoms, possible causes and corrective action, if your electric grass trimmer does not operate properly. If these do not identify and correct the problem, contact a qualified repair centre.

WARNING! Always switch the product off, disconnect it from power supply and let the product cool down before performing inspection, maintenance and cleaning work

Problem	Possible cause	Solution
Grass trimmer does not operate	1.1. No power 1.2. Mains socket faulty 1.3. Extension cord damaged 1.4. Fuse faulty	1.1. Check power 1.2. Check other socket, replace 1.3. Check cord, replace 1.4. Replace fuse
Grass trimmer operates intermittently	2.1. Extension cord damaged 2.2. Internal wiring damaged	2.1. Check cord, replace 2.2. Contact Service Agent
Grass trimmer labours	3. Grass too high	3. Cut in stages

BATTERIES

- Keep batteries away from children and pets.
- Do not mix used and new batteries.
- Remove the batteries if left for long periods.
- Never dispose of batteries in a fire.
- Battery disposal, spent or expired batteries must be properly disposed of and recycled in compliance with local regulations. For detailed information, contact your local authority.
- Follow the battery manufacturer's safety, usage, and disposal instructions.

PLUG WIRING (UK & IRELAND)

This appliance is supplied with a mains adaptor/charger with BS1363 plug pins.

DO NOT use If the socket outlets in your home or office are not suitable for this product's mains adaptor/charger plug pins. Attempts to insert the mains adaptor/charger into the wrong socket is likely to cause electric hazard or damage.

DO NOT use with any other mains transformer/charger than the one that is supplied with this product.

*Calls cost 7 pence per minute plus your telephone company's network access charge

The Enterprise Department
Head Office: 11 Bridge Street
Bishop's Stortford, CM23 2JU
Tel: 0844 482 4400*
Fax: 01279 756 595
www.coopersofstortford.co.uk

20V CORDLESS GRASS TRIMMER & EDGER LAWN CUTTER K200 Instructions for Use


Please read and retain these instructions for future reference

v001: 13/09/21

DISPOSAL

- Coopers of Stortford use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons, packaging in accordance with your local recycling regulations.
- Plastics, polybags – this is made from the following recyclable plastic.



Code & Symbol	 PETE
Type of Plastic	Polyethylene Terephthalate
Commonly used for	Soft drink and juice bottles, shampoo bottles, meat trays, fruit punnets
Notes	Commonly recycled and collected from household recycling bins. Check with your local authority

- At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.

*Calls cost 7 pence per minute plus your telephone company's network access charge

The Enterprise Department
Head Office: 11 Bridge Street
Bishop's Stortford, CM23 2JU
Tel: 0844 482 4400*
Fax: 01279 756 595
www.coopersofstortford.co.uk

20V CORDLESS GRASS TRIMMER & EDGER LAWN CUTTER K200 Instructions for Use

Please read and retain these instructions for future reference

v001: 13/09/21

DECLARATION OF CONFORMITY

Coopers of Stortford hereby declare under our sole responsibility, that the product named below has been designed to comply with all relevant sections of the below referenced standards and directives: -

Description & item Number: 20V Cordless Grass Trimmer & Edger Lawn Cutter
Model No: K200 (ASYGT0425020)

Conforms to the following: -

- Machinery Directive 2006/42/EC & Supply of Machinery (Safety) Regulations 2008
- Low Voltage Directive 2014/35/EU & The Electrical Equipment (Safety) Regulations 2016
- EMC Directive 2014/30/EU & Electromagnetic Compatibility Regulations 2016
- Noise Directive 2000/14/EC & 2005/88/EC
- Guaranteed sound power level: 92 dBA
- RoHS Directive 2011/65/EU & 2015/863/EU & Restriction of hazardous substances (RoHS) Regulations.

The Test reports for this item are available from:

Coopers of Stortford, 11 Bridge Street, Bishop's Stortford, Hertfordshire, CM23 2JU



*Calls cost 7 pence per minute plus your
telephone company's network access charge

The Enterprise Department
Head Office: 11 Bridge Street
Bishop's Stortford, CM23 2JU
Tel: 0844 482 4400*
Fax: 01279 756 595
www.coopersofstortford.co.uk