

Adjustable USB Fan with Night Light

K313 v001: 29/09/21

Please read and retain these instructions for future reference

BERGSTRÖM



Dimensions

(H) 21 x (W) 21 x (D) 7.5cm

Input: 5V-0.8A

Output: 5V-1A


Max Power: 4W

- USB OUTPUT
- THREE SPEEDS, WITH NIGHT LIGHT, ADJUSTABLE ANGLE
- MATERIAL: ABS and PVC
- MOTOR: 9V FULL COPPER BRUSHLESS MOTOR / 7 INCH FAN BLADE
- N.W.:460G
- 1 X 110CM MICRO USB CABLE (included)
- 2 X 2000 MAH 18650 BATTERY (included)

ASSEMBLY INSTRUCTIONS / INSTRUCTIONS FOR USE:

Unpack the components carefully. Please check all parts have been removed from the packaging.

Parts

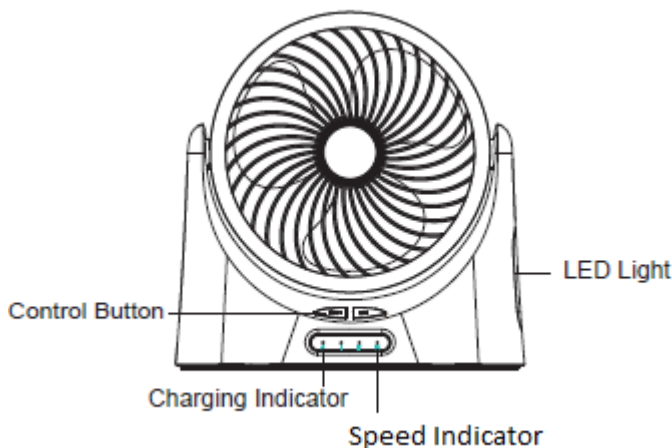

Instructions for use

- Press ON once to activate speed setting 1. Number 1 will light up. Press it again to set to speed setting 2 and number 2 will light up. Press a third time to activate speed setting 3. Number 3 will light up. Press ON one more time to turn the fan off.
- You can turn off the fan directly clicking the OFF button.
- Long press ON will turn on the LED light. To turn off LED light long press ON again or short press OFF.
- If the battery is low, all indicator lights will flash.
- The charging indicator will flash when the fan is charging. It will keep lighting up once fully charged.

Note:


- This fan needs 5V DC input. Please use USB charger or Power Bank to charge this fan. Please do not use higher or lower voltage chargers.
- When the fan is working, please do not put your fingers inside the fan blades to avoid risk of injury.
- Please do not stop the blades from turning by sticking objects into the blades as this will damage the motor.
- Remove the batteries if the fan is not used for long periods.
- Children should be supervised at all times when using the fan.
- Do not leave the fan unattended.

Battery replacement

To load the battery:

Insert batteries as shown observing correct polarity.

To remove the batteries reverse procedure.

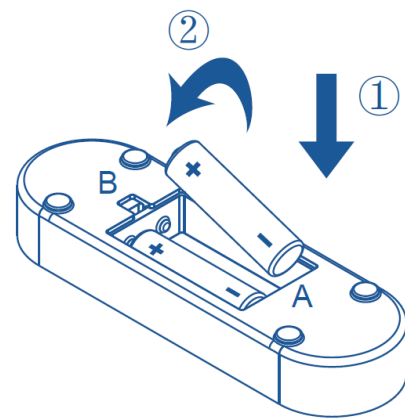

BATTERIES

- Keep batteries away from children and pets.
- Do not mix used and new batteries.
- Remove the batteries if left for long periods.
- Never dispose of batteries in a fire.
- Battery disposal, spent or expired batteries must be properly disposed of and recycled in compliance with local regulations. For detailed information, contact your local authority.
- Follow the battery manufacturer's safety, usage, and disposal instructions.

Power connection:

Insert the USB receiver into the energizing port and plug the other end into the power port.

This product is suitable for general USB interface line, which can be connected to mobile power supply, computer, ordinary and vehicle-mounted power supply, etc.

DISPOSAL

- Coopers of Stortford use recyclable or recycled packaging where possible.





Adjustable USB Fan with Night Light K313

Instructions for Use

Please read and retain these instructions for future reference

v001: 29/09/21

- Please dispose of all packaging, paper, cartons, packaging in accordance with your local recycling regulations.
- Plastics, polybags – this is made from the following recyclable plastic.

Code & Symbol	 PVC	 OTHER
Type of Plastic	Polyvinyl Chloride	ABS
Commonly used for	Pipes, construction material, flooring, windows, guttering, plaster packs	CD's, crisp packets, various flexible packaging, baby bottles, sunglass lenses
Notes	Not usually collected from household recycling bins, Sometimes recycled at local waste management centres.	Not often or widely recycled

- At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.



*Calls cost 7 pence per minute plus your telephone company's network access charge

The Enterprise Department
Head Office: 11 Bridge Street
Bishop's Stortford, CM23 2JU
Tel: 0844 482 4400*
Fax: 01279 756 595
www.coopersofstortford.co.uk