

3x6m Party Tent with Sides PE Plastic

K343 v001: 20/10/21

Please read and retain these instructions for future reference

GAINSBOROUGH
Garden & Wildlife



Dimensions

(H) 245 x (W) 600 X (D) 300cm

Material: PE Cover, steel frame

- MADE FROM HIGH QUALITY 100G PE FABRIC GIVING A SHOWER PROOF CANOPY TO PROVIDE PROTECTION FROM THE ELEMENTS
- STURDY STEEL FRAME
- COMES WITH 6 REMOVABLE SIDE WALLS, 4 OF WHICH COME WITH WINDOWS AND 2 OF WHICH ARE WITHOUT WINDOWS
- THE LARGE WINDOWS ON 4 SIDES STILL ALLOW LOTS OF LIGHT INSIDE THE PARTY TENT
- IDEAL FOR PROVIDING COVER OR SHADE FOR PARTIES AND SPECIAL OCCASIONS SO YOU NEVER NEED TO WORRY ABOUT THE WEATHER RUINING YOUR DAY
- COMES COMPLETE WITH GUY ROPES AND 12 PEGS FOR SECURING INTO THE GROUND

4 PERSON ASSEMBLY REQUIRED

ASSEMBLY INSTRUCTIONS / INSTRUCTIONS FOR USE:

Unpack the components carefully. Please check all parts have been removed from the packaging.

- Read all the instructions before assembling the Party Tent.
- Check you have received all parts listed in the parts list.
- Ensure there is enough space to lay out all the parts before assembling them.
- Assemble the parts on a soft level surface.
- Keep children away from assembly. Children should be kept under adult supervision when using the Party Tent.
- **Do not use the Party Tent in windy conditions.**
- Always use the guy ropes and pegs to secure the Party Tent when using it.
- The Party Tent is not a permanent structure. It should be dismantled and stored away after using it.
- The Party Tent needs to be completely dry before dismantling and storing it.
- 4 person assembly is recommended.
- Keep the Party Tent away from sharp objects to avoid damaging the fabric and frame.
- **The Party Tent weighs 12kg. Please lift with care.**

*Calls cost 7 pence per minute plus your telephone company's network access charge

The Enterprise Department
Head Office: 11 Bridge Street
Bishop's Stortford, CM23 2JU
Tel: 0844 482 4400*
Fax: 01279 756 595
www.coopersofstortford.co.uk

Please read and retain these instructions for future reference

v001: 20/10/21















Caution

- Do not place the Party Tent near sources of heat, fire or flammable liquids.
- Do not use naked flames around the Party Tent.

Cleaning

Clean with a damp cloth and mild detergent. Do not use abrasive cleaners.

Parts

									A x4	B x2	C x2	E x6
① x8	② x22	③ x7	④ x6	⑤ x6				x6	x12	x2		
							x1	x4				

1



② x 10




③ x 5





A x 4



B x 2

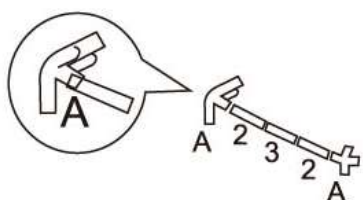

First connect parts 2 and 3 and fit corner connectors (A).
Then connect parts 2 and 3 in the order shown using connectors B.

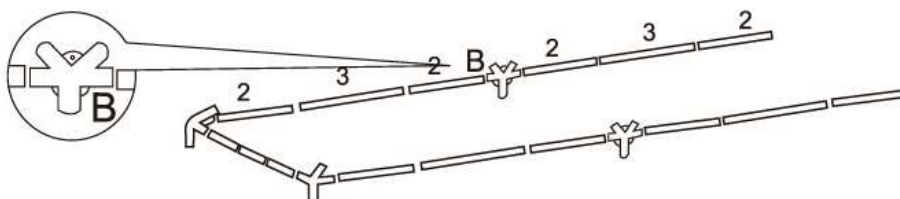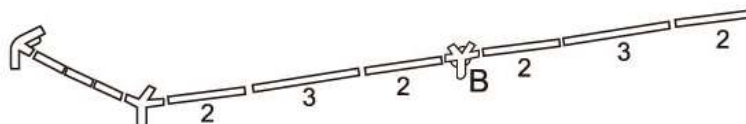

2




A x 2



② x 2





③ x 1

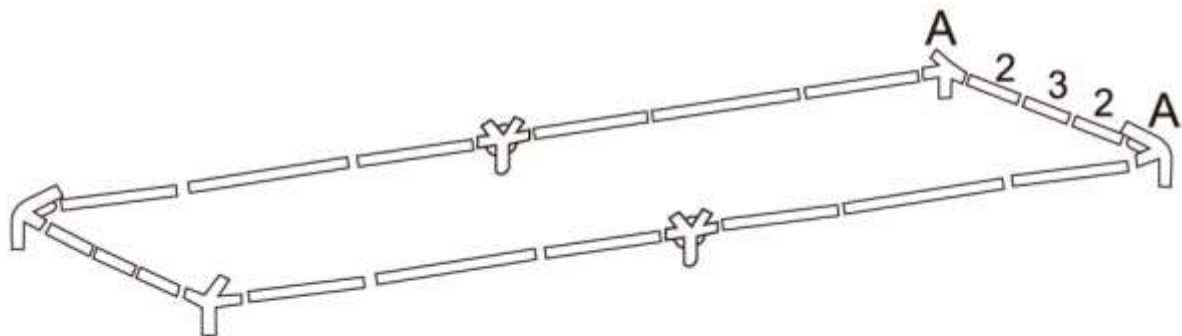


Add corner connectors (A) and parts 2 and 3 to the assembly.
Push all pieces together to get a stable frame.

3

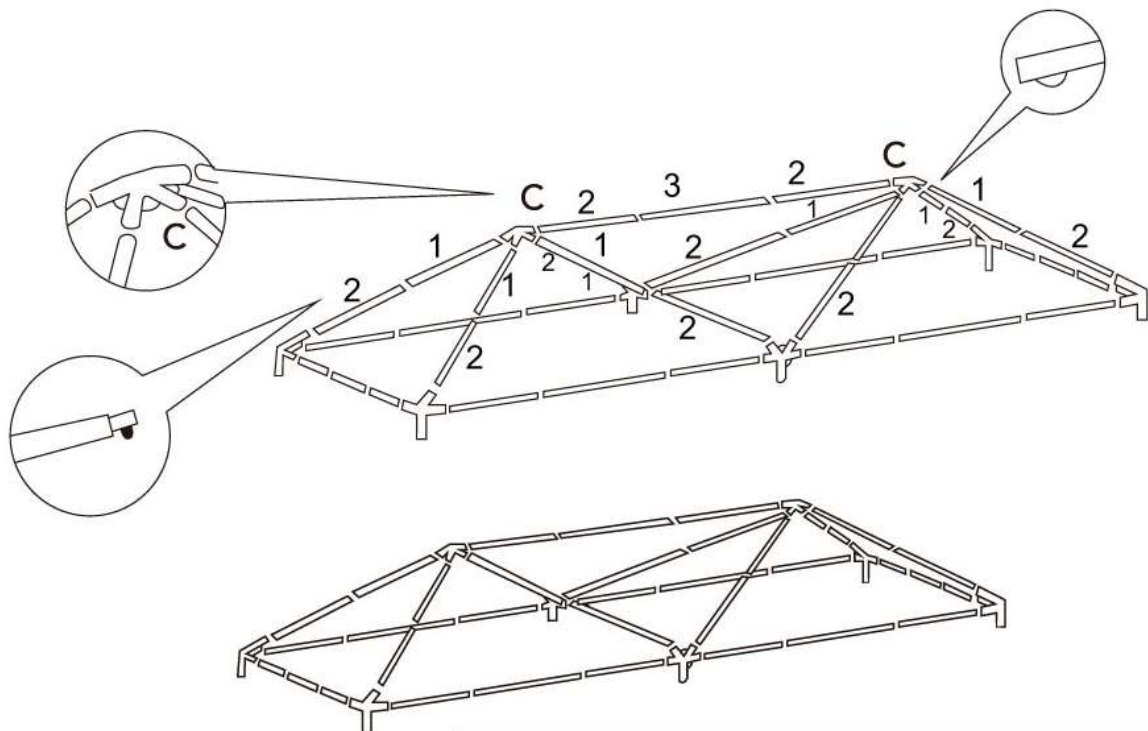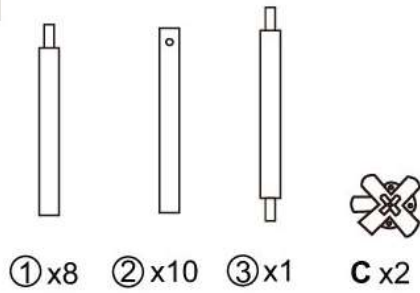


Add parts 1, 2 and 3 as shown slotting them into the corner connectors. Use part C to connect at the top with parts 2, 3, 2 as shown.


4

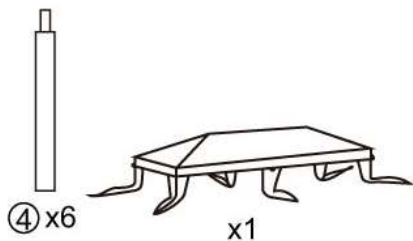


Fit the uprights connecting them with the assembled parts as shown.

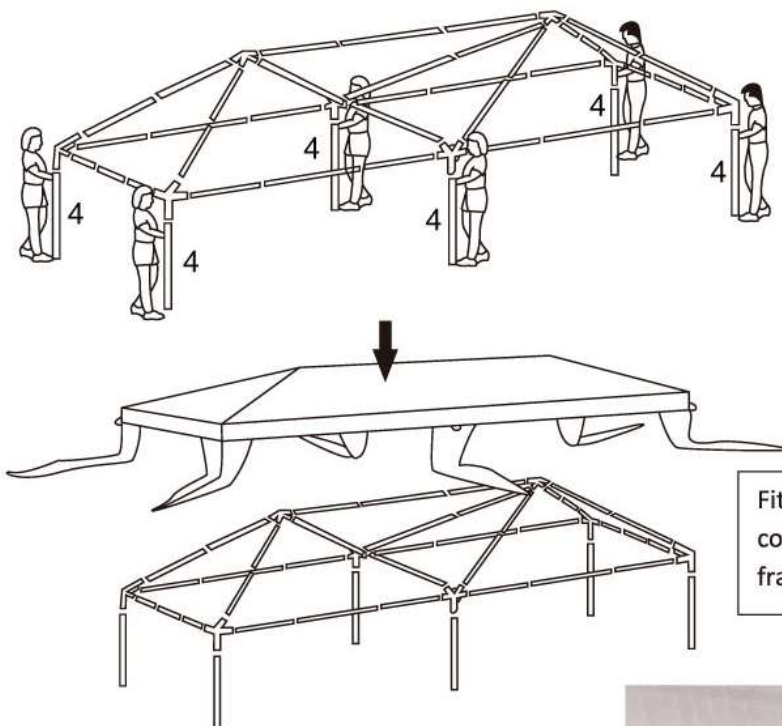


Fit the roof cover. The roof cover touch fastens to the frame (see below)

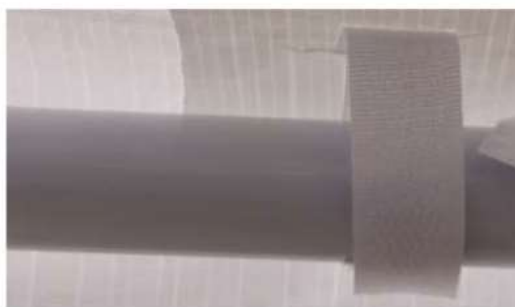




5

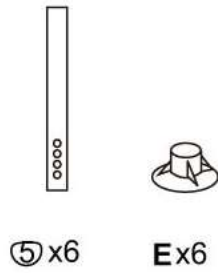

Attach parts E and F to all 6 uprights.

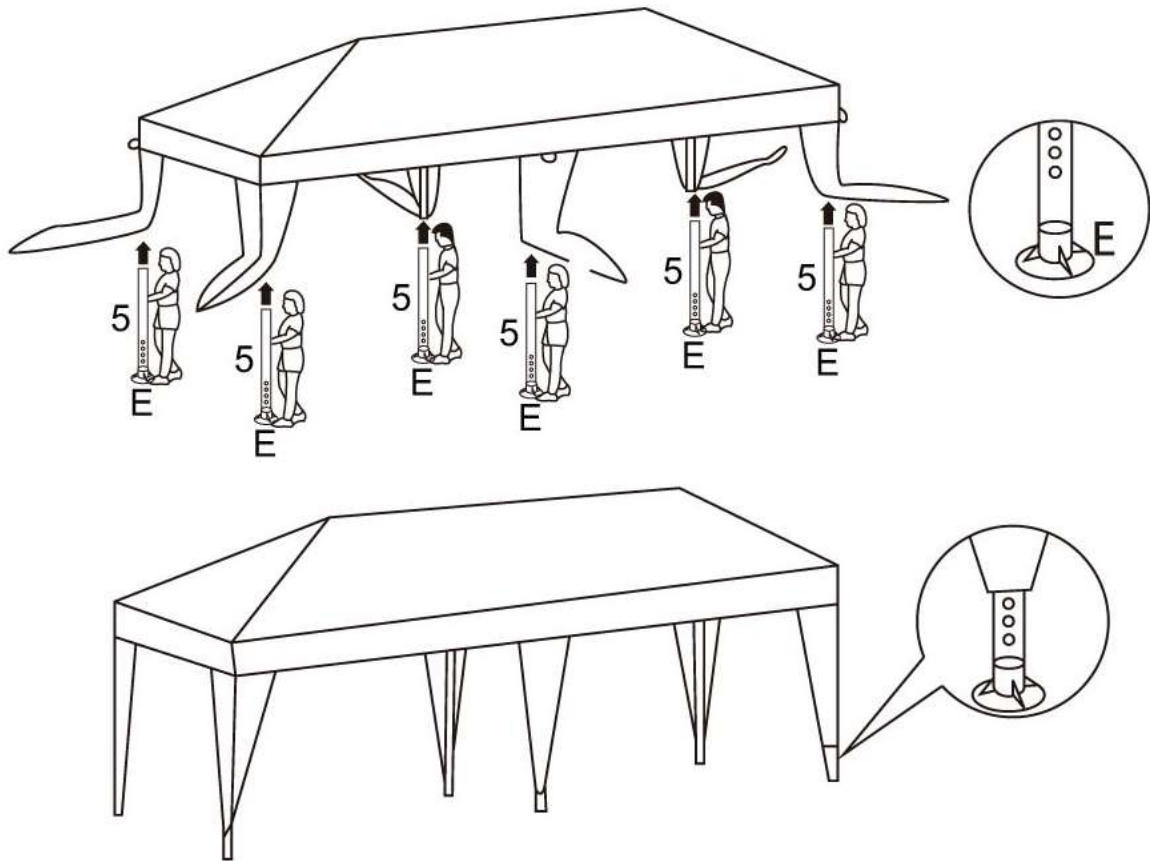

6

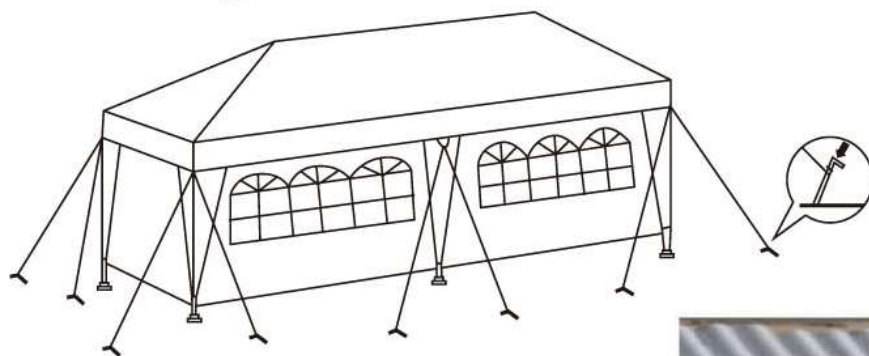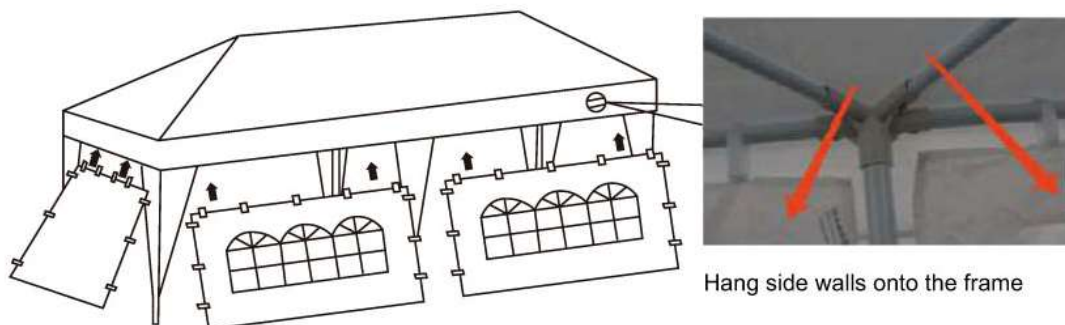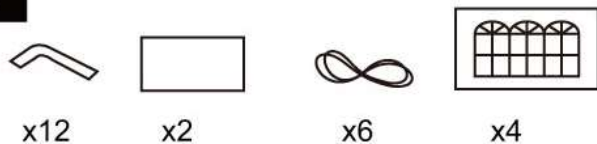

The bottom legs have holes to hook additional pegs (not provided)




The ends of the roof cover hook into the bottom leg holes

DISPOSAL

- Coopers of Stortford use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons, packaging in accordance with your local recycling regulations.



- Plastics, polybags – this is made from the following recyclable plastic.

Code & Symbol	
Type of Plastic	High-Density Polyethylene
Commonly used for	Milk bottles, cleaning product bottles, yoghurt pots, butter tubs and other food containers
Notes	Commonly recycled and collected from household recycling bins. Check with your local authority

- At the end of the product’s lifespan please check with your local council authorised household waste recycling centre for disposal.