

Deluxe Spider Repeller

K352 v001: 27/08/21

Please read and retain these instructions for future reference

PestReach
There's nowhere to hide!



Dimensions

(H) 12.4 x (W) 7 x (D) 4.5cm


- PLUGS INTO THE UK BS1363 WALL MAINS SOCKET
- MULTI FUNCTIONAL SPIDER REPELLER; SPIDERS, ROACHES, RODENTS, BED BUGS, ANTS AND MITES
- EMITS A HIGH FREQUENCY NOISE TO DETER PESTS

ULTRASONIC SOUND DISTANCE --UP TO 5000 SQ.FT
(SOUND WILL NOT PENETRATE SOLID BARRIERS)
POWER: 220V--240V AC; 50HZ
POWER CONSUMPTION: 8W MAX

ASSEMBLY INSTRUCTIONS / INSTRUCTIONS FOR USE:

Unpack the components carefully. Please check all parts have been removed from the packaging.

Parts

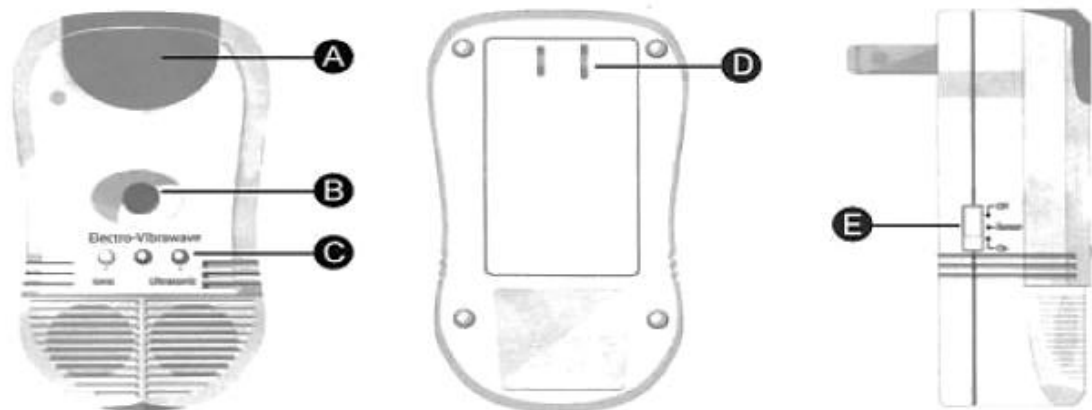

A: Night Light

D: AC Plug

B: Ultrasonic Speaker

E: Night Light Switch

C: Indicator Lights

Getting Started

Before plugging into the UK wall socket please ensure the wall socket power is switched OFF.

Plug your Pest repeller into an available wall socket. We recommend plugging it into the socket closest to where there is a pest problem. If you are currently not seeing any pests, plug your Pest repeller in a central area.

The three indicator lights(C) on the front of the unit will light up, letting you know that all three pest control technologies are functioning properly.

1. The Orange Light will stay on constantly----indicating the Ionic feature is working.
2. The Red Light will flash slowly----indicating the Electro-Vibrowave technology is working.
3. The Green Light will flash rapidly---indicating the Ultrasonic sound is working.

If you purchase multiple Pest repeller units, place them evenly throughout the building. We recommend at least two per floor in your home or building.

To adjust the Night Light (A), locate the Night Light Switch(E) on the left side of the unit. You may set the Night Light to either "Off", "Sensor" or "On".

"Off" disables the Night Light.

"Sensor" activates the Night Light only when the lights in the room are turned off.

"On" keeps the Night Light turned on all day and night.

Important Notes

1. The ultrasonic sound emitted by the Pest repeller can travel up 5000sq.feet in an open area.
1. For optimum coverage, plug a unit in each room without anything blocking or covering the device.
2. Do not place the Pest repeller behind solid obstructions like furniture or draperies.
3. Indoor use only.
4. It is normal to see a slight increase in the number of pests during the first two weeks after installation. The pests are simply being flushed out of the walls and their hiding places, and will soon disappear altogether.
5. The Pest repeller is designed to be safe around humans, pets, and household electronics.
6. Do not use in the same area as pet rodents.

WARNINGS AND SAFETY INSTRUCTIONS:

WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED:

- READ ALL INSTRUCTIONS BEFORE USE.
- FOR DOMESTIC INDOOR USE ONLY.
- DO NOT USE OUTDOORS OR FOR COMMERCIAL USE.
- BEFORE USE, CHECK THOROUGHLY FOR ANY DEFECTS AND DO NOT USE IF DEFECTS ARE FOUND. TAKE CARE NOT TO DROP THE REPELER AS HEAVY IMPACTS MAY CAUSE INTERNAL DAMAGE.
- BEFORE CONNECTING THIS PEST REPELLER, CHECK IF THE VOLTAGE INDICATED ON THE BOTTOM OF THE APPLIANCE IS IN ACCORDANCE WITH THE MAINS VOLTAGE IN YOUR HOME.
- CHECK CAREFULLY FOR DAMAGE BEFORE EACH USE.
- DO NOT USE IF DAMAGED.
- DO NOT LET CHILDREN TOUCH THIS PEST REPELLER WHEN SWITCHED ON.
- ADULTS ARE RECOMMENDED TO PLUG AND UNPLUG THIS REPELLER INTO THE WALL SOCKET. ALWAYS SWITCH THE POWER OFF WHEN PLUGGING OR UNPLUGGING.
- DO NOT COVER THE ITEM IN ANY WAY WHEN IN USE AS THIS MAY CAUSE OVERHEATING.
- DO NOT USE THIS FOR ANY OTHER USE THAN THE INTENDED USE IT IS DESIGNED FOR.
- UNPLUG FROM OUTLET WHEN NOT IN USE AND BEFORE CLEANING.
- DO NOT IMMERSE IN WATER.
- ANY REPAIRS MUST BE CONDUCTED BY A QUALIFIED ELECTRICIAN OR ELECTRICAL SERVICE AGENT.


CLEANING:

- Switch OFF the power before unplugging from the wall socket
- Wipe clean with a dry cloth.
- Do not immerse in water or clean with water.
- When cleaned, plug back into the wall socket and then switch the power back ON.

DISPOSAL

- Coopers of Stortford use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons, packaging in accordance with your local recycling regulations.
- Plastics, polybags – this is made from the following recyclable plastic.



Code & Symbol	 OTHER
Type of Plastic	ABS
Commonly used for	CD's, crisp packets, various flexible packaging, baby bottles, sunglass lenses
Notes	Not often or widely recycled

- At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.

