

# Portable Mini Air Cooler

K361 v001: 27/09/21

Please read and retain these instructions for future reference



## Adapter specification: (not supplied)

Input: AC100-240V AC

50 / 60Hz 0.3A Max

Outlet: 5.0V, 1.2A

## Dimensions

(H) 17.5 x (W) 15.4 x (D) 16.3cm

Weight: 0.8kg

Length of USB cable: 1m


- POWER: 5W
- INPUT: 5V 1.2A
- WATER TANK CAPACITY: 550ML
- 2 WATER TANKS
- DISHWASHER SAFE ANTIMICROBIAL FILTER
- ON THE TOP HAS ON / OFF BUTTON, WIND SPEED BUTTON (3 SPEED LEVEL), NIGHT BUTTON
- WITH LED MOOD LIGHT SIDE PANELS IN 7 COLOURS-RED ,ORANGE, YELLOW, GREEN, BLUE, PURPLE. LED COLOUR AUTOMATIC LIGHT CHANGE
- EASY TO REFILL
- LIGHT WEIGHT
- PORTABLE

## ASSEMBLY INSTRUCTIONS / INSTRUCTIONS FOR USE:

Unpack the components carefully. Please check all parts have been removed from the packaging.

### Product Guide



1. Indicator light (shows whether a function is disabled)
2. On / Off button (press to start and to turn off)
3. Wind speed button (press level 1, level 2 and level 3 to change the wind speed)
4. Press night light (press different night light switch) for red, orange, yellow, green, cyanogen, blue and pure and the light changes automatically.

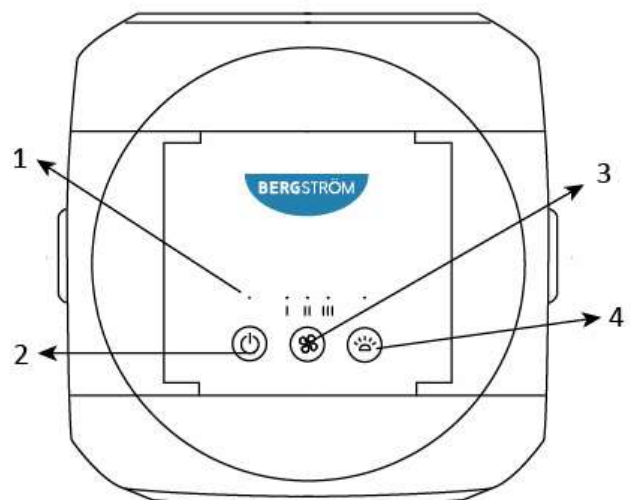

5. Manual airflow adjustment: vertical wind direction adjustment.
6. Water tank: fill with fresh water.
7. Water tank door: first open the cover, then take water tank out  
(Note: Please keep the door closed when machine is working in order to let the water flow out smoothly)



8. Filter (Take out the water tank to access and take out the filter. The filter can be cleaned in soapy water or put in the dishwasher.)
9. Water tank cover: unscrew the cover to fill with water. Make sure the cover is screwed back on tight to prevent water leakage
10. Water tank (the side shown in the image should be on the inside)

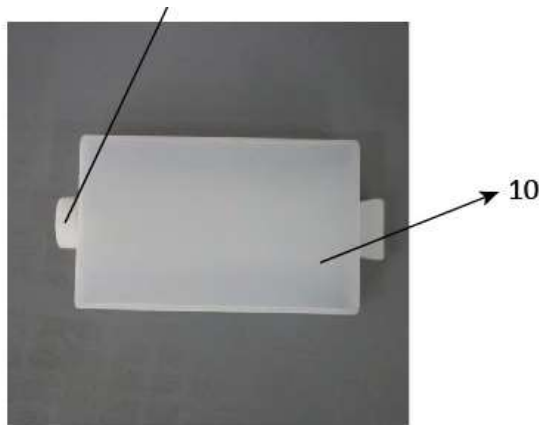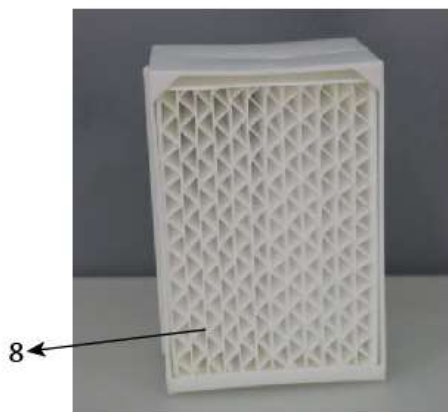

## USER INSTRUCTIONS:

1. Place the Air cooler on a flat surface and open the water tank door. Remove the water tank, fill it with fresh water and then put the water tank back. **Do not overfill the tank.** Ensure the water tank is in the correct position. Make sure the flat side of the water tank is on the outside, then close the water tank door.
2. Plug USB power adapter into an outlet. Then, insert larger USB end of cable into the adapter and the smaller end into the power port on the back of Air cooler; it is same if you use a computer or a power bank but please make sure the power supply is correct, **5V 1.2A.**
3. Press the Power button to power on the Air cooler.
4. Set the Fan Speed by pressing the button. You can choose from Low, Medium, and High Mode.

5. Choose your light colour by pressing the button. You can choose between solid colours or a colour-cycle mode.
6. Press the Power button again to turn off your cooler.

## TIPS AND IMPORTANT NOTICE:

1. The Air cooler must be kept on a level surface during use; tilting the unit may cause water to leak out of the base.
2. Let the filter absorb water for at least 3 minutes after filling tank and before use. Doing so will cool the air quicker.
3. Air cooler will run up to 8 hours on a single fill on Low fan speed. Even if the water tank is empty, the filter is still damp and the cooler is still working.
4. The lead time for the water tank depends on the temperature and humidity of the room. If you find the water is used up faster for example 4-5 hours, it means the air cooler is cooling your room temperature faster.
5. The air cooler is designed to prevent water leakage; this is the reason why the water tank is closed design.  
If you find water leakage check the following:
  - a. If the water tank cover is closed well and water tank has any cracks;
  - b. If the bottom of air cooler has any cracks;
  - c. If there is too much water at the bottom of air cooler, if so, please remove excess water and try again;

## CLEANING AND MAINTENANCE

**Before cleaning the air cooler, you must switch it off by means of the on/off button and remove the USB plug from the port.**

### Cleaning the exterior

Clean the exterior of the appliance with a damp cloth or sponge. If necessary, you can clean the exterior of the appliance by means of a mild washing-up liquid.

- Do not use aggressive or abrasive cleaning agents for cleaning the appliance.
- Dry the exterior of the appliance.
- Never submerge the appliance or USB cable in water or any other liquid.

### Cleaning the filter

- The filter is dishwasher safe. Alternatively clean the air filter with a mild detergent in lukewarm water (approx. 40°C). Then properly rinse clean the air filter with clean water and allow it to dry in the air. Do not place the air filter in the sun or on the heating to dry it.
- Place the air filter back in the appliance. Check that it is fully dry, before using the air cooler again.

### Cleaning the ventilation grilles

In order to allow the air cooler to function as well as possible, you can clean the ventilation grilles by means of a vacuum cleaner with a soft brush nozzle.

## Cleaning the water tank

Remove the water tank from the appliance. Throw away any water that is still present in the water tank and clean the tank with a soft detergent and warm water. Properly rinse with clean water and dry. Reinstall water tank.

## Power connection:

Insert the USB receiver into the energizing port and plug the other end into the power port.

This product is suitable for general USB interface line, which can be connected to mobile power supply, computer, ordinary and vehicle-mounted power supply, etc.

## DISPOSAL

- Coopers of Stortford use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons, packaging in accordance with your local recycling regulations.
- At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.

