 


# Mini Home Cinema Projector K365

Please read and retain these instructions for future reference

# Instructions for Use

v002: 05/01/22

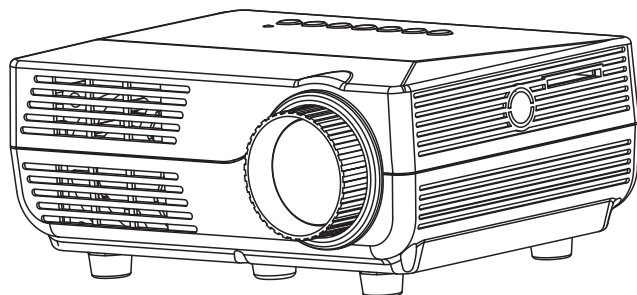

## Dimensions

(H) 7.0 x (W) 16.0 x (D) 12.5cm

Length of mains lead: 150cm

## Accessories

Remote control x1

3 in 1 AV cable x1

Adapter x1

## Projector specification

Product name	Portable projector	Display system	LCD
Physical resolution	480 × 320	Supported resolutions	1920 × 1080
Light source type	LED	Input voltage	DC 12V/2.5A
Menu Language	Chinese/ English, etc.	Color depth	262 K
Brightness	500 Lumens(lamp)	Contrast	1000:1
Lens focal length	f = 90 mm	Projection method	Front Table
Projection distance	1.1-5.5 M	Image size	20-150 inch
Operation method	Manual Remote control	Input port	VGA/HD in/AV /SD/USB/
Output port	Earphone jack		
Speaker	1.0W × 1		
Weight	0.41 Kg	Size (mm)	160 × 125 × 70
Total power	30 W	Operating temperature	-10~38 °C

## Multimedia Format

File type	Supports playback of files
Audio	MP3/WMA/AAC/WAV
Image	JPEG/BMP/PNG
Video	ASF/AVI/MKV/FLV/MOV/MP4/MPG/VOB/RMVB
Text	TXT

 
\*Calls cost 7 pence per minute plus your telephone company's network access charge

The Enterprise Department  
Head Office: 11 Bridge Street  
Bishop's Stortford, CM23 2JU  
Tel: 0844 482 4400\*  
Fax: 01279 756 595  
www.coopersofstortford.co.uk


## ASSEMBLY INSTRUCTIONS / INSTRUCTIONS FOR USE:

Unpack the components carefully. Please check all parts have been removed from the packaging.

### Projector panel buttons

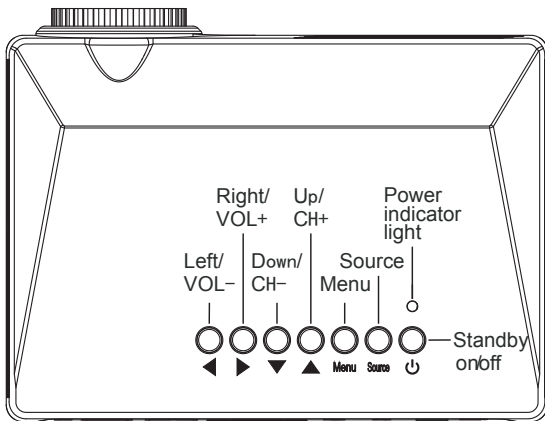

### Remote control

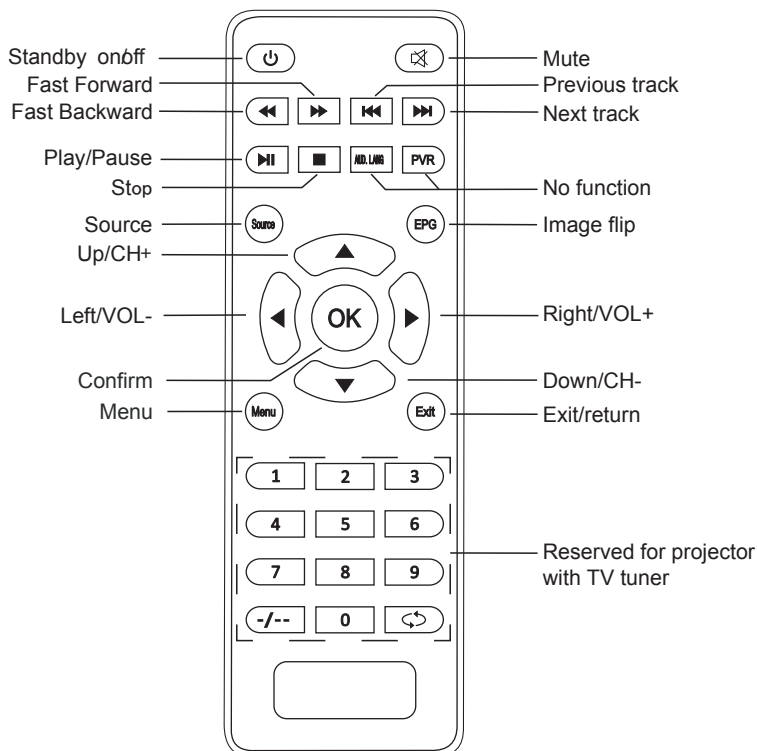 

## WARNINGS AND SAFETY INSTRUCTIONS:

WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED:

- READ ALL INSTRUCTIONS BEFORE USE.
- FOR DOMESTIC INDOOR USE ONLY.
- DO NOT USE OUTDOORS OR FOR COMMERCIAL USE.
- BEFORE USE, CHECK THOROUGHLY FOR ANY DEFECTS AND DO NOT USE IF DEFECTS ARE FOUND. TAKE CARE NOT TO DROP THE APPLIANCE AS HEAVY IMPACTS MAY CAUSE INTERNAL DAMAGE.
- BEFORE CONNECTING THE APPLIANCE, CHECK IF THE VOLTAGE INDICATED ON THE BOTTOM OF THE APPLIANCE IS IN ACCORDANCE WITH THE MAINS VOLTAGE IN YOUR HOME.
- CHECK THE APPLIANCE AND POWER CABLE CAREFULLY FOR DAMAGE BEFORE EACH USE.
- THIS APPLIANCE CAN BE USED BY CHILDREN AGED FROM 8 YEARS AND ABOVE, AND PERSONS WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES OR LACK OF EXPERIENCE AND KNOWLEDGE IF THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE IN A SAFE WAY AND UNDERSTAND THE HAZARDS INVOLVED. CHILDREN SHALL NOT PLAY WITH THE APPLIANCE. CLEANING AND USER MAINTENANCE SHALL NOT BE MADE BY CHILDREN WITHOUT SUPERVISION.
- CHILDREN OF LESS THAN 3 YEARS SHOULD BE KEPT AWAY UNLESS CONTINUOUSLY SUPERVISED.
- **SOME PARTS OF THIS PRODUCT CAN BECOME VERY HOT AND CAUSE BURNS. PARTICULAR ATTENTION HAS TO BE GIVEN WHERE CHILDREN AND VULNERABLE PEOPLE ARE PRESENT.**
- THE USE OF ANY ACCESSORY OR ATTACHMENTS NOT RECOMMENDED BY COOPERS OF STORTFORD MAY CAUSE INJURIES AND INVALIDATE ANY WARRANTY YOU MAY HAVE.
- DO NOT LET THE POWER CABLE HANG OVER THE EDGE OF A TABLE OR COUNTER, OR TOUCH HOT SURFACES.
- DO NOT PLACE ON OR NEAR HEAT SOURCES.
- USE ON A LEVEL, STABLE SURFACE.
- DO NOT COVER THE ITEM IN ANY WAY WHEN IN USE AS THIS MAY CAUSE OVERHEATING.
- DO NOT USE THIS APPLIANCE FOR ANY OTHER USE THAN THE INTENDED USE IT IS DESIGNED FOR.
- ENSURE THERE IS SUFFICIENT DISTANCE BETWEEN THIS APPLIANCE AND OTHER ITEMS ON THE WORK SURFACE OR WORK STATION, OR SUFFICIENT DISTANCE BETWEEN THE APPLIANCE AND THE CONFINES OF THE AREA IN WHICH IT IS SITUATED. WE RECOMMEND A MINIMUM CLEARANCE AROUND ALL FACES OF AT LEAST 10CM.
- TO PROTECT AGAINST ELECTRIC SHOCK, DO NOT IMMERSE POWER CABLE, PLUG OR APPLIANCE, IN WATER OR ANY OTHER LIQUID.
- UNPLUG FROM OUTLET WHEN NOT IN USE AND BEFORE CLEANING.
- DO NOT OPERATE ANY APPLIANCE WITH A DAMAGED POWER CABLE OR PLUG OR AFTER THE APPLIANCE MALFUNCTIONS, OR HAS BEEN DAMAGED IN ANY MANNER. WE RECOMMEND THAT THE POWER CABLE IS NOT KINKED OR STORED IN A TWISTED MANNER, AND THAT YOU REGULARLY CHECK ITS CONDITION.
- ANY REPAIRS MUST BE CONDUCTED BY A QUALIFIED ELECTRICIAN OR ELECTRICAL SERVICE AGENT.
- NEVER REMOVE THE HOUSING.
- DO NOT LOOK DIRECTLY AT THE LENS WHEN THE PROJECTOR IS IN THE POWER ON MODE.

 
# Mini Home Cinema Projector K365

# Instructions for Use

Please read and retain these instructions for future reference

v002: 05/01/22

## Parts

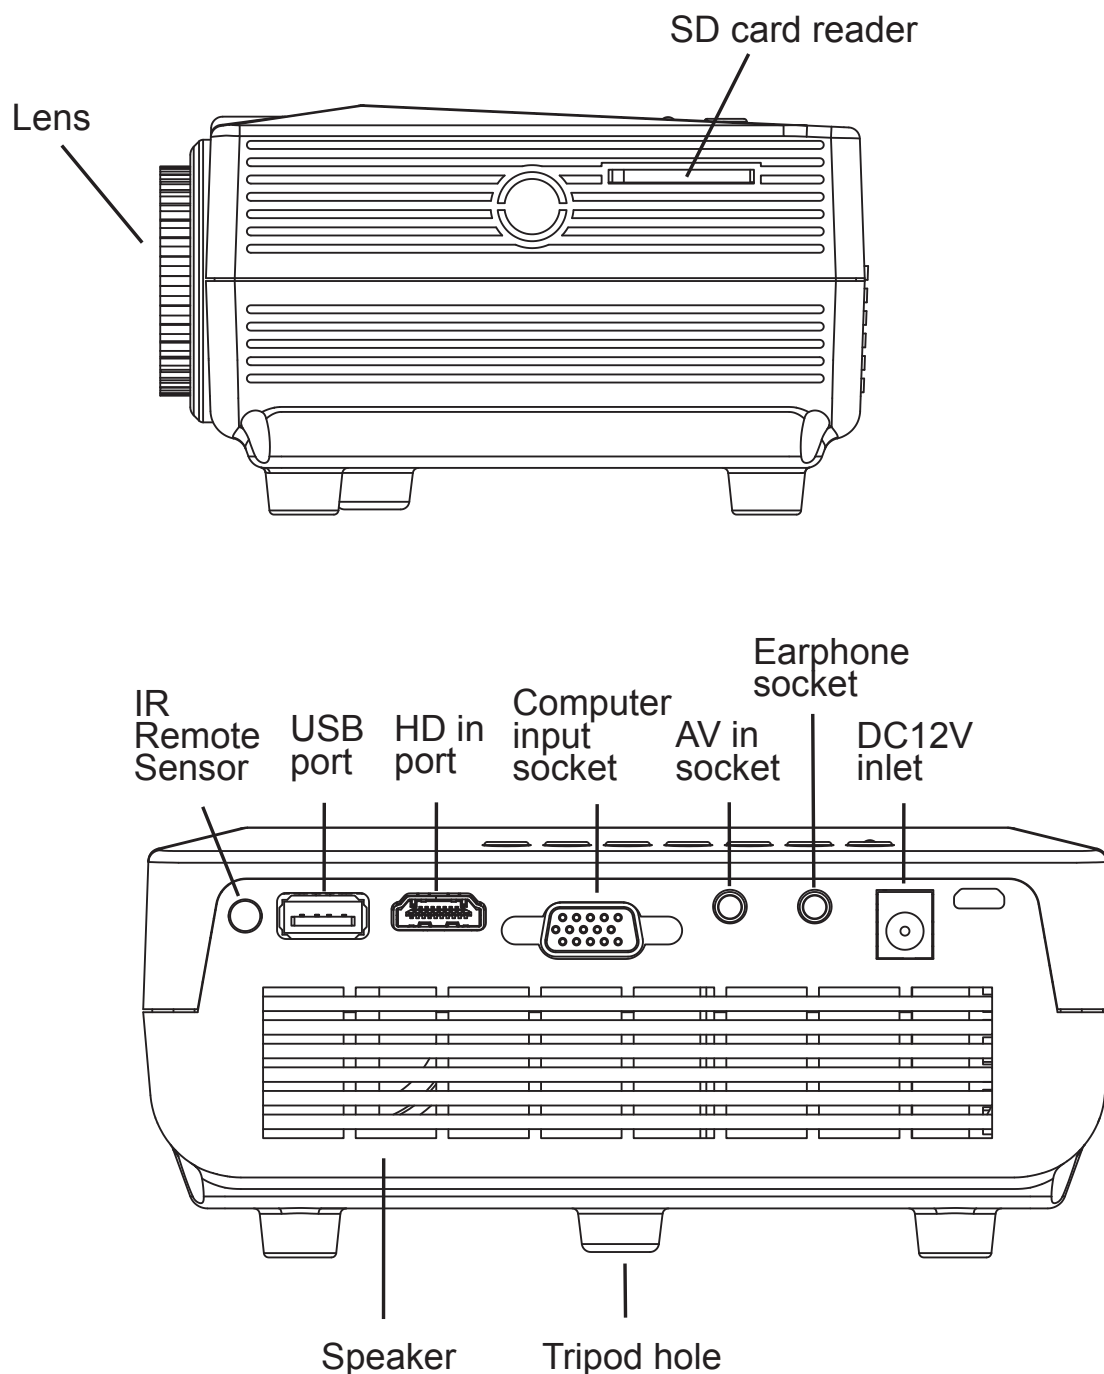


\*Calls cost 7 pence per minute plus your telephone company's network access charge

The Enterprise Department  
Head Office: 11 Bridge Street  
Bishop's Stortford, CM23 2JU  
Tel: 0844 482 4400\*  
Fax: 01279 756 595  
[www.coopersofstortford.co.uk](http://www.coopersofstortford.co.uk)

## Start-up and shut down the projector

Plug the adaptor into the projector and into a wall socket. After a few seconds the power indicator light will change to red indicating the projector is in standby mode.




**Starting up:** Press  on the panel or the remote control. The power indicator light changes to green. The projector is now in working mode.

**Shutting down:** Press  on the panel or remote control in operation mode. The projector goes into standby mode.

 
## Adjusting the projection focus

The projector lens is placed perpendicular to the projection screen, press the **Menu** button to display the menu screen. Rotate the lens until clear text is displayed.





## Switching input signal

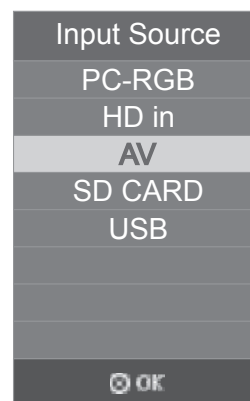
Press **Source** on the projector or on the remote control. A source selection bar is displayed. Press / until your desired input signal is selected and press OK on the remote control or  on the projector.

The TV option appears in the source selection bar when configuring the TV reception.




## Setting the Menu

 Press **Menu** on the projector or remote control to turn the menu on. Press /// to select your desired menu and making various adjustments and settings. Press OK to confirm. Press **Menu** repeatedly on the projector or remote control to leave and save the settings. Press EXIT to leave and save the settings.

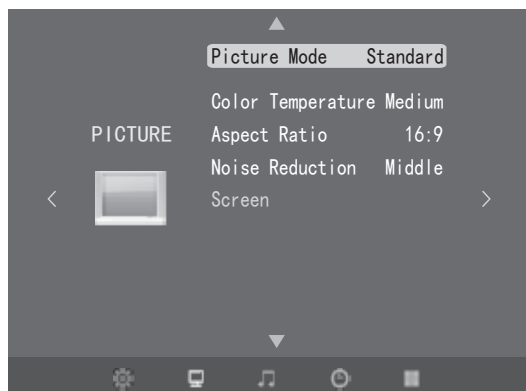

### Picture menu

 Includes:  
Picture mode  
Colour temperature  
Aspect ratio  
Noise reduction and  
Screen options.

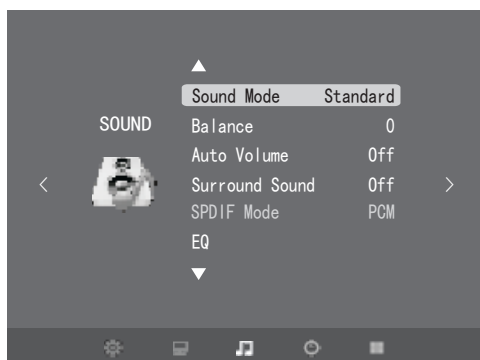

## Sound menu

Includes:

- Sound Mode
- Balance
- Auto Volume
- Surround Sound
- SPDIF Mode
- EQ options



 
## Option menu

Includes:


- OSD Language
- Restore Factory Settings
- Blending
- Mirror
- OSD duration options
- Software Update (USB)

## Play Multimedia Files


The projector can play multimedia files directly from the card when the signal source is set to SD card or USB.

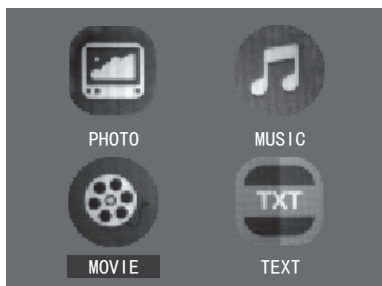

 First insert the SD card or USB, then press ◀/▶ on the projector panel to select the type of file: Photo, Music, Movie, Text

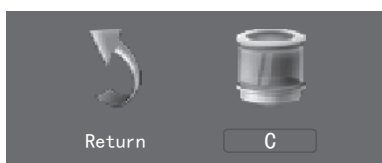

 Press ▼ on the panel to enter the drive interface. Then move the cursor to "C", press ▼ to confirm.

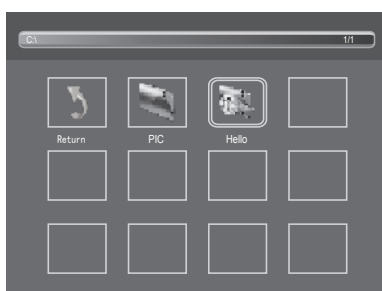

Press ◀/▶ to move the cursor to the file you want to play, press ▼ to select, press ▼ again to deselect. Press ▲ to play the selected file.

Pressing ▼ on the panel will display a series of virtual keys, press ◀/▶ to move the cursor to a different virtual key, and then press ▼ to perform the corresponding operation instruction.

Move the cursor to the ■, press ▼ to stop playing, press ◀ to move the cursor to the ↶, and then press ▼ to return to the previous screen. You can repeatedly return to the main display screen.

Press the button on the remote control to perform the corresponding instructions directly.

## PLUG WIRING (UK & IRELAND)

This appliance is supplied with a mains adaptor/charger with BS1363 plug pins. The adaptor must be connected indoors.


**DO NOT** use if the socket outlets in your home or office are not suitable for this product's mains adaptor/charger plug pins. Attempts to insert the mains adaptor/charger into the wrong socket is likely to cause electric hazard or damage.

**DO NOT** use with any other mains transformer/charger than the one that is supplied with this product.

## DISPOSAL

- Coopers of Stortford use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons, packaging in accordance with your local recycling regulations.
- Plastics, polybags – this is made from the following recyclable plastic.



Code & Symbol	
Type of Plastic	ABS
Commonly used for	CD's, crisp packets, various flexible packaging, baby bottles, sunglass lenses
Notes	Not often or widely recycled

- At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.

