## Singing Blue Tit

K423 v001: 09/03/22

Please read and retain these instructions for future reference

# GAINSBOROUGH



### Dimensions

14 x8 x 18.5cm

- NOW YOU CAN ENJOY ONE OF BRITAINS FAVOURITE BIRDS ALL YEAR ROUND AND HAVE IT SING TO YOU WHILE YOU ENJOY YOUR GARDEN
- TRIGGERED BY THE BUILT IN MOTION SENSOR THAT
  WORKS UP TO A METER
- WONDERFULLY REALISTIC
- THE BLUE TIT IS HAPPILY PERCHED ON A LOG
- POWERED BY 2 x AA AKALINE Batteries (not included)

Position away from obstacles, shrubs or trees for best operation of the motion sensor.

#### ASSEMBLY INSTRUCTIONS / INSTRUCTIONS FOR USE:

Unpack the components carefully. Please check all parts have been removed from the packaging.

The Blue Tit has a shadow sensor function and will start singing automatically when shadow comes within 1 meter. Set the switch (circled below) to the ON position.

#### **Battery replacement**



#### BATTERIES

- Keep batteries away from children and pets.
- Do not mix used and new batteries.
- Remove the batteries if left for long periods.
- Never dispose of batteries in a fire.
- Battery disposal, spent or expired batteries must be properly disposed of and recycled in compliance with local regulations. For detailed information, contact your local authority.

## The Enterprise Department

UK Head Office, 11 Bridge Street, Bishop's Stortford, CM23 2JU Tel: 0844 4824400\*, Fax: 01279 756595 <u>www.coopersofstortford.co.uk</u> EU address: D.S.B. LD, 160 Bd. de Fourmies, 59100 Roubaix, France Tel: (+44) 1279 701269 \*UK Calls cost around 7 pence per minute plus your telephone company's network access. Please check with your telephone supplier.

Push the battery case in the direction of the arrow and open it to replace batteries as shown.



K423

Please read and retain these instructions for future reference

Follow the battery manufacturer's safety, usage, and disposal instructions. ٠

#### DISPOSAL

- Coopers of Stortford use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons, packaging in accordance with your local recycling regulations.
- Plastics, polybags Contains the following recyclable plastic.

Code & Symbol	<u>ک</u>	OTHER
Type of Plastic	Polypropylene	ABS
Commonly used for	Microwaveable food containers, yoghurt pots, butter tubs, disposable plates and cups	CD's, crisp packets, various flexible packaging, baby bottles, sunglass lenses
Notes	Commonly recycled and collected from household recycling bins (packaging tape itself not recyclable but does not interfere with cardboard)	Not often or widely recycled

At the end of the product's lifespan please check with your local council authorised household waste ٠ recycling centre for disposal.





The Enterprise Department		
Department	EU address: D.S.B. LD, 160 Bd. de Fourmies, 59100 Roubaix, France	

