

Hand Warmer with Fleece Cover

K624 v001: 16/02/22

Please read and retain these instructions for future reference

BERGSTRÖM



- A. Hand warmer
- B. Input Micro USB-Connection
- C. Output USB-Connection
- D. Indicator lights
- E. Multifunction key

Dimensions

(L) 10.3 x (W) 5.9 x (D) 2.8cm

USB cable length: 28cm

Inbuilt Battery included 2*2000mah LI

- DOUBLE SIDED HAND WARMER KEEPS HANDS TOASTY AND WARM
- DOUBLE THE HEAT
- DUAL SIDED HEAD WITH 3 COMFORT SETTINGS UP TO 50C
- BUILT-IN POWER BANK CHARGER FOR ANY USB DEVICE
- MOULDS TO THE PALM OF YOUR HAND, ERGONOMIC DESIGN

Caution! Contains Lithium Battery

TECHNICAL DATA

Voltage:	3.7V lithium-ion battery
Capacity:	4000mAh
Battery type:	18650 rechargeable
Charging time:	approx. 3–4 hours
Charging voltage:	DC 5V
Output:	5V
Operating time:	Operating mode low (1 indicator lamp) approx. 35 °C (approx. 7 hours) Operating mode medium (2 indicator lamp) approx. 45 °C (approx. 3–4 hours) Operating mode high (3 indicator lights) approx. 55 °C (approx. 2.5 hours)
Accessories:	USB cable, fleece cover, carry case

WARNINGS AND SAFETY INSTRUCTIONS:

WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED:

- READ ALL INSTRUCTIONS BEFORE USE.
- FOR DOMESTIC USE ONLY.
- NOT FOR COMMERCIAL USE.
- BEFORE USE, CHECK THOROUGHLY FOR ANY DEFECTS AND DO NOT USE IF DEFECTS ARE FOUND. TAKE CARE NOT TO DROP THE APPLIANCE AS HEAVY IMPACTS MAY CAUSE INTERNAL DAMAGE.

The Enterprise Department

UK Head Office, 11 Bridge Street, Bishop's Stortford, CM23 2JU

Tel: 0844 4824400*, Fax: 01279 756595

www.coopersofstortford.co.uk

EU address: D.S.B. LD, 160 Bd. de Fourmies, 59100 Roubaix, France

Tel: (+44) 1279 701269

*UK Calls cost around 7 pence per minute plus your telephone company's network access. Please check with your telephone supplier.

- THIS APPLIANCE CAN BE USED BY CHILDREN AGED FROM 8 YEARS AND ABOVE, AND PERSONS WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES OR LACK OF EXPERIENCE AND KNOWLEDGE IF THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE IN A SAFE WAY AND UNDERSTAND THE HAZARDS INVOLVED. CHILDREN SHALL NOT PLAY WITH THE APPLIANCE. CLEANING AND USER MAINTENANCE SHALL NOT BE MADE BY CHILDREN WITHOUT SUPERVISION.
- CHILDREN OF LESS THAN 3 YEARS SHOULD BE KEPT AWAY UNLESS CONTINUOUSLY SUPERVISED.
- **SOME PARTS OF THIS PRODUCT CAN BECOME VERY HOT AND CAUSE BURNS. PARTICULAR ATTENTION HAS TO BE GIVEN WHERE CHILDREN AND VULNERABLE PEOPLE ARE PRESENT.**
- THE USE OF ANY ACCESSORY OR ATTACHMENTS NOT RECOMMENDED BY COOPERS OF STORTFORD MAY CAUSE INJURIES AND INVALIDATE ANY WARRANTY YOU MAY HAVE.
- DO NOT PLACE ON OR NEAR HEAT SOURCES.
- DO NOT USE THIS APPLIANCE FOR ANY OTHER USE THAN THE INTENDED USE IT IS DESIGNED FOR.
- DO NOT PLACE UNDER OR NEAR FLAMMABLE MATERIALS SUCH AS CURTAINS, DRAPERIES, SHELVES, LOOSE WALL PAPER, ETC.
- KEEP ITEM AT LEAST 1M AWAY FROM COMBUSTIBLE MATERIAL SUCH AS FURNITURE, CUSHIONS, BEDDING, PAPER, CLOTHES, CURTAINS ETC
- TO PROTECT AGAINST ELECTRIC SHOCK, DO NOT IMMERSE POWER CABLE, PLUG OR APPLIANCE, IN WATER OR ANY OTHER LIQUID.
- ANY REPAIRS MUST BE CONDUCTED BY A QUALIFIED ELECTRICIAN OR ELECTRICAL SERVICE AGENT.
- **KEEP AWAY FROM WATER. DO NOT USE THIS APPLIANCE NEAR BATHTUBS, SHOWERS, WASHBASINS OR OTHER CONTAINERS WITH WATER.**
- **NEVER TOUCH THE HAND WARMER, POWER CORD OR PLUG WITH WET HANDS.**
- **ALWAYS TURN OFF WHEN NOT IN USE.**

Battery and Charging Instructions

- **DO NOT LEAVE THE HAND WARMER UNATTENDED DURING CHARGING. BE SURE TO REMOVE THE CHARGER WHEN IT IS FULLY CHARGED.**
- **THE HAND WARMER SHOULD NOT BE USED DURING CHARGING.**
- **THE INDICATOR LAMPS FLASH BLUE DURING THE CHARGING PROCESS. ALL THREE INDICATOR LAMPS ARE CONTINUOUSLY LIT IN BLUE WHEN THE UNIT IS FULLY CHARGED.**
- **IF THE BATTERY HAS LEAKED, AVOID CONTACT.**

HOW TO USE HAND WARMER FUNCTION

Note: For optimum performance, please fully charge the hand warmer before use.

1. Press the multifunction key for a few seconds. The indicator lamps start to light up red. The hand warmer automatically starts the heating process.
2. Press the multifunction key again to switch between the three heat levels.
3. To switch off the hand warmer, press the multifunction key twice in quick succession. The indicator lamps go out and the hand warmer switches off.
4. If you press and hold the multifunction button again in hand warmer mode, the unit switches to Powerbank mode.

**The Enterprise
Department**

UK Head Office, 11 Bridge Street, Bishop's Stortford, CM23 2JU

Tel: 0844 4824400*, Fax: 01279 756595

www.coopersofstortford.co.uk

EU address: D.S.B. LD, 160 Bd. de Fourmies, 59100 Roubaix, France

Tel: (+44) 1279 701269

*UK Calls cost around 7 pence per minute plus your telephone company's network access.
Please check with your telephone supplier.

How to charge a mobile device with the hand warmer- Powerbank

1. Press the multifunction key once to activate the power bank.
1. Now connect the desired device to the hand warmer for charging via the USB port. Make sure the device is suitable for use with the Hand Warmer. It is recommended to only use the USB cable that came with your mobile device.
2. Plug the Output (large) end of the USB cable into the USB output on the hand warmer and then plug the Input (small) end of the USB cable into the USB input end of your mobile device.
3. The device will begin to charge automatically. The battery/temperature indicator lights will light up blue to indicate the charging process.
2. To switch off the hand warmer, press the multifunction key twice in quick succession. The indicator lamps go out and the hand warmer switches off.
3. If you press and hold the multifunction button in Powerbank mode, the unit switches to handwarming mode.

CARE AND STORAGE

- Clean the hand warmer regularly with a clean, damp cloth.
- Never hold the device under water, as liquid can penetrate it and damage the hand warmer.
- Do not use caustic or abrasive cleaning agents to clean the hand warmer. These can damage the hand warmer.
- Allow the appliance to cool completely before storing.
- Store the appliance and accessories out of the reach of children and animals in a dry, frost-free place protected from sunlight.

BATTERIES

- Keep batteries away from children and pets.
- Never dispose of batteries in a fire.
- Battery disposal, spent or expired batteries must be properly disposed of and recycled in compliance with local regulations. For detailed information, contact your local authority.
- Follow the battery manufacturer's safety, usage, and disposal instructions.

Power connection:


Insert the USB receiver into the energizing port and plug the other end into the power port.

This product is suitable for general USB interface line, which can be connected to mobile power supply, computer, ordinary and vehicle-mounted power supply, etc.

DISPOSAL

- Coopers of Stortford use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons, packaging in accordance with your local recycling regulations.
- Plastics, polybags – Contains the following recyclable plastic.



Code & Symbol	 OTHER
Type of Plastic	ABS & Polyester
Commonly used for	CD's, crisp packets, various flexible packaging, baby bottles, sunglass lenses
Notes	Not often or widely recycled

- At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.

