

Compact Stand Mixer

K633 v01: 16/03/22

Please read and retain these instructions for future reference

Basilico 



Technical details

220-240V a.c., 50-60Hz 1200W

Dimensions

(H) 29 x (W) 36.5x (D) 23cm

- POWERFUL 1200W MOTOR
- 6 SPEEDS
- PLANETARY ROTATION FOR EVEN MIXING RESULTS
- POP-UP HEAD FUNCTION TO MAKE IT EASY TO CHANGE HEADS
- 5L STAINLESS STEEL BOWL
- SPLASH COVER WITH FLAP TO FEED INGREDIENTS
- SAFETY LOCK
- SILICON NON-SLIP FEET
- 3 METAL ATTACHMENTS INCLUDED
WHISK, DOUGH HOOK, BEATER
- LIGHTWEIGHT ONLY 3.5KG
- EASY TO USE CONTROLS

WARNINGS AND SAFETY INSTRUCTIONS:

WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED:

- READ ALL INSTRUCTIONS BEFORE USE.
- FOR DOMESTIC INDOOR USE ONLY.
- DO NOT USE OUTDOORS OR FOR COMMERCIAL USE.
- BEFORE USE, CHECK THOROUGHLY FOR ANY DEFECTS AND DO NOT USE IF DEFECTS ARE FOUND. TAKE CARE NOT TO DROP THE APPLIANCE AS HEAVY IMPACTS MAY CAUSE INTERNAL DAMAGE.
- BEFORE CONNECTING THE APPLIANCE, CHECK IF THE VOLTAGE INDICATED ON THE BOTTOM OF THE APPLIANCE IS IN ACCORDANCE WITH THE MAINS VOLTAGE IN YOUR HOME.
- CHECK THE APPLIANCE AND POWER CABLE CAREFULLY FOR DAMAGE BEFORE EACH USE.
- THIS APPLIANCE CAN BE USED BY CHILDREN AGED FROM 8 YEARS AND ABOVE, AND PERSONS WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES OR LACK OF EXPERIENCE AND KNOWLEDGE IF THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE IN A SAFE WAY AND UNDERSTAND THE HAZARDS INVOLVED. CHILDREN SHALL NOT PLAY WITH THE APPLIANCE. CLEANING AND USER MAINTENANCE SHALL NOT BE MADE BY CHILDREN WITHOUT SUPERVISION.
- CHILDREN OF LESS THAN 3 YEARS SHOULD BE KEPT AWAY UNLESS CONTINUOUSLY SUPERVISED.
- **SOME PARTS OF THIS PRODUCT CAN BECOME VERY HOT AND CAUSE BURNS. PARTICULAR ATTENTION HAS TO BE GIVEN WHERE CHILDREN AND VULNERABLE PEOPLE ARE PRESENT.**
- THE USE OF ANY ACCESSORY OR ATTACHMENTS NOT RECOMMENDED BY COOPERS OF STORTFORD MAY CAUSE INJURIES AND INVALIDATE ANY WARRANTY YOU MAY HAVE.
- DO NOT LET THE POWER CABLE HANG OVER THE EDGE OF A TABLE OR COUNTER, OR TOUCH HOT SURFACES.
- DO NOT PLACE ON OR NEAR HEAT SOURCES.
- USE ON A LEVEL, STABLE SURFACE.
- DO NOT COVER THE ITEM IN ANY WAY WHEN IN USE AS THIS MAY CAUSE OVERHEATING.
- DO NOT USE THIS APPLIANCE FOR ANY OTHER USE THAN THE INTENDED USE IT IS DESIGNED FOR.

Compact Stand Mixer K633

Instructions for Use

Please read and retain these instructions for future reference

v001: 16/03/22

- ENSURE THERE IS SUFFICIENT DISTANCE BETWEEN THIS APPLIANCE AND OTHER ITEMS ON THE WORK SURFACE OR WORK STATION, OR SUFFICIENT DISTANCE BETWEEN THE APPLIANCE AND THE CONFINES OF THE AREA IN WHICH IT IS SITUATED. WE RECOMMEND A MINIMUM CLEARANCE AROUND ALL FACES OF AT LEAST 10CM.
- TO PROTECT AGAINST ELECTRIC SHOCK, DO NOT IMMERSE POWER CABLE, PLUG OR APPLIANCE, IN WATER OR ANY OTHER LIQUID.
- DO NOT OPERATE ANY APPLIANCE WITH A DAMAGED POWER CABLE OR PLUG OR AFTER THE APPLIANCE MALFUNCTIONS, OR HAS BEEN DAMAGED IN ANY MANNER. WE RECOMMEND THAT THE POWER CABLE IS NOT KINKED OR STORED IN A TWISTED MANNER, AND THAT YOU REGULARLY CHECK ITS CONDITION.
- ANY REPAIRS MUST BE CONDUCTED BY A QUALIFIED ELECTRICIAN OR ELECTRICAL SERVICE AGENT.
- UNPLUG THE APPLIANCE WHEN NOT IN USE, CHANGING ACCESSORY AND BEFORE CLEANING.
- AVOID CONTACTING MOVING PARTS.
- KEEP HANDS AND UTENSILS AWAY FROM MOVING BLADES OR DISCS WHILE PROCESSING FOOD TO REDUCE RISK OF SEVERE INJURY TO PERSON OR DAMAGE TO THE FOOD MIXER.
- TO REDUCE THE RISK OF INJURY, NEVER PLACE CUTTING BLADES OR DISCS ON BASE.
- BE CERTAIN ACCESSORY/TOOL IS SECURELY LOCKED IN PLACE BEFORE OPERATING THE APPLIANCE.
- NEVER FEED FOOD BY HAND, ALWAYS USE FOOD PUSHER.
- DO NOT ATTEMPT TO DEFEAT THE LID INTERLOCK MECHANISM.
- SWITCH OFF THE APPLIANCE BEFORE CHANGING ACCESSORIES OR APPROACHING PARTS WHICH MOVE IN USE.

**The Enterprise
Department**

UK Head Office, 11 Bridge Street, Bishop's Stortford, CM23 2JU

Tel: 0844 4824400*, Fax: 01279 756595

www.coopersofstortford.co.uk

EU address: D.S.B. LD, 160 Bd. de Fourmies, 59100 Roubaix, France

Tel: (+44) 1279 701269

*UK Calls cost around 7 pence per minute plus your telephone company's network access.
Please check with your telephone supplier.

 
Compact Stand Mixer K633

Instructions for Use



Please read and retain these instructions for future reference

v001: 16/03/22

Parts

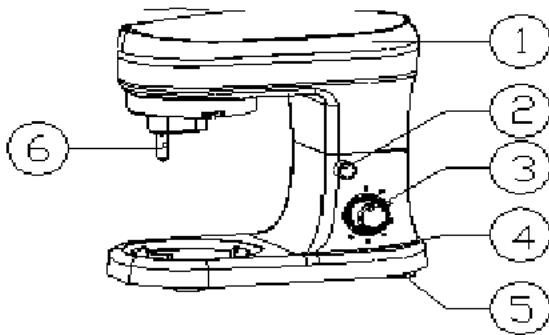

  1. Swivel Arm
2. Release Button
3. Speed Control Knob
4. Body
5. Foot pad
6. Spindle
7. Lid
8. Bowl
9. Whisk
10. Kneading hook
11. Splashguard
12. Flat Beater

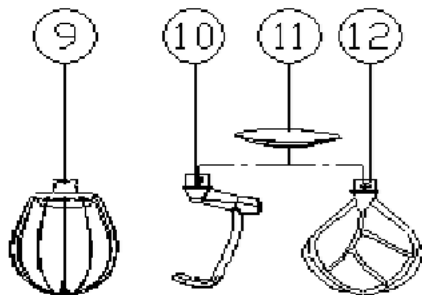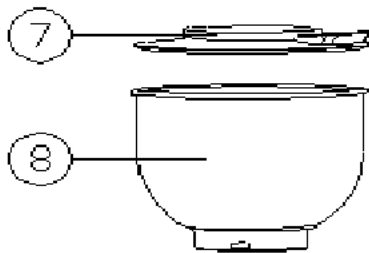

**The Enterprise
Department**

UK Head Office, 11 Bridge Street, Bishop's Stortford, CM23 2JU

Tel: 0844 4824400*, Fax: 01279 756595

www.coopersofstortford.co.uk

EU address: D.S.B. LD, 160 Bd. de Fourmies, 59100 Roubaix, France

Tel: (+44) 1279 701269

*UK Calls cost around 7 pence per minute plus your telephone company's network access.
Please check with your telephone supplier.




Compact Stand Mixer K633

Instructions for Use

Please read and retain these instructions for future reference

v001: 16/03/22






Setting speed

Accessories	Picture	Speed setting	Time	Capacity
Kneading Hook		1, 2, 4	30sec at speed 1, 30sec at speed 2, and 4min at speed 4	700 g flour and 420ml water (Temperature 40+/-5°C.)
Flat beater		4-5	10min	
Whisk		6	10min	

Operating positions

Warning!

Operate the appliance only when the accessory/tool is attached according to this table and is in the operating position.

Item	Position	Accessory		
1.				
2.		Set up Kneading hook, Flat beater, Whisk, as required.		

**The Enterprise
Department**

UK Head Office, 11 Bridge Street, Bishop's Stortford, CM23 2JU

Tel: 0844 4824400*, Fax: 01279 756595

www.coopersofstortford.co.uk

EU address: D.S.B. LD, 160 Bd. de Fourmies, 59100 Roubaix, France

Tel: (+44) 1279 701269

*UK Calls cost around 7 pence per minute plus your telephone company's network access.
Please check with your telephone supplier.

Risk of injury from the rotating tools!

While the appliance is operating, keep fingers clear of the mixing bowl.

Do not change tools until the appliance is at a standstill and has been unplugged. When switching off, the drive continues running briefly.

 
How to use Kneading hook, Flat beater, Whisk

1.



1. Place the appliance on a flat surface, e.g. a kitchen counter, and make sure it is standing firmly.

2.

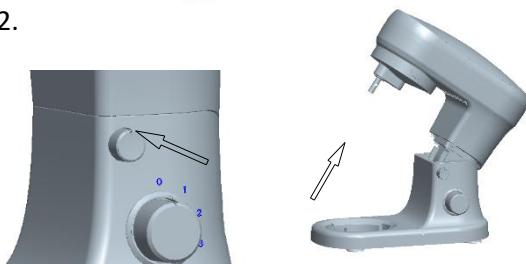

1. Press the arm release button (2) at the same time lift the swivel arm (1) with your hand so that it locks into place with a click. The swivel arm tilts up.

3.



1. Fit the lid (7) onto the swivel arm and turn it slightly clockwise, so that it locks into position securely.

4.



1. Place the food in the mixing bowl (8).

2. Fit the mixing bowl in the recess on the motor house (4).

3. Turn the mixing bowl slightly clockwise, so it locks into position.

Compact Stand Mixer K633

Instructions for Use

Please read and retain these instructions for future reference

v001: 16/03/22

5.



1. Put the splashguard (11) onto the kneading hook (10) as shown in the picture. Turn and fix the hook. The splashguard can prevent the dough from climbing to the top of the hook.

2. Fit the required accessory (11 with 10 or 12) onto the motor spindle (6) on the underside of the swivel arm.

3. A. The kneading hook (10) is used for heavy dough, minced meat or other demanding kneading jobs.

B. The flat beater (12) is used to mix lighter types of dough.

C. The whisk (9) is used for whisking cream, egg whites, etc.

4. Turn the accessory, so the pins on the spindle are aligned with the depressions on the accessory top edge. Press the accessory against the swivel arm and turn it anti-clockwise at the same time until the pins engage and the accessory locks into position securely. The accessory must not be loose nor should you be able to pull it free.

**The Enterprise
Department**

UK Head Office, 11 Bridge Street, Bishop's Stortford, CM23 2JU

Tel: 0844 4824400*, Fax: 01279 756595

www.coopersofstortford.co.uk

EU address: D.S.B. LD, 160 Bd. de Fourmies, 59100 Roubaix, France

Tel: (+44) 1279 701269

*UK Calls cost around 7 pence per minute plus your telephone company's network access.
Please check with your telephone supplier.

 
Compact Stand Mixer K633

Instructions for Use

Please read and retain these instructions for future reference

v001: 16/03/22

6.

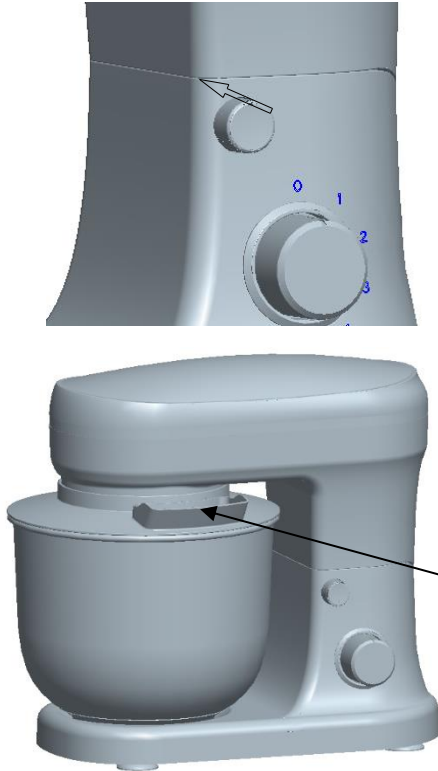

1. Press the arm release button at the same time lowers the swivel arm so that it locks into place with a click. The lid must fit tightly with the mixing bowl, otherwise it is fitted incorrectly. The appliance is now ready for use.

2. Plug the power cord into mains socket.

3. Select the speed you want to use (1-6). Speed 1 is the slowest and speed 6 is the fastest speed.

Recommended speeds, time and capacity are shown in the table above.

Ingredients can be added during operation through the flap in the lid.

4. If you need to scrape inside the mixing bowl, wait until the accessory has stopped completely. Use the spatula, never use your fingers.

7.



1. Switch off the appliance by turning the speed control knob to 0 when you have finished mixing. Switch off the appliance and unplug it before you change the accessories, or before you take the appliance apart or when not in use.

2. Press the arm release button at the same time lift the swivel arm with you hand so that it locks into place with a click, The swivel arm tilts up.

**The Enterprise
Department**

UK Head Office, 11 Bridge Street, Bishop's Stortford, CM23 2JU

Tel: 0844 4824400*, Fax: 01279 756595

www.coopersofstortford.co.uk

EU address: D.S.B. LD, 160 Bd. de Fourmies, 59100 Roubaix, France

Tel: (+44) 1279 701269

*UK Calls cost around 7 pence per minute plus your telephone company's network access.
Please check with your telephone supplier.

Compact Stand Mixer K633

Instructions for Use

Please read and retain these instructions for future reference

v001: 16/03/22

8.

1. Detach the accessory by turning it clockwise.

8.1

2. Remove mixing bowl with prepared food anti-clockwise.



8.2

IMPORTANT!

When adding liquid to the dough during operation the temperature of the liquid should be between 35°C and 45°C.

Capability of bowl

5000mL



CLEANING

When cleaning the appliance, you should pay attention to the following points:

- Remove plug from the mains socket and allow the appliance to cool down before cleaning it.
- Do not immerse the motor section of the appliance in water and make sure no water enters the appliance.
- Clean the motor section by wiping it with a damp cloth. A little detergent can be added if the appliance is heavily soiled.
- Do not use scouring pads, steel wool or any form of strong solvents or abrasive cleaning agents to clean the appliance, as they may damage the outside surfaces of the appliance.
- Take the appliance apart and clean all of the accessories separately. Other parts can be cleaned in warm soapy water or in the dishwasher.
- Be careful not to touch the blades or sharp parts during use and cleaning.
- IMPORTANT! Allow to dry fully after cleaning before using again. Do not use the appliance if damp.
- After washing and drying, immediately place attachment into the protective sleeve for storage.

**The Enterprise
Department**

UK Head Office, 11 Bridge Street, Bishop's Stortford, CM23 2JU

Tel: 0844 4824400*, Fax: 01279 756595

www.coopersofstortford.co.uk

EU address: D.S.B. LD, 160 Bd. de Fourmies, 59100 Roubaix, France

Tel: (+44) 1279 701269

*UK Calls cost around 7 pence per minute plus your telephone company's network access.
Please check with your telephone supplier.

Compact Stand Mixer K633

Instructions for Use

Please read and retain these instructions for future reference

 
v001: 16/03/22

PLUG WIRING (UK & IRELAND)

This appliance is fitted with a BS 1363 13-amp plug. If you have to replace the fuse, only those that are ASTA or BSI approved to BS1362 and with a rated current of 13-amperes should be used. If there is a fuse cover fitted, this cover must be re-fitted after changing the fuse. If the fuse cover is lost or damaged the plug must not be used. Spare fuse holders and fuses are available from electrical outlets. If the socket outlets in your home or office are not suitable for this product's plug, the plug must be removed and disposed of safely. Attempts to insert the plug into the wrong socket is likely to cause electric hazard. A replacement plug should be wired according to the following instructions:

The cable

A mains electricity cable contains two or three inner wires. Each has a core of copper and an outer layer of flexible plastic. This product is earthed; the wires in the cord set are colour coded in the following way:

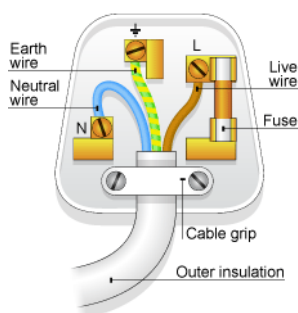


BLUE	NEUTRAL
BROWN	LIVE
GREEN & YELLOW	EARTH

The diagram shows the key features of a correctly wired three-pin mains plug.

DISPOSAL

- Coopers of Stortford use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons, packaging in accordance with your local recycling regulations.
- Plastics, polybags – Contains the following recyclable plastic.



Code & Symbol	 OTHER
Type of Plastic	ABS
Commonly used for	CD's, crisp packets, various flexible packaging, baby bottles, sunglass lenses
Notes	Not often or widely recycled

The Enterprise Department

UK Head Office, 11 Bridge Street, Bishop's Stortford, CM23 2JU

Tel: 0844 4824400*, Fax: 01279 756595

www.coopersofstortford.co.uk

EU address: D.S.B. LD, 160 Bd. de Fourmies, 59100 Roubaix, France

Tel: (+44) 1279 701269

*UK Calls cost around 7 pence per minute plus your telephone company's network access.
Please check with your telephone supplier.

Compact Stand Mixer K633

Instructions for Use

Please read and retain these instructions for future reference

v001: 16/03/22

- At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.



**The Enterprise
Department**

UK Head Office, 11 Bridge Street, Bishop's Stortford, CM23 2JU

Tel: 0844 4824400*, Fax: 01279 756595

www.coopersofstortford.co.uk

EU address: D.S.B. LD, 160 Bd. de Fourmies, 59100 Roubaix, France

Tel: (+44) 1279 701269

*UK Calls cost around 7 pence per minute plus your telephone company's network access.
Please check with your telephone supplier.