

# geemarc™ AMPLIDECT™ 595 Photo

Hear the Difference

Amplified cordless telephone with  
answering machine



English

# TABLE OF CONTENTS

<b>1.</b>	<b>IMPORTANT SAFETY INSTRUCTIONS</b> .....	<b>1</b>
<b>2.</b>	<b>SET UP THE TELEPHONE</b> .....	<b>2</b>
2.1	Package Contents .....	2
2.2	Location .....	2
2.3	Connect the Corded Base Station .....	3
2.4	Install and Charge the Handset Battery .....	4
<b>3.</b>	<b>GET TO KNOW YOUR PHONE</b> .....	<b>5</b>
3.1	Overview of the Handset .....	5
3.2	Overview of the Corded Base.....	8
3.3	Handset LCD Display Icons and Symbols.....	10
3.4	Handset Menu Structure.....	11
3.5	Text and Digit Entry Table.....	12
3.5.1	English Character Set .....	12
<b>4.</b>	<b>USE YOUR PHONE</b> .....	<b>13</b>
4.1	Make an External Call .....	13
4.1.1	Preparatory Dialing .....	13
4.1.2	Direct Dialing.....	13
4.1.3	Call from the Phonebook.....	13
4.1.4	Call from the Call List .....	13
4.1.5	Call from one picture big button memories .....	13
4.1.6	Call from the redial list .....	14
4.1.7	Call timer.....	14
4.2	Answer a Call .....	14
4.3	BOOSTER Function.....	14
4.4	End a Call .....	15
4.5	Adjust Earpiece and Speakerphone Volume.....	15
4.6	Mute a Call .....	15
4.7	Redial the Last Number.....	16
4.7.1	Redial a Number from the Redial List .....	16
4.7.2	Store a Redial Number into the Phonebook.....	16
4.7.3	Delete a Redial Number .....	16
4.7.4	Delete the Entire Redial List .....	16
4.8	Find the Handset.....	17
4.9	Make an Internal Call.....	17
4.9.1	Intercom .....	17
4.9.2	Call All Handsets .....	18
4.9.3	Transfer an External Call .....	18
4.9.4	Make a 3-way Conference Call .....	18
<b>5</b>	<b>PHONEBOOK</b> .....	<b>19</b>
5.1	Add a New Phonebook Entry .....	19
5.2	Search for a Phonebook Entry.....	19
5.3	View a Phonebook entry.....	19

5.4	Edit a Phonebook Entry.....	20
5.5	Delete a Phonebook Entry.....	20
5.6	Delete the Entire Private Phonebook .....	20
5.7	Check the Phonebook Usage .....	21
5.8	Set the Fast Dial Numbers.....	21
5.8.1	Add or Edit the Fast Dial Number .....	21
5.8.2	Delete one or all Speed Dial Number .....	21
5.9	VIP setting.....	22
5.9.1	Set the VIP number.....	22
5.9.2	View the VIP list .....	22
5.9.3	Delete or delete all VIP number.....	22
5.9.4	Status of the VIP .....	22
<b>6</b>	<b>CALLER DISPLAY (NETWORK DEPENDENT).....</b>	<b>23</b>
6.1	View the Call List.....	23
6.2	More information on the call log.....	23
6.3	Store a Call List Number into the Phonebook .....	23
6.4	Store a call list number into the black list.....	23
6.5	Delete an Entry in the Call List .....	24
6.6	Delete the Entire Call List.....	24
<b>7</b>	<b>PICTURE BIG BUTTON MEMORY (BASE) .....</b>	<b>25</b>
7.1	Setting a picture big button memory .....	25
<b>8</b>	<b>BLACK LIST FUNCTION .....</b>	<b>26</b>
8.1	Record or edit a black list number.....	26
8.2	Check or edit the information of the phone number blocked.....	26
8.3	Delete an or all black list number .....	26
8.4	Activation of the black list function .....	26
8.5	Activation of the function for the private or unavailable number .....	27
<b>9</b>	<b>PHONE SETTINGS .....</b>	<b>28</b>
9.1	Handset Settings .....	28
9.1.1	Set the Ringer Melody for Internal Calls .....	28
9.1.2	Set the Ringer Melody for External Calls .....	28
9.1.3	Set the Ringer Volume .....	29
9.1.4	Set Alert Tones .....	29
9.1.5	Set the Handset Language.....	29
9.1.6	Clock setting .....	30
8.1.6.1	Set the date format .....	30
8.1.6.2	Set the time format .....	30
8.1.6.3	Set the Time & Date .....	30
9.1.7	Registration.....	31
9.1.8	Reset your phone.....	31
9.2	Base Settings.....	32
9.2.1	Set the Ringer Melody .....	32
9.2.2	Set the ringer volume .....	32
9.2.3	Set the Flash Time .....	32
9.2.4	Remove the first ringer .....	32

<b>10</b>	<b>SOS EMERGENCY CALL .....</b>	<b>33</b>
10.1	SOS setting .....	33
10.2	Make a SOS calls.....	33
10.3	Select the SOS language .....	33
10.4	Record SOS message.....	34
10.5	Play SOS message .....	34
10.6	Delete the SOs message.....	34
<b>11</b>	<b>ALARM SETTING .....</b>	<b>35</b>
11.1	Turn ON/OFF the Alarm .....	35
11.2	Rename the Alarm .....	35
11.2	Set the alarm melody.....	36
11.3	Voice memo for the Alarm .....	36
11.4	Play a voice Memo .....	36
11.5	Delete a voice memo.....	36
<b>12</b>	<b>TALKING FUNCTION .....</b>	<b>36</b>
<b>13</b>	<b>ANSWERING MACHINE.....</b>	<b>37</b>
13.1	Switching Answering Machine On/Off.....	37
13.2	Play Messages on TAM.....	37
13.3	Delete all Messages on TAM .....	38
13.4	Record Memos on TAM.....	38
13.5	TAM Settings .....	39
13.5.1	Record your Outgoing Message (OGM) .....	39
13.5.2	Playback the Outgoing Message (OGM) .....	39
13.5.3	Delete a Personalized OGM (SET OGM to DEFAULT) .....	40
13.5.4	Set the Answer Delay .....	40
13.5.5	Set the Recording Time of Incoming Message.....	40
13.5.6	Set the TAM Language.....	41
13.5.7	Turn On or Off the Base Screening .....	41
13.5.8	Activate Remote Access .....	41
13.5.8.1	Change the 4-Digit Remote Access PIN .....	41
13.5.8.2	Activate or Deactivate the Remote access.....	42
13.5.8.3	MSG alert function.....	42
10.5.10.3	Remote Operations .....	42
<b>14</b>	<b>TROUBLESHOOTING.....</b>	<b>44</b>
<b>15</b>	<b>TECHNICAL SPECIFICATIONS.....</b>	<b>47</b>
<b>16</b>	<b>CARE AND MAINTENANCE INSTRUCTIONS.....</b>	<b>48</b>
<b>17</b>	<b>GUARANTEE.....</b>	<b>49</b>
<b>18</b>	<b>DECLARATIONS.....</b>	<b>49</b>

# IMPORTANT SAFETY INSTRUCTIONS

!!! Please refer to our website: [www.geemarc.com](http://www.geemarc.com) for an up to date user guide, as there may be important updates and changes you need to be aware of !!!

**CAUTION:** Use only the battery provided. There may be a risk of explosion if a wrong type of battery is used for the parent unit. The battery cannot be subjected to high or low extreme temperature and low air pressure at high altitude during use, storage or transportation. Disposal of battery into fire or a hot oven, or mechanically crushing or cutting or the battery can result in an explosion. Leaving the battery in an extremely high temperature surrounding environment can result in an explosion or the leakage of flammable liquid of gas. Battery subjected to extremely low air pressure may result in an explosion or the leakage of flammable liquid or gas. Dispose of used battery according to the instructions.

*Normal operating temperature for the product (e.g. 0 °C ~ 40°C).*

Use only the adapters and battery listed below.



Power adapter information: (**Base**) output: 6V DC 0.6A, 3.6W. Ten Pao. Model: S005BNV0600060(EU), S005BNB0600060(UK)

(**Charger**) output: 6V DC 0.45A, 2.7W. Vtech Telecommunications Limited. Model: VT05EEU06045 (EU), VT05EUK06045 (UK)



Rechargeable Battery: Model: KH-AAAJ600-D x 3pcs. 1.2V DC, 600mAh. Corun.

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following:

1. Read and understand all the instructions.
2. Follow all warnings and instructions marked on the product.
3. Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
4. Do not use this product near water (for example, near a bath tub, kitchen sink, swimming pool).
5. Do not expose the telephone to direct sunlight or extreme cold environment. Do not put the telephone close to a heating source such as radiators, cookers, etc.
6. Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.
7. Unplug this product from the wall outlet and refer servicing to the distributor under the following conditions:
  - When the power supply cord or plug is damaged or frayed.
  - If the product does not operate normally by following the operating instructions.
  - If the product has been dropped and the cabinet has been damaged.
  - If the product exhibits a distinct change in performance.
8. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
9. Do not use the telephone to report a gas leak in the vicinity of the leak.
10. Use only the supplied NiMH (Nickel Metal Hydride) battery pack! The operation periods for the handsets are only applicable with the default battery capacities
11. The use of other battery types or non-rechargeable batteries/primary cells can be dangerous. These may cause interference and/or unit damages. The manufacturer will not be held liable for damage arising from such non-compliance.
12. Do not use third party charging bays. The battery may be damaged.
13. Battery should not be exposed to excessive heat such as bright sunshine or fire and immersed in water.

14. For pluggable equipment, the socket-outlet (power adaptor) shall be installed near the equipment and shall be easily accessible.

### Disposal warning

1. When this crossed-out wheeled bin symbol is attached to a product, it means the product is covered by the European Directive 2002/96/EC.
2. All electrical and electronic products/battery should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
3. The correct disposal of your old appliance/battery will help prevent potential negative consequences for the environment and human health.



For more detailed information about disposal of your old appliance/battery, please Contact your city office, waste disposal service or the shop where you purchased the product.

## 2. SET UP THE TELEPHONE

### 2.1 Package Contents

The package contains the following items:

- 1 Base station
- 1 Cordless handset
- 1 AC power adapter
- 3 NiMH rechargeable battery
- 1 Telephone line cord
- 1 User's manual

### 2.2 Location

For maximum coverage and reduce the interference, here are some guidelines you should consider when you place the base unit,

- place it at a convenient, high, and central location with no obstructions between the handset and base unit in an indoor environment.
- place it away from electronic appliances such as televisions, microwave ovens, radios, personal computers, wireless devices or other cordless phones.
- avoid facing radio frequency transmitters, such as external antennas of mobile phone cell stations.
- avoid plugging it into the same circuit as other major household electrical appliances because of the potential for interference. Try moving the appliance or the base unit to another power outlet.

If the reception for a base unit location is not satisfactory, move it to another location for better reception.

 
**Depending on the surrounding conditions as well as spatial and structural factors, the range may be reduced. The range indoors is normally less than outdoors**

## 2.3 Connect the Corded Base Station

Plug the large end of the larger power adapter into an electrical outlet not controlled by a wall switch

Route the cords through the slots.

Plug the small end of the larger power adapter into the power jack on the back of the telephone base.

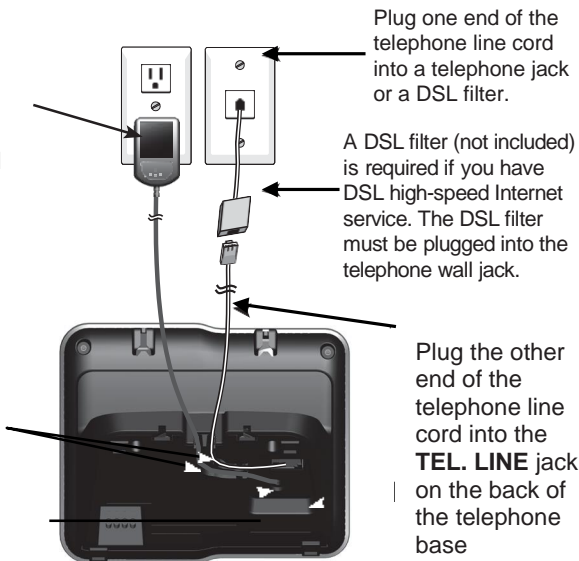

### NOTE

Use only the power adapter supplied with the base station.

 
Classified TNV-3 according to EN62368-1 standard.

Classified "hazardous voltage" according to EN62368-1 standard

## 2.4 Install and Charge the Handset Battery

1. Slide the battery cover downwards.

Install the 3 batteries into the socket as indicated, matching correct polarity (+,-).

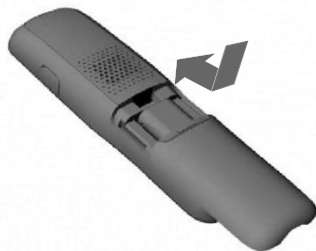

2. Align the cover flat against the battery compartment, and then slide it upwards until it clicks into place.
3. Charge the handset by placing it face forward in the base. You hear a beep when the handset is charging in the charger
4. Charge the batteries for at least 12 hours when charging for the first time.


### NOTES

 - Use only the batteries supplied NiMH rechargeable.  
If you do not use the handset for a long time, disconnect and remove the battery to prevent possible leakage



## 3. GET TO KNOW YOUR PHONE

### 3.1 Overview of the Handset

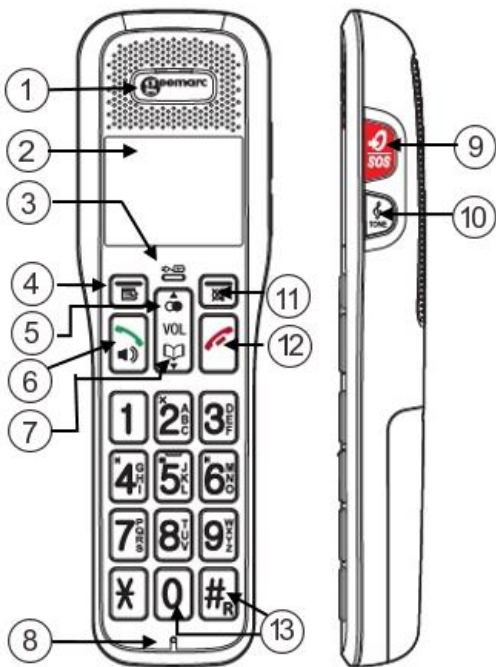

**1. EARPIECE**

**2. LCD DISPLAY**

**3. CHARGE LIGHT (  )**

Steadily on when the handset is charging in the charger.

**4. SOFT KEYS MENU/OK**



In idle mode: Press to access the main menu.

In sub-menu mode: Press to confirm the selection.

During a call: Press to access Intercom / Phonebook / Redial list / Call log.

**5. UP/CALL LIST** 

In idle mode: Press to access the call list.

In menu mode: Press to scroll up the menu items.

In phonebook list/redial list/call list: Press to scroll up the list.

In editing mode: Press to move the cursor one character to the left. During a call: Press to increase the listening volume.

**6. TALK ON**  **Speakerphone** 

In idle/pre-dial mode: Press to make a call in earpiece mode.

In phonebook/redial list/call list: Press to make a call to the selected entry in the list in earpiece mode.

During ringing: Press to answer a call in earpiece mode.

During a call: Press to make the call in speakerphone mode.

**7. DOWN/ PHONEBOOK LIST** 

In idle mode: Press to access the Phonebook list.

In menu mode: Press to scroll down the menu items.

In phonebook list/redial list/call list: Press to scroll down the list.

In editing mode: Press to move the cursor one character to the right. During a call: Press to decrease the listening volume.

**8. MICROPHONE****9. BOOSTER**  **SOS KEY**

During a call: Press to activate/deactivate the BOOSTER function.

In idle mode: Press and hold for a second to enter the emergency calling sequence set in your handset.

During the alarm ringing: Press and hold for a second to stop the emergency calling sequence set in your handset.

**10. TONE KEY**

Press the key to modify the Tonality (treble, standard or bass)

**11. INT/MUTE/CLEAR** 

In main menu mode: Press to go back to idle screen.

In sub-menu mode: Press to go back to previous menu.

editing/pre-dial mode: Press to delete a character/digit.

In editing/pre-dial mode: Press and hold to delete all the characters/digits. During a call: Press to mute/resume the microphone.

In idle mode: Press to intercom another handset.

## 12. TALK OFF

During a call: Press to end a call and go back to idle screen. In

In menu/editing mode: Press to go back to idle screen.

## 13. ALPHANUMERIC KEYPAD, HARSH R# or 0

 
In pre-dial or editing mode: Press to insert a digit / character / 0/ #;

R# key in idle mode: Press and hold to make a flash.

During a call: Press to answer a new call if you subscribed to Call Waiting service from your service provider.

**0 key in idle/pre-dial mode/number editing mode:** Press and hold to insert a pause.

## 3.2 Overview of the Base

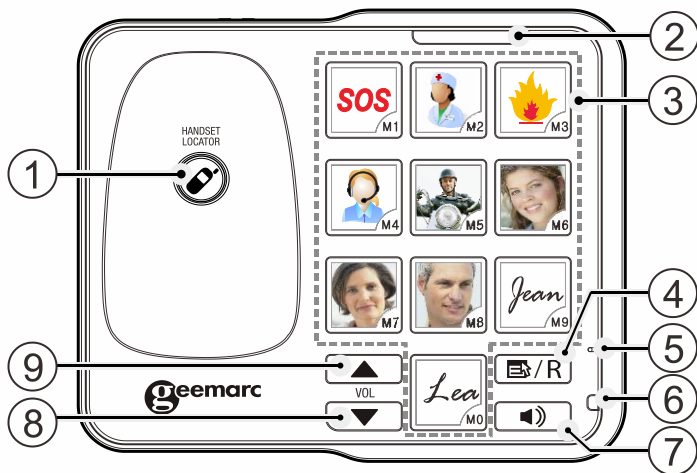

### 1. /HANDSET LOCATOR

While the phone is idle, press to page all handsets.

### 2. IN USE

**On** when handsets are in use, or when the answering system is answering an incoming call.

**On** when a handset is being registered.

**Flashes** when there is an incoming call or in page mode.

**Flashes** when there is another phone on the line on line.

### 3. PICTURE BUTTONS

10 big picture memory buttons or to dial a phone number from the base.

### 4. FLASH / PROG / R

**On line:** Press the key to make a recall

**In idle mode:** Press this key to program the picture memory buttons.


**5. MICROPHONE**

**6. SPEAKER MODE INDICATOR**

On when the speaker is on.


**7. SPEAKERPHONE KEY** 

**NOTE:** wait 2 seconds before to dialling the phone number.

**8. VOL** (  )

**During speaker mode**, press to decrease the speaker volume.

**While in idle mode**, press to decrease the base ringer volume.

 
**9. VOL** (  )

**While in idle mode**, press to increase the base ringer volume.

**During speaker mode**, press to increase the speaker volume

### 3.3 Handset LCD Display Icons and Symbols



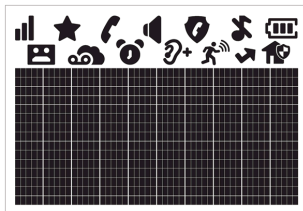









The screen display gives you information on the current status of the telephone.





















	Indicates the current signal strength. More bars indicate more signal strength. If the handset is too far from the base, this icon will disappear on the LCD
	Steadily on when a call is in progress or an intercom is in progress. Flashes when there is an incoming call.
	Steadily on when the speakerphone is turned on.
	Steadily on when the battery is fully charged. Animates when battery is charging.
	Beep and Flashes when low battery is detected to indicate that it needs charging.
	Steadily on when the telephone answering machine (TAM) is turned on. Flashes when a new message is received in the answering machine.
	Steadily on when an alarm is set. Flashes when the alarm time set before reaches.
	Steadily on when there are received new Voice Message Waiting (VMWI) not yet read. Disappears when all the voice messages have been read.
	Steadily on when any block mode/ w/o num is enabled. Display in the call list for the blocked call entry.
	Steadily on when the ringer is switched off.
	Steadily on when there is (are) new call(s) in call list.
	Steadily on when the boost function is activated

### 3.4 Handset Menu Structure

In idle mode, pressing **LEFT SOFTKEY** will access the menu. Refer to the following for the menu structure.

Key Press LEFT SOFTKEY            

CALL LOG	PHOTO MEM	PHONEBOOK	CALL BLOCK	INTERCOM
Review Call List	M0	ALL	BLACK LIST	HANSET
	M1	SPEED DIAL	SETTINGS	BASE
	M2	VIP	BLOCK	ALL
Under a selected Call List entry:	M3	Under an PB entry:	MODE	
	M4	ADD	W/O NUM	
DETAILS	M5	VIEW		
ADD TO PB	M6	EDIT		
ADD TO BL	M7	DELETE		
DELETE	M8	DELETE ALL		
DELETE ALL	M9	ADD VIP		
		ADD TO SD		
		STATUS		

BS SETTINGS	HS SETTINGS	SET SOS	REMINDER	TLK DIGITS	ANS. SYS.
BS RINGER	RING SETUP	SOS NUMBER	ALARM 1 to 10	ON / OFF	PLAYBACK
RING VOLUME	TONE SETUP		<b>ON/OFF</b>		DEL OLD
FLASH TIME	TEXT LANG	SOS MSG	If <b>ON</b>		MEMO
FIRST RING	DATE & TIME REGISTER		You can program your alarm		TAM ON/OFF
	DEFAU LT	SOS LANG	ONCE		SET TAM
			DAILY		TAM LANG;
			MON-FRI		CALLSCREEN
			SAT-SUN		TAM MSG
					ANS. DELAY
					REC. TIME
					REMOTE ACC.
					CHANGE PIN
					MSG ALERT

### 3.5 Text and Digit Entry Table

The following tables show you where each letter and punctuation character can be found. This will be helpful when storing a name in the phonebook or renaming your handset

In editing mode, a cursor is displayed to indicate the current text entry position. It is positioned at the right of the last character entered.

#### Writing Tips:

- Once a character is selected, the cursor will move to the next position after a short pause.
- You can move the cursor within the text by ▲/▼ to amend the text entry.
- Press **RIGHT SOFTKEY** (↩) on the handset to delete the last character.
- Press and hold **RIGHT SOFTKEY** (↩) on the handset to delete the entire text string.

#### 3.5.1 English Character Set

Key	Alphanumeric Editing (For phonebook name editing and renaming handset)										Number Editing (For phone number editing, date / time editing)
	Key press	1st	2nd	3rd	4th	5th	6th	7th	8th	9th	
1	space	-	1								1
2	A	B	C	2							2
3	D	E	F	3							3
4	G	H	I	4							4
5	J	K	L	5							5
6	M	N	O	6							6
7	P	Q	R	S	7						7
8	T	U	V	8							8
9	W	X	Y	Z	9						9
0	0										0, P (Pause)
*	*	?	/	\	(	)					*
#	#	'	,	-	.	&					#





## 4. USE YOUR PHONE

### 4.1 Make an External Call

#### 4.1.1 Preparatory Dialing

##### Using a handset:


Enter the phone number and press  to dial the number. Press **RIGHT SOFTKEY**  to clear the entry.

#### 4.1.2 Direct Dialing

##### Using a handset:






Press  to take the line, and then dial the phone number.

##### Using the base:

Press  to take the line, and then enter the phone number with the pictures M1 to M9.

#### 4.1.3 Call from the Phonebook

##### Using a handset:






1. Press   to access the phonebook list and press   to select the desired phonebook entry.
2. Press  to dial the selected entry. Press it again to turn on the speakerphone.

#### 4.1.4 Call from the Call List

##### Using a handset:

1. Press  to access the call list.

##### OR

1. Press **LEFT SOFTKEY**  to enter the main menu.
2. Press **LEFT SOFTKEY**  to enter **CALL LOG**
3. Press   to select the desired call list entry.
4. Press  to dial the selected call list entry. Press it again to turn on the speakerphone.

#### 4.1.5 Call from one picture big button memories




##### Using the base:

To use a picture big button memory in idle mode, press and hold the picture until the LED turns on, on the base.

If you want to pass the number from the base to the handset, lift the handset off the base to take the call.

### 4.1.6 Call from the Redial List

#### Using a handset:

1. Press  to access the redial list.
2. Press  to select the desired redial number.
3. Press  to dial the selected redial number. Press it again to turn on the speakerphone.


### 4.1.7 Call Timer

Your handset automatically times the duration of each call. The call timer will display a few seconds after the call has ended. It is shown in hours, minutes and seconds format (HH:MM: SS).

## 4.2 Answer a Call

#### Using a handset:

If the handset is not on the charging cradle or the base station:

When the phone rings, press  to answer a call. Press it again to turn on the speakerphone.



If the handset is on the charging cradle or the base station: When the phone rings, pick up the handset to answer a call.

## 4.3 BOOSTER Function


The BOOSTER function allows you to amplify the handset earpiece volume to compensate for the ear's limited sensitivity.

#### Using a handset:

##### To turn on the BOOSTER function:

- Press  SOS at any time during a call. "BOOST ON" displays on the handset screen and the red LED on the top turns on.
- When the BOOSTER function is activated, press  SOS to increase or decrease the earpiece volume.
- The handset top indicator turns on

##### To turn off the BOOSTER function and return the earpiece volume back to normal:

- Press  SOS again and the handset top indicator will turn off.

#### NOTE:

The audio boost feature will be turned off automatically when the call is ended


## 4.4 End a Call

### Using a handset:

During a call, press  to end the call. **OR**

Put the cordless handset on the charging cradle to end the call.



### Using the base:

Press  to end the call in speakerphone mode



## 4.5 Adjust Earpiece and Speakerphone Volume

There are 6 levels (VOLUME 1 to VOLUME 6) to choose from for each of earpiece and speakerphone volume.

### Using a handset: During a call:

Press   to select volume 1-6. The current setting is shown. When you end the call, the setting will remain at the last selected level.



### Using the Base:

**During a call:** Press   to increase or decrease the speakerphone volume.

## 4.6 Mute a Call

With the call muted, you can talk to someone nearby without letting the caller hear you during a call.

### Using a handset: During a call:




Press **RIGHT SOFTKEY**  to mute the microphone and "MUTE ON" will be displayed on the handset screen. Your caller cannot hear you. Press **RIGHT SOFTKEY**  again to resume the microphone.

## 4.7 Redial the Last Number

You can redial up to 10 of the last numbers called on the cordless. If you have stored a name in the phonebook to match with the number, the name will be displayed instead. The most recently dialed number will be displayed at the top of the redial list.

### 4.7.1 Redial a Number from the Redial List

**Using a handset:**





1. In idle mode, press  to access the redial list.
2. Press  to browse the redial list.
3. Press  to dial the selected redial number.

**NOTE:**

If there is no number in the redial list, the display will show “EMPTY”.




### 4.7.2 Store a Redial Number into the Phonebook

**Using a handset:**

1. Follow Steps 1 and 2 in section 4.7.1.
2. Press **LEFT SOFTKEY**  to select **ADD TO PB**.
3. Press **LEFT SOFTKEY**  And check the phone number.
4. Press **LEFT SOFTKEY**  to enter the name
5. Press **LEFT SOFTKEY**  to save





### 4.7.3 Delete a Redial Number

**Using a handset:**

1. Follow Steps 1 and 2 in section 4.7.1.
2. Press **LEFT SOFTKEY**  and  to select **DELETE**.  
Press **LEFT SOFTKEY**  to confirm

### 4.7.4 Delete the Entire Redial List

**Using a handset:**



1. Follow Steps 1 and 2 in section 4.7.1.
2. Press **LEFT SOFTKEY**  and  to select **DELETE ALL**.
3. Press **LEFT SOFTKEY**  to confirm.  
Press **LEFT SOFTKEY**  to reconfirm

## 4.8 Find the Handset

This feature helps you find the misplaced handset(s).

You can locate the handset by operation on the base station as below.

- In idle mode, press /HANDSETLOCATOR.

All the handsets registered to the base will produce the paging tone, and "PAGING" will flash on the screen. You can stop the paging by pressing  /  /

**RIGHT SOFTKEY**  on any handset or /HANDSET LOCATOR on the base to stop paging.

### NOTE:




If there is an incoming call during paging, the phone will ring with the incoming call instead of paging.

## 4.9 Make an Internal Call

This feature allows you to make internal calls, transfer external calls and make conference calls. If the called handset is not answered within 60 seconds, it will stop ringing and the calling one will return to standby mode.

### 4.9.1 Intercom

#### Using a handset:


1. In idle mode, press **RIGHT SOFTKEY**  and the numbers of the registered handsets or base will display except the calling handset.
2. Select the desired handset number or base you want to intercom with.
3. The called handset or base rings. Press  on the called handset to establish the internal call or  on the base.

#### Using the Handset

If you receive a call on the base in speaker mode, the call is automatically transferred on the handset if the handset is removed from the base.








## 4.9.2 Call All Handsets

### Using a handset:

1. In idle mode, press **RIGHT SOFTKEY**  and the numbers of the registered handsets will display except the calling handset.
2. Select **ALL** to ring to all registered handsets.

## 4.9.3 Transfer an External Call


### Using a handset: During an external call:

1. Press **LEFT SOFTKEY**  and   to select **INTERCOM**.
2. Press **LEFT SOFTKEY**  to select the desired handset you want to intercom with.
3. Press **LEFT SOFTKEY**  and the external call is put on hold automatically and the called handset rings.
4. Press  on the called handset to establish an internal call.
5. Press  on the calling handset or put the calling handset on the charging cradle to end the current call with the external party.
6. The external call is transferred to the called handset.

## 4.9.4 Make a 3-way Conference Call

The conference call feature allows one external call to be shared with the base and cordless handset or two cordless handsets. The three parties can share the conversation and no network subscription is required.

### Using a handset: During the external call:

1. Follow Steps 1 to 4 in section 4.9.3.
2. Press and hold  on the calling handset to establish the conference call.

### **NOTE:**








Any party (corded base or cordless handset) hangs up during a conference call will leave the other party still in connection with the external call

## 5 PHONEBOOK

Your phone can store up to 50 private phonebooks in the cordless handset and the telephone base with names and numbers. Each phonebook entry can have a maximum of 20 digits for the phone number and 12 characters for the name. Phonebook entries are stored alphabetically by name.


### 5.1 Add a New Phonebook Entry

**Using a handset: In idle:**

1. Press **LEFT SOFTKEY**  and **▲ ▼** to select **PHONEBOOK** main menu item and then press **LEFT SOFTKEY**  to select **ALL**.
2. Press **LEFT SOFTKEY**  to access the phonebook list.
3. Press **LEFT SOFTKEY**  to select **ADD**.
4. Press **LEFT SOFTKEY**  and enter the number.
5. Press **LEFT SOFTKEY**  and enter the name.
6. Press **LEFT SOFTKEY**  to store the phonebook entry.




### 5.2 Search for a Phonebook Entry

**Using a handset: In idle:**

1. Enter the phonebook list by press the key  **▼**.
2. Enter the first character of your desired name of the phonebook entries by multi-tap.


 




### 5.3 View a Phonebook Entry

**Using a handset: In idle:**

1. Repeat the steps 1 to 2 in section 5.1 or press directly  **▼**.
2. Press **▲ ▼** to select the desired phonebook entry.
3. Press **LEFT SOFTKEY**  and **▲ ▼** to select **VIEW**. Press **LEFT SOFTKEY**  and **▲ ▼** to see the number of the selected phonebook entry.

## 5.4 Edit a Phonebook Entry





Using a handset: In  
idle:

1. Repeat the steps 1 to 2 in section 5.1 or press directly ▼.
2. Press ▲▼ to select the desired phonebook entry.
3. Press **LEFT SOFTKEY**  and ▲▼ to select **EDIT**.
4. Press **LEFT SOFTKEY**  and the current contents of the selected phonebook entry displays.
5. Edit the number and press **LEFT SOFTKEY** .
6. Edit the name and press **LEFT SOFTKEY** .
7. Press **LEFT SOFTKEY**  to confirm the setting.

Note: Use the **RIGHT SOFTKEY**  to delete a character or an digit.





## 5.5 Delete a Phonebook Entry

Using a handset: In  
idle:

1. Repeat the steps 1 to 2 in section 5.1 or press directly ▼.
2. Press ▲▼ to select the desired phonebook entry.
3. Press **LEFT SOFTKEY**  and ▲▼ to select **DELETE**.
4. Press **LEFT SOFTKEY**  to valid.
5. Press **LEFT SOFTKEY**  to confirm.

## 5.6 Delete the Entire Private Phonebook

Using a handset: In  
idle:






1. Repeat the steps 1 to 2 in section 5.1 or press directly ▼.
2. Press **LEFT SOFTKEY**  and ▲▼ to select **DELELE ALL**.
3. Press **LEFT SOFTKEY**  to valid.  
Press **LEFT SOFTKEY**  to confirm



## 5.7 Check the Phonebook Usage

You can check how many phonebook entries have been occupied in your phone and how many phonebook entries are available for you to store in the phonebook.

### Using a handset:








1. Repeat the steps 1 to 2 in section 5.1 or press directly  ▼.
2. Press **LEFT SOFTKEY**  and ▲ ▼ to select **STATUS**.
3. Press **LEFT SOFTKEY** , the display shows "XX/50" (XX refer to the number of phonebook entries).
4. Press **RIGHT SOFTKEY**  or  to EXIT.

## 5.8 Set the Speed Dial Numbers







After setting the speed dial numbers, you can dial to the pre-set numbers by pressing and holding the respective digit keys from idle mode.

### 5.8.1 Add or Edit the Speed Dial Number

#### Using a handset:




1. Press **LEFT SOFTKEY**  and ▲ ▼ to select **PHONEBOOK**.
2. Press **LEFT SOFTKEY**  and ▲ ▼ to select **SPEED DIAL**.
3. Press **LEFT SOFTKEY**  and ▲ ▼ to select from **KEY 1** to **KEY 9**.
4. Press **LEFT SOFTKEY**  and select **ADD**.
5. Press **LEFT SOFTKEY**  and enter the **NUMBER**.
6. Press **LEFT SOFTKEY**  and enter the **NAME**.
7. Press **LEFT SOFTKEY**  to save

Or if there is already a number stored in the selected key:

4. Press **LEFT SOFTKEY**  and ▲ ▼ to select **EDIT**.
5. Press **LEFT SOFTKEY**  and modify the **NUMBER** with the **RIGHT SOFTKEY** .
6. Press **LEFT SOFTKEY**  and modify the **NAME** with the **RIGHT SOFTKEY** .
7. Press **LEFT SOFTKEY**  to confirm.




### 5.8.2 Delete one or all Speed Dial Number

#### Using a handset:

1. Repeat the steps 1 to 3 in section 5.8.1.
2. Press **LEFT SOFTKEY**  and ▲ ▼ to select **DELETE** or **DELETE ALL**.
3. Press **LEFT SOFTKEY**  to valid.
4. Press **LEFT SOFTKEY**  to confirm






### 5.9.1 Set the VIP number

Using a handset:

1. Press **LEFT SOFTKEY**  and **▲▼** to select **PHONEBOOK**.
2. Press **LEFT SOFTKEY**  and **▲▼** to select **ALL**.
3. Press **LEFT SOFTKEY**  and **▲▼** to select the phone number.
4. Press **LEFT SOFTKEY**  and **▲▼** to select **ADD VIP**.
5. Press **LEFT SOFTKEY**  to save.







### 5.9.2 View the VIP list

Using a handset:

1. Press **LEFT SOFTKEY**  and **▲▼** to select **PHONEBOOK**.
2. Press **LEFT SOFTKEY**  and **▲▼** to select **VIP**.
3. Press **LEFT SOFTKEY**  and **▲▼** to select the phone number.
4. Press **LEFT SOFTKEY**  and **▲▼** to select **VIEW**.
5. Press **LEFT SOFTKEY**  to access at the information







### 5.9.3 Delete or delete all the VIP number

Using a handset:

1. Press **LEFT SOFTKEY**  and **▲▼** to select **PHONEBOOK**.
2. Press **LEFT SOFTKEY**  and **▲▼** to select **VIP**.
3. Press **LEFT SOFTKEY**  and **▲▼** to select the phone number.
4. Press **LEFT SOFTKEY**  and **▲▼** to select **Delete or delete all**.
5. Press **LEFT SOFTKEY**  to valid
6. Press **LEFT SOFTKEY**  to confirm

### 5.9.4 Status of the VIP

Using a handset:

1. Press **LEFT SOFTKEY**  and **▲▼** to select **PHONEBOOK**.
2. Press **LEFT SOFTKEY**  and **▲▼** to select **VIP**.
3. Press **LEFT SOFTKEY**  and **▲▼** to select **STATUS**.
4. Press **LEFT SOFTKEY**  to confirm The display shows "XX/50" (XX refer to the number of VIP entries)
5. Press **RIGHT SOFTKEY**  or  to EXIT.

## 6 CALLER DISPLAY (NETWORK DEPENDENT)

This feature is available if you have subscribed the Caller Line Identification service with your network service provider. Your phone can store up to 20 received calls on the cordless handset with date/time information in the call list. The number will be shown on the LCD when the phone is ringing. If the number matches with one of the entries in your Private Phonebook, the caller's name stored in the private phonebook will be displayed with the number. The phone will ring with the melody associated with that phonebook entry.

If the caller number is disabled to send caller information, "UNAVAIL" will be displayed.

If the call is an international call or with unknown number, "OUT OF AREA" will be displayed.

In standby, if three unanswered calls are received, "3 NEW CALLS" will be displayed.





### 6.1 View the Call List

All unanswered calls are saved in calls log with the latest call putting at the top of the list. When the call list is full, the oldest call will be replaced by a new call. The unanswered call which has not been read is marked with ★ icon.

Using a handset:





1. Press **LEFT SOFTKEY**  and **▲▼** to select **CALL LOG**.
2. Press **LEFT SOFTKEY**  and **▲▼** to see the desired call list entry.

### 6.2 More information on the call log

1. Follow Section 6.1 to access the call list.
2. Press **LEFT SOFTKEY**  and **▲▼** to select **DETAILS**  
You will have the Name and the date & hours of the call missing
3. Press **LEFT SOFTKEY**  to see the phone number
4. Press **RIGHT SOFTKEY**  or  to EXIT

### 6.3 Store a Call List Number into the Phonebook





Using a handset:

1. Follow Section 6.1 to access the call list.
2. Press **LEFT SOFTKEY**  and **▲▼** to select **ADD TO PB**.
3. Press **LEFT SOFTKEY**  and the selected call list number will be displayed.
4. Press **LEFT SOFTKEY**  and enter the Name.
5. Press **LEFT SOFTKEY**  to confirm.

## 6.4 Store a Call List Number into the Black list




### Using a handset:

If you want blocked one phone number, make the procedure following to place the number in the Black List

1. Follow Section 6.1 to access the call list.
2. Press **LEFT SOFTKEY**  and **▲▼** to select **ADD TO BL.**
3. Press **LEFT SOFTKEY**  and the selected call list number will be displayed.
4. Press **LEFT SOFTKEY**  and enter the Name.
5. Press **LEFT SOFTKEY**  to confirm




## 6.5 Delete an Entry in the Call List

### Using a handset:

1. Follow Section 6.1 to access the call list.
2. Press **LEFT SOFTKEY**  and **▲▼** to select **DELETE.**
3. Press **LEFT SOFTKEY**  to valid.
4. Press **LEFT SOFTKEY**  to confirm.

## 6.6 Delete the Entire Call List

### Using a handset:



1. Follow Section 6.1 to access the call list.
2. Press **LEFT SOFTKEY**  and **▲▼** to select **DELETE ALL.**
3. Press **LEFT SOFTKEY**  to valid.
4. Press **LEFT SOFTKEY**  to confirm

# 7. PICTURE BIG BUTTON MEMORIES






## 7.1 setting a picture big button memories

### *On the base*

You have the choice to store 10 picture memories.







**In idle mode:** Press , enter the phone number with the key M0 to M9 of the base, Press  and press the picture memory button that you have chosen.

### *Using the handset:*

- 1) Press LEFT SOFTKEY , use ▼▲ to select **PHOTO MEM**,
- 2) Press LEFT SOFTKEY , use ▼▲ to select **M1 to M0**,
- 3) Press LEFT SOFTKEY , select **ADD** or **EDIT** if number.
- 4) Press LEFT SOFTKEY , enter number
- 5) Press LEFT SOFTKEY , enter name then **OK** to save

## 7.2 Record a voice tag at one Photo memory



You have the option to enter a voice name at one Photo memory

1. Press LEFT SOFTKEY , use ▼▲ to select **PHOTO MEM**,
2. Press LEFT SOFTKEY , use ▼▲ to select **M1 to M0**,
3. Press LEFT SOFTKEY , select **VOICE TAG**.
4. Press LEFT SOFTKEY , use ▼▲ to select **RECORD**
5. Press LEFT SOFTKEY , enter talking name then **OK** to save
6. Press RIGHT SOFTKEY  or  to EXIT

If you receive a call with the number registered with a voice tag, you can hear the voice name on the base and on the handset.

**NOTE:** To use a picture big button memory in idle mode, press and hold the picture until the LED turns on, on the base.







If you want to pass the number from the base to the handset, lift the handset off the base to take the call.

If the handset is not placed on the base, press  to take the line and press  on the base to stop the call.

## 8. BLACK LIST FUNCTION





This feature allows you to block calls from the numbers you have entered. You have the option to put up to 100 contacts and choose whether you reject all calls, all calls except the VIP contact list, all private or unknown numbers.

### 8.1 Record or Edit a black list number





1. Press  and ▲/▼ to select **CALL BLOCK**
2. Press  and ▲/▼ to select **BLACK LIST**
3. Press  to select **ADD** or **EDIT**.
4. Press  and enter the number.
5. Press  and enter the name.
6. Press  to store the phonebook entry.

### 8.2 Check or edit the information of the phone number blocked

With this function, you have the possibility to check the black list number







1. Follow steps from 1 to 2 in section 8.1
2. Press  and ▲/▼ to see the desired blocked phone number
3. Press  and ▲/▼ to select **VIEW** .
4. Press  to see the name and the phone number
5. Press  to exit

### 8.3 Delete an or all black list number

1. Follow steps from 1 to 2 in section 8.1
2. Press  and ▲/▼ to choose the desired blocked phone number
3. Press  and ▲/▼ to select **DELETE** or **DELETE ALL** .
4. Press  and the display shows “**CONFIRM?**”.
5. Press  to confirm.





### 8.4 Activation of the black list function

You have the possibility to block all the incoming calls, authorized only the VIP numbers or to stop the function.

1. Press , and ▼/▲ to select **CALL BLOCK**.
2. Press , and ▼/▲ to select **SETTINGS**
3. Press  and ▼/▲ to select **BLOCK MODE**
4. Press  and choose the type of blocking **OFF**, **BLOCK ALL** or **ALLOW VIP**
5. Press  to confirm your choose and the display shows the icon 

## 8.5 Activation of the function for the Private or Unavailable numbers

You have the possibility to block the private or unavailable numbers only.

1. Follow steps from 1 to 2 in section 8.4
2. Press  and ▲/▼ to select **W/O NUMBER** .
3. Press  and choose the type of blocking **PRIVATE** or **UNAVAILBLE**
4. Press  and ▲/▼ to select **BLOCK**
5. Press  to confirm.





## 9. PHONE SETTINGS

Your phone comes with a selection of settings that you can change to personalize your phone the way you like it to work.

### 9.1 Handset Settings

#### 9.1.1 Set the Ringer Melody for Internal Calls

You can set special melody to personalize your internal ringer. A total of 10 melodies are provided for your selection.

1. Press **LEFT SOFTKEY**  and **▲▼** to select **HS SETTINGS**.
2. Press **LEFT SOFTKEY**  and **▲▼** to select **RING SETUP**.
3. Press **LEFT SOFTKEY**  and **▲▼** to select **INT RING**.
4. Press **LEFT SOFTKEY**  and **▲▼** to select the desired ringer melody for setting ringer melody for internal calls.





**NOTE:**

The respective ringer melody will be played while you are browsing the melody list.

5. Press **LEFT SOFTKEY** to confirm.

#### 9.1.2 Set the Ringer Melody for External Calls

You can set special melody to personalize your external ringer. A total of 10 melodies are provided for your selection.

1. Press **LEFT SOFTKEY**  and **▲▼** to select **HS SETTINGS**.
2. Press **LEFT SOFTKEY**  and **▲▼** to select **RING SETUP**.
3. Press **LEFT SOFTKEY**  and **▲▼** to select **EXT RING**.
4. Press **LEFT SOFTKEY**  and **▲▼** to select the desired ringer melody for setting ringer melody for external calls.

**NOTE:**

The respective ringer melody will be played while you are browsing the melody list.

5. Press **LEFT SOFTKEY**  to confirm.





### 9.1.3 Set the Ringer Volume

You can set the ringer volume level. A total of 6 ringer volume levels including VOLUME OFF are provided for your selection.

1. Press **LEFT SOFTKEY**  and **▲▼** to select **HS SETTINGS**.
2. Press **LEFT SOFTKEY**  and **▲▼** to select **RING SETUP**.
3. Press **LEFT SOFTKEY**  and **▲▼** to select **RING VOLUME**.
4. Press **LEFT SOFTKEY**  and **▲▼** to select the desired ringer volume.

#### **NOTE:**

- The respective ringer volume will be played during your selection.
  - If OFF is selected,  will be displayed on the handset screen.
5. Press **LEFT SOFTKEY**  to confirm.

### 9.1.4 Set Alert Tones

A single beep is emitted when you press a key. You can turn on or off the key tone. You can also turn on the alert tones when low battery and out of range are detected. Low battery tone will be emitted while you are talking with the phone to alert you that you need to charge up your battery.

1. Press **LEFT SOFTKEY**  and **▲▼** to select **HS SETTINGS**.
2. Press **LEFT SOFTKEY**  and **▲▼** to select **tone SETUP**.
3. Press **LEFT SOFTKEY**  and **▲▼** to select **KEY TONE / BATT TONE / RANGE TONE**.
4. Press **LEFT SOFTKEY**  and **▲▼** to select **ON** or **OFF**.
5. Press **LEFT SOFTKEY**  to confirm.

### 9.1.5 Set the Handset Language

You can choose the language to be displayed on the handset screen from a total of 7 languages (English, Français, Deutsch, Nederlands, Italiano, Español, Portugues).






1. Press **LEFT SOFTKEY**  and **▲▼** to select **HS SETTINGS**.
2. Press **LEFT SOFTKEY**  and **▲▼** to select **TEXT LANG**.
3. Press **LEFT SOFTKEY**  and **▲▼** to select your desired language.
4. Press **LEFT SOFTKEY**  to confirm.

## 9.1.6 Clock Settings




You will need to set the correct date and time so that you know when you received answering machine messages or call list entries.

**Using the handset:**





### 9.1.6.1 Set the Date Format

1. Press **LEFT SOFTKEY**  and **▲▼** to select **HS SETTING**.
2. Press **LEFT SOFTKEY**  and **▲▼** to select **DATE & TIME**.
3. Press **LEFT SOFTKEY**  to show **DATE FORM**.
4. Press **LEFT SOFTKEY**  and **▲▼** to select your desired date format (DD--MM--YY or MM--DD--YY).
5. Press **LEFT SOFTKEY**  to confirm.

### 9.1.6.2 Set the Time Format

1. Follow **Set the Date Format** to arrive to **DATE & TIME**.
2. Press **LEFT SOFTKEY**  and **▲▼** to select **TIME FORMAT**.
3. Press **LEFT SOFTKEY**  and **▲▼** to select your desired time format (12 HR or 24 HR).
4. Press **LEFT SOFTKEY**  to confirm.

### 9.1.6.3 Set the Date & Time

1. Follow **Set the Date Format** to arrive to **DATE & TIME**.
2. Press **LEFT SOFTKEY**  and **▲▼** to select **SET DATE**.
3. Press **LEFT SOFTKEY**  and enter the day information. The date entered will be in the format you set in section 9.1.6.1.
4. Press **LEFT SOFTKEY**  and enter the date information. The time entered will be in the format you set in section 9.1.6.2.
5. Press **LEFT SOFTKEY**  to confirm.

**NOTE:**

If time has been set before, the current time will display, otherwise, "HH--MM" will be displayed.

If date has been set before, the current date will display, otherwise, "DD--MM--YY" will be displayed.



## 9.1.7 Registration

**Note:** Handset and base station are pre-registered.

Up to five handsets can be registered to a single base station.

1. On **Base:** press and hold 5 seconds  **/HANDSET LOCATOR** on the base until you hear a beep to enter the registration mode.

**On Handset:**

2. Press **MENU/OK**  Use **▼▲** to select **HS SETTING**
3. Press **MENU/OK**  and use **▼▲** to select **REGISTER**,
4. Press **MENU/OK**  and REGISTERING is display.

After a short delay, if the registration is successful, there will be a confirmation beep, and the handset display will go back to idle mode with the new handset number shown. The base display will also go back to idle mode.

## 9.1.8 Reset Your Phone

You can reset your phone to the default settings. After reset, all your personal settings and call list entries will be deleted, but your phonebook list remains unchanged.





**Using a handset:**

1. Press **LEFT SOFTKEY**  and **▲▼** to select **HS SETTINGS**
2. Press **LEFT SOFTKEY**  and **▲▼** to select **DEFAULT**.
3. Press **LEFT SOFTKEY**  to confirm

## 9.2 Base Settings using the Handset




### 9.2.1 Set the Ringer Melody

You can set special melody to personalize your base external ringer. A total of 5 melodies are provided for your selection.

1. Press **LEFT SOFTKEY**  and **▲▼** to select **BS SETTINGS**.
2. Press **LEFT SOFTKEY**  and **▲▼** to select **BS RINGER**.
3. Press **LEFT SOFTKEY**  and **▲▼** to select the desired ringer melody.
4. Press **LEFT SOFTKEY**  to confirm.





### 9.2.2 Set the Ringer Volume

You can adjust the volume level of the ringer for internal call (INT RING) and external call (EXT RING) separately, with settings from 1 (the quietest) to 5 (loudest), or set it to VOLUME OFF.

1. Press **LEFT SOFTKEY**  and **▲▼** to select **BS SETTINGS**.
2. Press **LEFT SOFTKEY**  and **▲▼** to select **RING VOL.**
3. Press **LEFT SOFTKEY**  and **▲▼** to select the desired volume level list.
4. Press **MENU/OK** to confirm.

### 9.2.3 Set the Flash Time

The default flash time is best suitable for your country and network operator. It is unlikely that you should need to change this setting unless advised to do so.

1. Press **LEFT SOFTKEY**  and **▲▼** to select **BS SETTINGS**.
2. Press **LEFT SOFTKEY**  and **▲▼** to select **FLASH TIME**.
3. Press **LEFT SOFTKEY**  and **▲▼** to select your desired flash time (**SHORT** 100ms, **MEDIUM** 300ms, **LONG** 600ms).
4. Press **LEFT SOFTKEY**  to confirm.

### 9.2.4 Remove the first ring

We can remove the first ring to remove the de-notification or notification from your call waiting.








1. Press **LEFT SOFTKEY**  and **▲▼** to select **BS SETTINGS**.
2. Press **LEFT SOFTKEY**  and **▲▼** to select **FIRST RING**.
3. Press **LEFT SOFTKEY**  and select **ON** or **OFF**.
4. Press **LEFT SOFTKEY**  to valid

## 10. SOS Emergency calls

### 10.1 SOS Settings

You need to set the SOS numbers before you can make SOS emergency calls using the handset.

*Using the handset:*

1. Press **LEFT SOFTKEY**  and **▲/▼** to select **SET SOS**.
2. Press **LEFT SOFTKEY**  to show **SOS NUMBER**.
3. Press **LEFT SOFTKEY**  and **▲/▼** to select the SOS number to edit (**SOS 1**, **SOS 2**, **SOS 3** or **SOS 4**).
4. Press **LEFT SOFTKEY** and select **ADD** or **EDIT** to modify the number stored already.
5. Press **LEFT SOFTKEY**  and enter the phone number
6. Press **LEFT SOFTKEY**  and enter the Name
7. Press **LEFT SOFTKEY**  to confirm or **RIGHT SOFTKEY**  to delete.




### 10.2 Make SOS Emergency Calls

*Using the handset:*

Press and hold **SOS key** on the handset to enter the emergency calling sequence from the **SOS 1** number to **SOS 4** number. A call will be first dialed to the **SOS 1** number. If the **SOS 1** number does not answer in 60 seconds, the call will be made to the **SOS 2** number, and so on.

Note: The other party receiving SOS message must press any number on their phone to open the SOS call. Thereafter by pressing any number on their phone every 2mn will keep the emergency call open else the phone stops the call 10 seconds after.





### 10.3 Select the SOS language

1. Press **LEFT SOFTKEY**  and **▲/▼** to select **SET SOS**.
2. Press **LEFT SOFTKEY**  and **▲/▼** to select **SOS LANG**.
3. Select one of the 4 languages (English, French, Deutsch and Nederland) and Press **LEFT SOFTKEY**  to save.

## 10.4 Record SOS Message

You can record your customized SOS message to be played when you dial out an SOS emergency call.

### *Using the handset:*

1. Press **LEFT SOFTKEY**  and **▲▼** to select **SET SOS**.
2. Press **LEFT SOFTKEY**  and **▲▼** to select **SOS MSG**.
3. Press **LEFT SOFTKEY**  and **▲▼** to select **RECORD**.
4. Press **LEFT SOFTKEY** to start SOS message recording after the beep and "RECORDING" will be displayed.
5. Press **LEFT SOFTKEY**  to save your SOS message.

## 10.5 Play SOS Message

### *Using the handset:*



1. Press **LEFT SOFTKEY**  and **▲▼** to select **SOS SETTINGS**.
2. Press **LEFT SOFTKEY**  and **▲▼** to select **SOS MSG**.
3. Press **LEFT SOFTKEY**  to show **PLAY**.
4. Press **LEFT SOFTKEY**  to start SOS message playback.
5. Press **LEFT SOFTKEY**  to stop SOS message playback.

## 10.6 Delete the SOS Message



### *Using the handset:*

1. Press **LEFT SOFTKEY**  and **▲▼** to select **SET SOS**.
2. Press **LEFT SOFTKEY**  and **▲▼** to select **SOS MSG**.
3. Press **LEFT SOFTKEY**  and **▲▼** to select **DELETE**.
4. Press **LEFT SOFTKEY** to valid, RESET TO DEFAULT is displayed.












# 11. Alarm Settings

You can use this phone to set an alarm clock. When an alarm is set, the  displays on the screen. When the alarm time is reached, the  and "ALARM ON" flash on the screen ringing with the alarm melody for a duration of 45 seconds. You can press any key to disable the alarm.




## NOTES:

- The alarm volume level is the same as the settings of the handset ringer volume. If the handset ringer is set to **OFF**, the alarm still sounds at **VOLUME 1** level.
- During an external call or an internal call, if an alarm is set and when the alarm time is reached, the  and "ALARM ON" will still flash. An alarm tone will be emitted from the earpiece to notify user the alarm time is reached. Once user press any key or press and hold  to disable the alarm, it will revert to the call duration screen.
- During paging or ringing, the alarm will not sound when the alarm time is reached.

## 11.1 Turn on/off the Alarm



- Press **LEFT SOFTKEY**  and  to select **REMINDER**.
- Press **LEFT SOFTKEY**  and  to select the number of your ALARM
- Press **LEFT SOFTKEY**  and select **ON/OFF**.
- Press **LEFT SOFTKEY**  and  to select **ON**
- Press **LEFT SOFTKEY**  and enter the hour and minute.
- Press **LEFT SOFTKEY**  and choose the frequency (**Once, Daily, MON-FRI, SAT-SUN**)
- Press **LEFT SOFTKEY**  and  is displayed.

## 11.2 Rename the Alarm name

- Follow Steps 1 to 2 in section 11.1.
- Press **LEFT SOFTKEY**  and choose **RENAME**.
- Press **RIGHT SOFTKEY**  to delete a character and enter the new name
- Press **LEFT SOFTKEY**  to confirm.





## 11.3 Set the Alarm Melody

- Follow Steps 1 to 2 in section 11.1.
- Press **LEFT SOFTKEY**  and choose melody.

3. Press **LEFT SOFTKEY**  and **▲▼** to choose your melody
4. Press **LEFT SOFTKEY**  to confirm.




#### 11.4 Voice memo for the Alarm

If you record a voice memo, the handset will play your message recorded instead of the alarm melody

1. Follow Steps 1 to 2 in section 11.1.
2. Press **LEFT SOFTKEY**  and select **VOICE MEMO**.
3. Press **LEFT SOFTKEY**  and select **RECORD**
4. Press **LEFT SOFTKEY**  and leave your message after the beep.
5. Press **LEFT SOFTKEY**  to stop the recording




#### 11.5 Play a Voice memo

If you have recorded a voice memo, you can check your message in choose play

1. Follow Steps 1 to 2 in section 11.1.
2. Press **LEFT SOFTKEY**  and select **VOICE MEMO**.
3. Press **LEFT SOFTKEY**  and select **PLAY**
4. Press **LEFT SOFTKEY**  to confirm.

#### 11.6 Delete a Voice memo

If you have recorded a voice memo, you can delete your message in choose play

1. Follow Steps 1 to 2 in section 11.1.
2. Press **LEFT SOFTKEY**  and select **VOICE MEMO**.
3. Press **LEFT SOFTKEY**  and select **DELETE**
4. Press **LEFT SOFTKEY**  to confirm.

## 12 TALKING function

The AD595 is capable of speaking the numbers that you press on the numeric keypad (Talk Keypad).

#### *Using the handset:*

1. Press **LEFT SOFTKEY**  and **▲▼** to select **TLK DIGITS**.
2. Press **LEFT SOFTKEY**  and **▲▼** to select **ON/OFF**.
3. Press **LEFT SOFTKEY**  to Valid.







# 13 ANSWERING MACHINE

Your telephone base includes a telephone answering machine that records unanswered calls when it is on. The answering machine can store up to 59 messages within the maximum recording time of approximately 25 minutes. As well as recording incoming messages, you can record memos for other users of your phone.

## 13.1 Switching Answering Machine On/Off




Using a handset:

1. Press **LEFT SOFTKEY**  and **▼/▲** to select **ANS.SYS**.
2. Press **LEFT SOFTKEY**  and **▼/▲** to select **TAM ON / OFF**.
3. Press **LEFT SOFTKEY**  and **▼/▲** to select **ON** or **OFF**.
4. Press **LEFT SOFTKEY**  to confirm.


## 13.2 Play Messages on TAM

If you have new messages, the display will show e.g. 2 NEW MESSAGE, which means you have 2 new messages. New messages are played first, and then are saved as old messages, until they are deleted. Old messages are played again after all new messages are played completely.

Using the handset:

- 1) Press **LEFT SOFTKEY**  and **▼/▲** to select **ANS. SYS**.
- 2) Press **LEFT SOFTKEY**  to show **PLAYBACK**.
- 3) Press **LEFT SOFTKEY**  again to start message playback and the screen displays the date and hour of the message received.
- 4) During message playback, press **▼/▲** to adjust the message playback volume respectively.

**NOTE:** After new message is played, the new message will be saved as an old message automatically unless it is deleted.

- 5) Press **LEFT SOFTKEY**  and **▼/▲** to select **STOP, FORWARD, PREVIOUS** or **DELETE** to perform the following functions during message playback.

**STOP:** Stop the current message playback and return to the ANS. MACHINE menu.

**FORWARD:** Skip to play the next message. The date and hour information of the next message will display if there is next message.

**PREVIOUS:** Skip to repeat playing the current message from the beginning. The date and hour information of the current message will display.

**DELETE:** Delete the current message and the next message will be played.





- 6) Press **LEFT SOFTKEY**  to confirm the setting.

**NOTE:**

Alternatively, you can use the following shortcut keys to control different operation during message playback.

- Press **5** to stop message playback
- Press **4** to skip to repeat playing the current message from the beginning.
- Press **4** twice to skip backward to the previous message.
- Press **6** to skip to play next message.
- Press **2** to delete the current message playback.
- Press **▲/▼** to adjust the playback volume.

**13.3 Delete all Messages on TAM****Using a handset:**

1. Press **LEFT SOFTKEY**  and **▲/▼** to select **ANS. SYS.**
2. Press **LEFT SOFTKEY**  and **▲/▼** to select **DEL OLD.**
3. Press **LEFT SOFTKEY**  .
4. Press **LEFT SOFTKEY**  again to confirm delete all old messages.





**NOTE:**

You cannot delete new messages, so you will have to play them before trying to delete.


**13.4 Record Memos on TAM**

You can record your memo message for another user. When you record a memo, the message counter will increase by one and the message can be played in the same way as answering machine messages. Memo recording can still function even when the answering machine is turned off.

**Using a handset:**

1. Press **LEFT SOFTKEY**  and **▲/▼** to select **ANS. SYS.**
2. Press **LEFT SOFTKEY**  and **▲/▼** to select **MEMO.**
3. Press **LEFT SOFTKEY**  to start memo recording after the beep and "RECORDING" will be displayed.
4. Press **LEFT SOFTKEY**  to stop memo recording and save the memo.

**OR**

Press **RIGHT SOFTKEY**  to stop memo recording without saving and go back to TAM menu.





 


## 13.5 TAM SETTING

### 13.5.1 Record your outgoing Message (OGM)

You can record your own OGM. When you record your own OGM, it will be used when the answering machine answers the call.







If your personalized OGM is deleted, the pre-set OGM will be restored automatically.

#### Using a handset:

  1. Press **LEFT SOFTKEY**  and **▲/▼** to select **ANS. SYS.**
2. Press **LEFT SOFTKEY**  and **▲/▼** to select **SET TAM.**
3. Press **LEFT SOFTKEY**  and **▲/▼** to select **TAM MSG.**
4. Press **LEFT SOFTKEY**  and **▲/▼** to select **RECORD.**
5. Press **LEFT SOFTKEY**  to start recording your personalized OGM after the beep and "RECORDING" will be displayed on the screen.
6. Press **LEFT SOFTKEY**  to stop and save your personalized OGM. Your newly saved OGM will play automatically. Alternatively, press **RIGHT SOFTKEY**  to return to previous screen without saving the personalized OGM.

### 13.5.2 Playback the Outgoing Message (OGM)

#### Using a handset:

1. Press **LEFT SOFTKEY**  and **▲/▼** to select **ANS. SYS.**
2. Press **LEFT SOFTKEY**  and **▲/▼** to select **SET TAM.**
3. Press **LEFT SOFTKEY**  and **▲/▼** to select **TAM MSG.**
4. Press **LEFT SOFTKEY**  and **▲/▼** to select **PLAY.**
5. Press **LEFT SOFTKEY**  to play your personalized OGM (if you have recorded a personalized OGM before) and "PLAYING ANNC" will be displayed on the screen.
6. Press **LEFT SOFTKEY**  to stop the OGM playback and return to the previous menu.

#### **NOTE:**

If a personalized OGM is not recorded before, the pre-set OGM will be played.

### 13.5.3 Delete a Personalized OGM (SET OGM to DEFAULT)

#### Using a handset:

1. Repeat Steps 1 to 3 in the section 13.5.2.
2. Press **LEFT SOFTKEY**  and **▲/▼** to select **DELETE**.
3. Press **LEFT SOFTKEY**  and **RESET TO DEFAULT** is displayed.

#### NOTE:






Your personalized OGM and return to previous menu and the pre-set OGM is restored automatically.

### 13.5.4 Set the Answer Delay

You can set the number of rings before the answering machine answers and starts playing your OGM. You can set the answering machine to answer after two to ten rings or TIME SAVER.

The TIME SAVER function answers calls after 6 ring signals, until the first new message has been registered then the answering machine switches to answering after approximately 2 signals. This is useful when using remote access; if you call up the answering machine and there is no reply after four rings that means there are no messages recorded and you can hang up before you are charged for the call.






#### Using a handset:

1. Press **LEFT SOFTKEY**  and **▲/▼** to select **ANS. SYS.**
2. Press **LEFT SOFTKEY**  and **▲/▼** to select **SET TAM.**
3. Press **LEFT SOFTKEY**  and **▲/▼** to select **ANS. DELAY**
4. Press **LEFT SOFTKEY**  and **▲/▼** to select your desired answer delay.  
(Available options: **2 RINGS, 4 RINGS, 6 RINGS, 8 RINGS, 10 rings** or **TOLL SAVE**)
5. Press **LEFT SOFTKEY**  to confirm.

### 13.5.5 Set the Recording Time of Incoming Message

You can set the maximum length of the recording time of the incoming messages.

#### Using a handset:

1. Press **LEFT SOFTKEY**  and **▲/▼** to select **ANS. SYS.**
2. Press **LEFT SOFTKEY**  and **▲/▼** to select **SET TAM.**
3. Press **LEFT SOFTKEY**  and **▲/▼** to select **RECORD TIME.**
4. Press **LEFT SOFTKEY**  and **▲/▼** to select your desired recording time  
(Available options: **60S, 120S, 180S, or UNLIMITED**).
5. Press **LEFT SOFTKEY**  to confirm.

### 13.5.6 Set the TAM Language

You can choose the voice prompt language of the answering machine from a total of 4 languages( English, Deutsch, Français and Nederlands).

1. Press **MENU/OK** and ▲/▼ to select **ANS. SYS.**
2. Press **MENU/OK** and ▲/▼ to select **SET TAM.**
3. Press **MENU/OK** and ▲/▼ to select **TAM LANG.**
4. Press **MENU/OK** and ▲/▼ to select the desired voice prompt language for the answering machine and SOS message.
5. Press **MENU/OK** to confirm

### 13.5.7 Turn On or Off the Base Screening

You can select to turn on or off the call screening on base. When the answering machine is set to ON and when there is an incoming message, the base will start call screening automatically after the preset numbers of rings of answer delay.

#### Using a handset:






1. Press **LEFT SOFTKEY**  and ▲/▼ to select **ANS. SYS.**
2. Press **LEFT SOFTKEY**  and ▲/▼ to select **SET TAM.**
3. Press **LEFT SOFTKEY**  and ▲/▼ to select **CALL SCREEN.**
4. Press **LEFT SOFTKEY**  and ▲/▼ to select **ON or OFF.**
5. Press **LEFT SOFTKEY**  to confirm.

### 13.5.8 Activate Remote Access

Your phone lets you check your messages, or otherwise operate your answering machine, by calling the answering machine when you are away from home by entering a 4-digit remote access PIN on a tone-dialing phone. Use the 4-digit remote access PIN code to prevent other people from unauthorized access of your answering machine.





 
#### 13.5.8.1 Change the 4-Digit Remote Access PIN

#### Using a handset:

1. Press **LEFT SOFTKEY**  and ▲/▼ to select **ANS. SYS.**
2. Press **LEFT SOFTKEY**  and ▲/▼ to select **SET TAM.**
3. Press **LEFT SOFTKEY**  and ▲/▼ to select **CHANGE PIN.**
4. Press **LEFT SOFTKEY**  to enter the new 4-digit PIN.
5. Press **LEFT SOFTKEY**  to valid

### 13.5.8.2 Activate or Deactivate the Remote access






#### Using a handset:

1. Press **LEFT SOFTKEY**  and **▲/▼** to select **ANS. SYS.**
2. Press **LEFT SOFTKEY**  and **▲/▼** to select **SET TAM.**
3. Press **LEFT SOFTKEY**  and **▲/▼** to select **REMOTE ACC.**
4. Press **LEFT SOFTKEY**  and **▲/▼** to select **ON or OFF** to turn on or off the remote access respectively.
5. Press **LEFT SOFTKEY**  to confirm.

### 13.5.8.3 MSG ALERT function

This function is done to send a beep when there is a new message
 
#### Using a handset:

1. Press **LEFT SOFTKEY**  and **▲/▼** to select **ANS. SYS.**
2. Press **LEFT SOFTKEY**  and **▲/▼** to select **SET TAM.**
3. Press **LEFT SOFTKEY**  and **▲/▼** to select **MSG ALERT.**
4. Press **LEFT SOFTKEY**  and **▲/▼** to select **ON or OFF** to turn on or off the message alert function.
5. Press **LEFT SOFTKEY**  to confirm.

### 13.5.8.4 Remote Operations

If you are away from your home, you can call your answering machine to switch on or off the answering machine and listen to your messages remotely using another tone-dialing phone.

1. Place a call from a tone-dialing phone.
2. When the answering machine answers the call and starts playing OGM, press **X**.
3. Enter the 4-digit Remote Access PIN (default PIN is 0000).
4. Press the following keys to carry out your desired function.

K	Functions	
	While message is not playing	While message is playing
2		Delete the current message playback
4		Repeat playing the current message from the beginning. Press twice to skip backward to the previous message.
5		Stop the current message playback
6		Skip forward to play the next message
7	Turn on the answering machine	
9	Turn off the answering machine	
*	Enter the 4-digit remote access	

**NOTE:**

- When your answering machine memory is full and the answer mode is in **ANS & RECORD**, the answer mode will change to **ANSWER ONLY** automatically. It will change to **ANS & RECORD** mode automatically after some messages have been deleted.

## 14. TROUBLESHOOTING

If you have difficulty with your phone, please try the suggestions listed below.

Problem	Solutions
<b>My telephone does not work at all.</b>	<ul style="list-style-type: none"><li>• Make sure the battery is installed and charged correctly.</li><li>• For optimum daily performance, return the handset to the telephone base after use.</li><li>• Make sure the power adapter is securely plugged into an outlet not controlled by a wall switch.</li><li>• Make sure the telephone line cord is plugged firmly into the telephone base and the telephone wall jack.</li><li>• Unplug the electrical power to the telephone base. Wait for approximately 15 seconds, then plug it back in. Allow up to one minute for the handset and telephone base to synchronize.</li><li>• Remove and re-insert the battery. If that still does not work, it might be necessary to purchase a new battery.</li><li>• Disconnect the telephone base from the telephone wall jack and plug in a working telephone. If the other telephone does not work, the problem is probably in the wiring or the telephone service. Call your telephone service provider.</li></ul>
<b>Low battery shows on screen.</b>	<ul style="list-style-type: none"><li>• Place the handset in the telephone base for recharging.</li><li>• Remove and re-install the battery and use it until fully depleted, then recharge the handset in the telephone base.</li><li>• If the above measures do not solve the problem, replace the battery.</li></ul>
<b>The battery do not charge in the handset or the handset battery do not accept charge.</b>	<ul style="list-style-type: none"><li>• Make sure the handset is placed in the telephone base correctly.</li><li>• Remove and reinstall the battery, then charge for up to 16 hours.</li><li>• Purchase a new battery.</li></ul>



**There is interference during a telephone conversation. My calls fade out when I am using the handset.**

- The handset may be out of range. Move it closer to the telephone base.
- If you subscribe to high-speed Internet service (digital subscriber line - DSL) through your telephone line, you must install a DSL filter between the telephone base and the telephone wall jack. The filter prevents noise and caller ID problems caused by DSL interference. Please contact your DSL service provider for more information about DSL filters.
- Appliances or other cordless telephones plugged into the same circuit as the telephone base can cause interference
- Try moving the appliance or telephone base to another outlet.
- Other electronic products may cause interference to your cordless telephone. Install your telephone as far away as possible from the following electronic devices: wireless routers, radios, radio towers, pager towers, cellular telephones, digital telephones, intercoms, room monitors, televisions, VCRs, personal computers, kitchen appliances, and other cordless telephones.
- If your telephone is plugged in with a modem or a surge protector, plug the telephone (or modem/surge protector) into a different location. If this doesn't solve the problem, re-locate your telephone or modem farther apart from each other, or use a different surge protector.
- The location of your telephone base can impact the performance of your cordless phone. For better reception, install the telephone base in a centralized location within your home or office, away from walls or other obstructions. In many environments, elevating the telephone base improves overall performance.
- Disconnect the telephone base from the telephone wall jack and plug in a corded telephone. If calls are still not clear, the problem is probably in the wiring or telephone service.
- Contact your telephone service provider (charges might apply).
- If the other telephones in your home are having the same problem, the problem is in the wiring or telephone service.

---

**Common cure for electronic equipment.**



If the telephone is not responding normally, put the handset in the telephone base. If it does not respond, try the following (in the order listed):

- Disconnect the power to the telephone base.
  - Disconnect the batteries on the handset.
  - Wait a few minutes before connecting power to the telephone base.
  - Re-install the batteries and place the handset in the telephone base.
  - Wait for the handset to synchronize with the telephone base. Allow up to one minute for this to take place.
- 

This telephone is not equipped with a grounding function! Therefore some of the functions may be limited when used in PBX systems.

Please contact the technical support of the network provider for further information.

# 15. TECHNICAL SPECIFICATIONS

Basic Information	
Valid range	Indoor: 50m Outdoor: 300m
Handset Operating Time	Standby time: 100Hours approx. Talk time: 10Hours approx.
RF Parameter	
Frequency	1.88GHz to 1.9GHz
Number of Channels	10
RF power	<250mW
Power Supply	
Base	Input 100-240V 50/60Hz; Output DC6V  0.6A, 3.6W adapter
Charger	Input 100-240V 50/60Hz; Output DC6V  0.45A, 2.7W adapter
Handset	3 batteries AAA 1.2V/600mAh rechargeable
Ringer level	
Base	80 dB at 1 meter
Handset	80 dB at 1 meter

# 16. CARE AND MAINTENANCE INSTRUCTIONS

Take care of your telephone

- a. Your cordless telephone contains sophisticated electronic parts, so you must treat it with care.
- b. Avoid rough treatment.
- c. Place the handset down gently.
- d. Save the original packing materials to protect your telephone if you ever need to ship it.

Avoid water

You can damage your telephone if it gets wet. Do not use the handset in the rain, or handle it with wet hands. Do not install the telephone base near a sink, bathtub or shower.

Electrical storms

Electrical storms can sometimes cause power surges harmful to electronic equipment. For your own safety, take caution when using electric appliances during storms.

Cleaning your telephone

1. Your telephone has a durable plastic casing that should retain its luster for many years. Clean it only with a soft cloth slightly dampened with water or a mild soap.
2. Do not use excess water or cleaning solvents of any kind.

## **NOTE**

Remember that electrical appliances can cause serious injury if used when you are wet or standing in water. If the telephone base should fall into water, **DO NOT RETRIEVE IT UNTIL YOU UNPLUG THE POWER CORD AND TELEPHONE LINE CORDS FROM THE WALL.** Then pull the unit out by the unplugged cords.

## **CAUTION**

**RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERY ACCORDING TO THE INSTRUCTIONS.**

# 17 GUARANTEE

From the moment your Geemarc product (AD 595Photo) is purchased, Geemarc guarantee it for the period of two years. During this time, all repairs or replacements (at our discretion) are free of charge. Should you experience a problem then contact our help line or visit our website at [www.geemarc.com](http://www.geemarc.com).

The guarantee does not cover accidents, negligence or breakages to any parts. The product must not be tampered with or taken apart by anyone who is not an authorized Geemarc representative.

The Geemarc guarantee in no way limits your legal rights.

**IMPORTANT:** YOUR RECEIPT IS PART OF YOUR GUARANTEE AND MUST BE RETAINED AND PRODUCED IN THE EVENT OF A WARRANTY CLAIM.

**Please note:** The guarantee applies to the United Kingdom only.

## 19 DECLARATIONS:

### CE Directives

Geemarc Telecom SA hereby declares that this product is in compliance with the essential requirements and other relevant provisions of the Radio Equipment Directive 2014/53/UE.

The UKCA declaration of conformity may be consulted at [www.geemarc.com](http://www.geemarc.com)

### Recycling Directives

The WEEE (Waste Electrical and Electronic Equipment) has been put in place for the products at the end of their useful life are recycled in the best way.

When this product is finished with, please do not put it in your domestic waste bin. Please use one of the following disposal options:

- Remove the batteries and deposit them in an appropriate WEEE skip. Deposit the product in an appropriate WEEE skip.
- Or, hand the old product to the retailer. If you purchase a new one, they should accept it.

Thus if you respect these instructions you ensure human health and environmental protection.

For product support and help visit our website at [www.geemarc.com](http://www.geemarc.com)

E-mail : [help@geemarc.com](mailto:help@geemarc.com) telephone **01707 387602**

lines are open 09h00 to 16h00 Mon to Fri

**Manufacturer:** Vtech (Dongguan) Telecommunications Limited.

Vtech Science Park, Xia Ling Bei Management Zone, Liaobu, Dongguan, Guangdong.







UG DECT595PHOTO\_En\_v1.3

**Geemarc Telecom FRANCE**  
2 rue Galilée-  
Parc de l'étoile  
59791 GRANDE-SYNTHE Cedex  
France

**E-mail : [help@geemarc.com](mailto:help@geemarc.com) telephone 01707 387602**  
**lines are open 09h00 to 16h00 Mon to Fri**