

# Mug Warmer

K869 v001: 27/05/22

Please read and retain these instructions for future reference

# BERGSTRÖM



## Dimensions

(H) 2.5 x (W) 11.8 x (D) 16cm

- POWER INPUT: DC 5V
- POWER OUTPUT: 10W
- USB POWERED
- PLUG IN TO USB PLUG ADAPTER OR YOUR COMPUTER/LAPTOP
- GLASS WATERPROOF PANEL WITHOUT NEED FOR SECURITY CONCERN
- SUITABLE FOR STAINLESS STEEL CUP, GLASS CUP, CERAMIC/PORCELAIN MUG
- GRAVITY INDUCTION SWITCH – WHEN YOU PUT THE CUP ON THE SURFACE IT BEGINS TO HEAT UP, REMOVE THE CUP TO STOP THE HEATING
- 1 TEMPERATURE SETTING - 131°F/55°C (INDICATOR LIGHT TURNS BLUE)

## Technical Details

Input 5V DC 2A max

Output: 10W max



**Caution**  
Hot surface


**CAUTION! THIS ELECTRICAL APPLIANCE'S EXTERNAL SURFACES WILL GET HOT IN NORMAL USE. ALLOW TO COOL BEFORE TOUCHING THE EXTERNAL SURFACES.**

## ASSEMBLY INSTRUCTIONS / INSTRUCTIONS FOR USE:

Unpack the components carefully. Please check all parts have been removed from the packaging.

## PRODUCT NEEDS TO BE PLUGGED INTO A USB PORT TO HEAT UP – DOES NOT HOLD CHARGE

- Plug the Mug Warmer into a USB Port.
- Position the cup in the centre of the Mug Warmer.
- Plug the Mug Warmer into a USB Port in your laptop, computer or USB plug connector.
- The blue indicator light will come on immediately and the contents of the cup will be kept at about 55°C (max).
- When do not in use, please remove the cup, and the power will be cut off automatically.

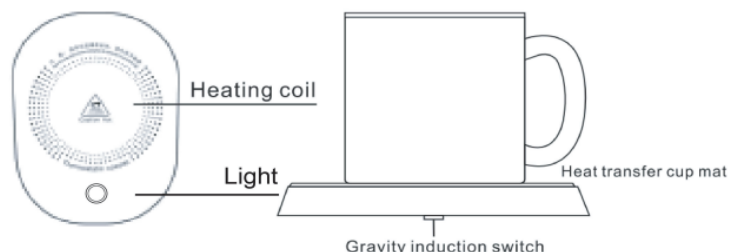

# The Enterprise Department

UK Head Office, 11 Bridge Street, Bishop's Stortford, CM23 2JU

Tel: 0844 4824400\*, Fax: 01279 756595

[www.coopersofstortford.co.uk](http://www.coopersofstortford.co.uk)

EU address: D.S.B. LD, 160 Bd. de Fourmies, 59100 Roubaix, France

Tel: (+44) 1279 701269


\*UK Calls cost around 7 pence per minute plus your telephone company's network access.  
Please check with your telephone supplier.

## Cleaning and Maintenance

- Disconnect the Mug Warmer from the power supply and leave to stand for 5 minutes before cleaning.
- The Mug Warmer can be wiped with a cloth.
- If not used for a long time, please clean it and place it in a ventilated and dry place to avoid dampness.

## Warnings

1. BEFORE CONNECTING THE APPLIANCE, CHECK IF THE VOLTAGE INDICATED ON THE BOTTOM OF THE APPLIANCE IS IN ACCORDANCE WITH THE MAINS VOLTAGE IN YOUR HOME.
2. CHECK THE APPLIANCE AND POWER CABLE CAREFULLY FOR DAMAGE BEFORE EACH USE.
3. DO NOT OPERATE ANY APPLIANCE WITH A DAMAGED POWER CABLE OR PLUG OR AFTER THE APPLIANCE MALFUNCTIONS, OR HAS BEEN DAMAGED IN ANY MANNER. WE RECOMMEND THAT THE POWER CABLE IS NOT KINKED OR STORED IN A TWISTED MANNER, AND THAT YOU REGULARLY CHECK ITS CONDITION.
4. THIS APPLIANCE CAN BE USED BY CHILDREN AGED FROM 8 YEARS AND ABOVE, AND PERSONS WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES OR LACK OF EXPERIENCE AND KNOWLEDGE IF THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE IN A SAFE WAY AND UNDERSTAND THE HAZARDS INVOLVED. CHILDREN SHALL NOT PLAY WITH THE APPLIANCE. CLEANING AND USER MAINTENANCE SHALL NOT BE MADE BY CHILDREN WITHOUT SUPERVISION.
5. CHILDREN OF LESS THAN 3 YEARS SHOULD BE KEPT AWAY UNLESS CONTINUOUSLY SUPERVISED.
6. SOME PARTS OF THIS PRODUCT CAN BECOME VERY HOT AND CAUSE BURNS. PARTICULAR ATTENTION HAS TO BE GIVEN WHERE CHILDREN AND VULNERABLE PEOPLE ARE PRESENT.
7. DISCONNECT UNPLUG FROM POWER SOURCE WHEN NOT IN USE AND BEFORE CLEANING.
8. USE ON A LEVEL, STABLE SURFACE.
9. TO PROTECT AGAINST ELECTRIC SHOCK, DO NOT IMMERSE POWER CABLE OR APPLIANCE, IN WATER OR ANY OTHER LIQUID.
10. WARNING: IF THE SURFACE IS DAMAGED, DO NOT USE THE APPLIANCE.

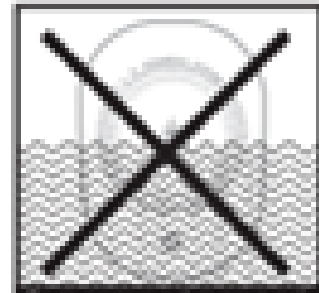

**Do not wash or immerse in water.**

## Power connection:

Insert the USB receiver into the energizing port and plug the other end into the power port.

This product is suitable for general USB interface line, which can be connected to mobile power supply, computer, ordinary and vehicle-mounted power supply, etc.

## DISPOSAL

- Coopers of Stortford use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons, packaging in accordance with your local recycling regulations.
- At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.
- Plastics, polybags – Contains the following recyclable plastic.



Code & Symbol	LDPE
Type of Plastic	Low Density Polyethylene
Commonly used for	Shopping bags, bread bags, squeeze bottles, stretch/pallet wrap, bubble wrap, multi-pack can holders
Notes	Usually recyclable supermarket deposit points. Check other plastic films as any non-polythene film e.g. cling film, crisp packets film lids

