

## HAMBURG CUCKOO CLOCK

Please read these instructions carefully and keep in a safe place for future reference.

Your clock is fitted with a hourly chime movement with an automatic night silence function, which silences the chimes between 10pm and 5am (Last strike 9pm, first strike 6am).

### Unpacking and Setting Instructions


When unpacking please take care not to discard any parts with the packaging.

Before setting the clock check that you have the following part:

1 x Pendulum (this is packed inside the polystyrene insert).



### SETTING INSTRUCTIONS

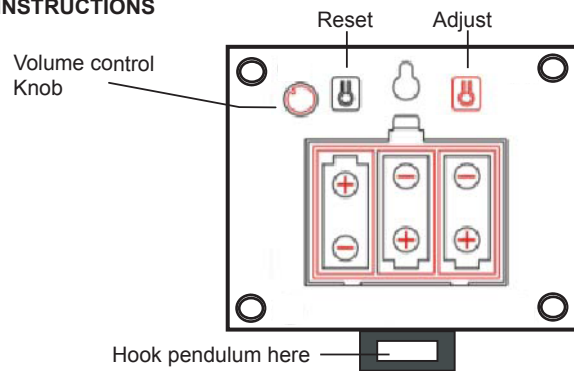

1) Set the hands to 5.30am by carefully turning the minute hand at the front of the clock clockwise (the hour hand will follow automatically).

2) Open the back cover and insert 3 x C batteries into the clock battery compartment observing the polarity markings inside the compartment.

3) Now set the hands to the current time by carefully turning the minute hand at the front of the clock clockwise (the hour hand will follow automatically).

**Note.** As you move through the hours the clock will try to cuckoo, you do not need to listen to the sequence, therefore you can carry on setting the time.

**Example:** If the current time is 8am move the clock hands from 5.30am, 2.5 hours, to 8'o'clock for 8am or if the time is 8pm, turn the clock hands from 5.30am, 14.5 hours forward to 8 o'clock for 8pm.

**Note:** Your clock is fitted with a hourly chime movement with an automatic night silence function, which silences the chimes between 10pm and 5am (Last strike 9pm, first strike 6am).

#### To start again or reset the clock -

Remove all the batteries and set-up clock following the instructions.

**Reset key** - if you press, it will return the chimes to 6 am.

**Adjust key** - if you press, the chime sequence will increase one hour.

#### Volume control knob -

Turn to the right to increase the chime volume or to the left to decrease the volume.

### Trouble shooting -

If for any reason your clock...

**Chimes erratically or the chimes get quieter and quieter** - Remove batteries and set up the clock using new batteries following the instructions.

**Stops chiming after 10pm** - This is correct, the automatic night mute will silence the chime between 10pm - 5am.

**Does not chime during the day** - Check the volume setting by turning the volume control knob. Remove all batteries and reset the clock following the instructions.

**Stops working** - Remove batteries and set up the clock using new batteries following the instructions.

**Loses time** - Remove batteries and set up the clock using new batteries following the instructions.

#### Question

How do i change the time at the end of the Summer.

#### Answer

Remove batteries and set up the clock following the instructions.

**Your clock pendulum will not swing or stops swinging** - Check that the clock is vertical and flat against the wall. Replace the batteries.

### CHANGING THE BATTERIES

It is recommended that you replace batteries annually even if the product is still running. Only use 3 X C (1.5V) Alkaline batteries in this clock. Remove the batteries if the clock is stored or not in use. Remove exhausted batteries from the product.

**Warning:** Do not recharge non-rechargeable batteries.

Please dispose of used batteries in a responsible manner. For more information please contact your local authority.

### MAINTENANCE

A soft cloth may be used to clean your clock. Do not use any corrosive cleaner or chemical solutions on the clock. Keep the clock clean and dry to avoid any problems.

### YOUR GUARANTEE

Your clock is guaranteed for 12 months from the date of purchase against any faults arising from defective materials or manufacture. Damage caused through careless handling, misuse or in transit is expressly excluded. Should this clock fail within 12 months please return it in the first instance to your retailer.

**If you have any queries, problems or do not understand any parts of these instructions please contact:**

Customer Help Line (01908) 449208 or Locall 0845 1207208 Mon - Fri 9.00am - 4.30pm

e-mail for service: [service@acctim.com](mailto:service@acctim.com) or visit [www.acctim.com](http://www.acctim.com)

### Environmental Protection



#### Disposal of electrical & electronic equipment

Do not dispose of this product with household waste. For the proper treatment, recovery and recycling please take this product to the appropriate collection point. If you are unsure of where this is contact your local authority. Improper disposal may be harmful to the environment.

