

Reindeer LED Chain



Thank you for purchasing our Reindeer LED Chain. We hope you are happy with your purchase.

Instructions for use:

1. Open the battery compartment and insert the batteries
2. Slide switch to the 'ON' position to turn the product on
3. Slide switch to the 'OFF' position to turn the product off.

To Replace Batteries:

1. Remove exhausted batteries and discard them properly.
2. Clean the battery contacts and also those of the device prior to battery installation.
3. Install 2 x AA batteries (**not included**) as shown on the battery diagram in battery compartment.
 1. "+" side of battery should face towards you when installing battery.
 2. Place battery compartment lid to its original position.

Care:

1. Keep away from water or damp locations.
2. This product is for Indoor Use Only
3. Turn off when not use to save battery life.

This is not a toy. Keep out of reach of children

Battery Warning:

Do not mix alkaline, standard (carbon-zinc) and rechargeable batteries (including hydride)
Do not mix old and new batteries
Exhausted batteries are to be removed
The supply terminals are not to be short-circuited
Only batteries of the same or equivalent type as recommended are to be used
Batteries are to be inserted with the correct polarity

Battery Disposal:

The wheellie bin symbol indicates the product and batteries must not be disposed of in the domestic waste as they can contain substances that are damaging to the environment. Please use designated collection points or recycling facilities when disposing of the item or batteries. Batteries should be removed from the product.
Contact your local waste disposal agency or your retailer for further information