

## 65cm Frosted Light Up Snowman

L012 v001: 06/07/22

Please read and retain these instructions for future reference

**GAINSBOROUGH**  
Garden & Wildlife



### Dimensions

(H) 65 x (W) 31 x (D) 10cm

30cm lead wire from the last LED to the battery box.

- 20 WARM WHITE LEDS
- BATTERY OPERATED
- TIMER FUNCTION, 6 HOURS ON 18 HOURS OFF
- SUITABLE FOR INDOOR AND OUTDOOR USE

REQUIRES 3X AA BATTERIES (NOT INCLUDED)

**ALWAYS USE ALKALINE BATTERIES.**


**DO NOT USE LITHIUM BATTERIES.**

**THIS IS NOT A TOY. KEEP AWAY FROM CHILDREN. USE UNDER ADULT SUPERVISION.**

### ASSEMBLY INSTRUCTIONS / INSTRUCTIONS FOR USE:

Unpack the components carefully. Please check all parts have been removed from the packaging.

Install the hat and arms on the body of the snowman by inserting the rods into loops as shown.

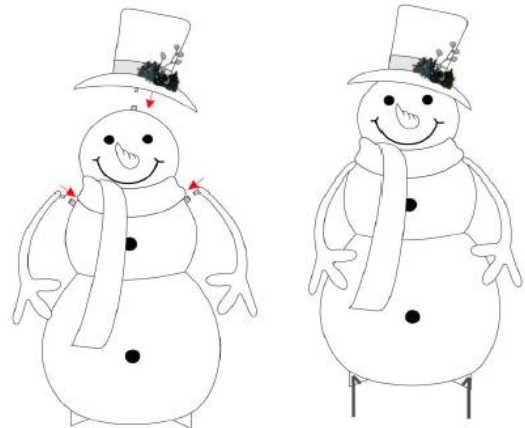

### Installing the batteries

Remove the battery compartment cover.

Insert 3x AA batteries (not included).

Observe correct polarity as indicated in the battery compartment.

Replace the battery compartment cover.

If using outdoors, secure the snowman by inserting the lawn stakes through the edge and into the soil.

To easily insert stakes into the ground, it is recommended to wet the ground first.



**The Enterprise  
Department**

UK Head Office, 11 Bridge Street, Bishop's Stortford, CM23 2JU

Tel: 0844 4824400\*, Fax: 01279 756595

[www.coopersofstortford.co.uk](http://www.coopersofstortford.co.uk)

EU address: D.S.B. LD, 160 Bd. de Fourmies, 59100 Roubaix, France

Tel: (+44) 1279 701269

\*UK Calls cost around 7 pence per minute plus your telephone company's network access.  
Please check with your telephone supplier.

## Operating Instructions

- Push the button once to have the lights run on timer 6 hours on/18 hours off.
- Push button again to have the lights on continuously.
- Push button a third time to turn the lights off.




## BATTERIES

- Keep batteries away from children and pets.
- Do not mix used and new batteries.
- Remove the batteries if left for long periods.
- Never dispose of batteries in a fire.
- Battery disposal, spent or expired batteries must be properly disposed of and recycled in compliance with local regulations. For detailed information, contact your local authority.
- Follow the battery manufacturer's safety, usage, and disposal instructions.

## DISPOSAL

- Coopers of Stortford use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons, packaging in accordance with your local recycling regulations.
- At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.
- Plastics, polybags – this is made from the following recyclable plastic.



Code & Symbol	 LDPE
Type of Plastic	Low Density Polyethylene
Commonly used for	Shopping bags, bread bags, squeeze bottles, stretch/pallet wrap, bubble wrap, multi-pack can holders
Notes	Usually recyclable supermarket deposit points. Check other plastic films as any non-polythene film e.g. cling film, crisp packets film lids



# The Enterprise Department

UK Head Office, 11 Bridge Street, Bishop's Stortford, CM23 2JU

Tel: 0844 4824400\*, Fax: 01279 756595

[www.coopersofstortford.co.uk](http://www.coopersofstortford.co.uk)

EU address: D.S.B. LD, 160 Bd. de Fourmies, 59100 Roubaix, France

Tel: (+44) 1279 701269

\*UK Calls cost around 7 pence per minute plus your telephone company's network access.  
Please check with your telephone supplier.