

# Compost Aerator

L132 v01: 26/10/22

Please read and retain these instructions for future reference



## Dimensions

(H) 100 x (W) 39cm

## Material


Powder Coated Steel and plastic handles

- OUR GARDEN AERATOR HELPS YOU TO SPEED UP THE DECOMPOSITION OF YOUR COMPOST MATERIAL WHILST GIVING YOU THE BEST POSSIBLE QUALITY
- THE COMFORT T-SHAPED HANDLE HELPS TO MAKE THE PROCESS EASY AND WITHOUT STRAIN

## ASSEMBLY INSTRUCTIONS / INSTRUCTIONS FOR USE:

Unpack the components carefully. Please check all parts have been removed from the packaging.

### Parts

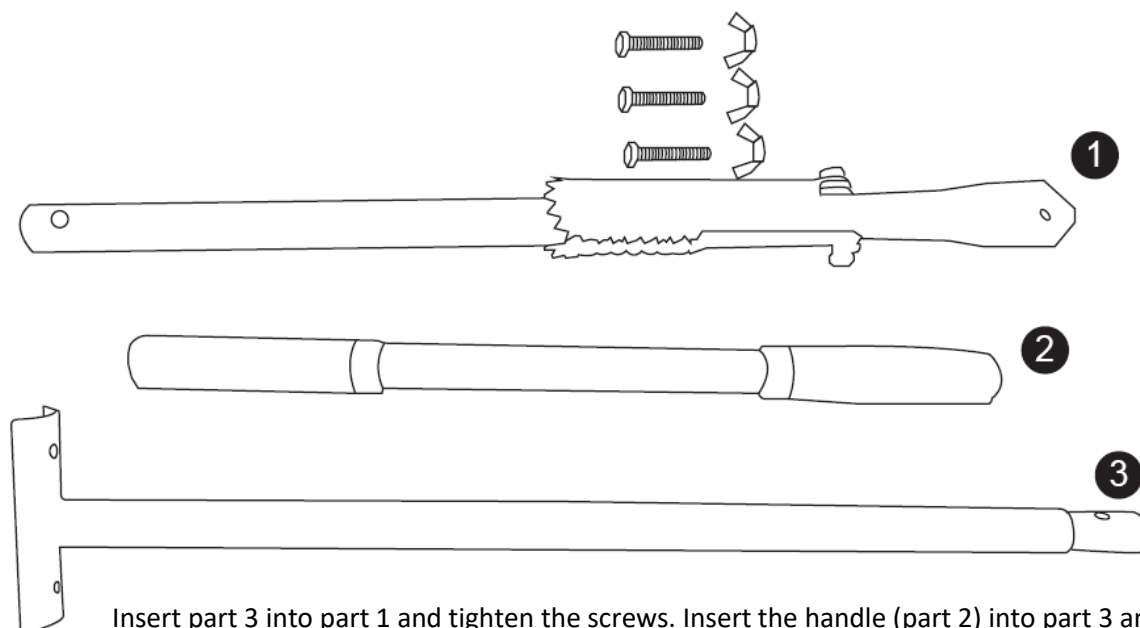

Insert part 3 into part 1 and tighten the screws. Insert the handle (part 2) into part 3 and tighten the screws.

**The Enterprise  
Department**

UK Head Office, 11 Bridge Street, Bishop's Stortford, CM23 2JU

Tel: 0844 4824400\*, Fax: 01279 756595

[www.coopersofstortford.co.uk](http://www.coopersofstortford.co.uk)

EU address: D.S.B. LD, 160 Bd. de Fourmies, 59100 Roubaix, France

Tel: (+44) 1279 701269

\*UK Calls cost around 7 pence per minute plus your telephone company's network access.  
Please check with your telephone supplier.


To use gently push the tip of the aerator into the compost. The two flaps fold back against the main shaft to form an arrowhead. This makes it easy to push the tip down to the required depth. Then gently pull back on the handle and out of sight the two flaps move outwards at right angles to the main shaft. With a gentle twist of the wrist pull the aerator up and out of the compost. Gently twisting the aerator to the left and right as you do so. Repeat this at 6" or so intervals and the contents are aerated and mixed in.



### DISPOSAL

- Coopers of Stortford use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons, packaging in accordance with your local recycling regulations.
- At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.
- Plastics, polybags – this is made from the following recyclable plastic.



Code & Symbol	
Type of Plastic	Polypropylene
Commonly used for	Microwaveable food containers, yoghurt pots, butter tubs, disposable plates and cups
Notes	Commonly recycled and collected from household recycling bins (packaging tape itself not recyclable but does not interfere with cardboard)