

20V Pole One Handed Cordless Saw

Item codes: L249

Instructions for Use

v003: 31/10/23

Please read and retain these instructions for future reference



Dimensions

(H)30X(W)10cm

Pole length: 150cm

- USE HANDHELD WITHOUT THE POLE EXTENSION OR WITH FOR PRUNING BRANCHES ETC UP HIGH
- ITS LIGHTWEIGHT AT JUST 1kg WITHOUT THE POLE AND WITH THE POLE 3kg MEANING YOU CAN USE IT EASILY ONE HANDED
- WITH A 20V 1500MAH RECHARGEABLE BATTERY ITS CABLE FREE SO YOU CAN USE IT ANYWHERE
- UPPER SAFETY GUARD, HAND GUARD AND LOCK OFF SWITCH MEANS YOU CAN USE IT SAFELY WITHOUT WORRY
- SOFT AND EASY GRIP HANDLE
- ADJUSTABLE TENSION
- USE FOR PRUNING, DEMOLITION, CUTTING
- NO LOAD SPEED- - 10M/S + 36000M/HOURS
- CHARGING TIME 3 HOURS, USE TIME UP TO 40 MINUTES
- INCLUDES – 1 X PRUNING TOOL, 1 X BATTERY PACK, 1 X CHARGER, 1 X CHAIN, 1 X BAR, 1 X EXTENSION POLE, 1 X BLADE PROTECTION COVER
- SAW BLADE – 4 INCHES
- MINIMUM CUTTING WIDTH – 80MM

Power Details: 100-240V AC, 50-60Hz

Use: This item requires one hand to use safely.


Please read this instruction manual thoroughly before starting and ensure you are familiar with the operation of your new One Handed Cordless Saw.


RECOMMENDED FOR PERSONS OVER 18 YEARS OF AGE.

ALWAYS USE HEAD, EYE AND EAR PROTECTION EQUIPMENT AND SAFETY SHOES AND HAND GLOVES

Parts

FUNCTION DESCRIPTION

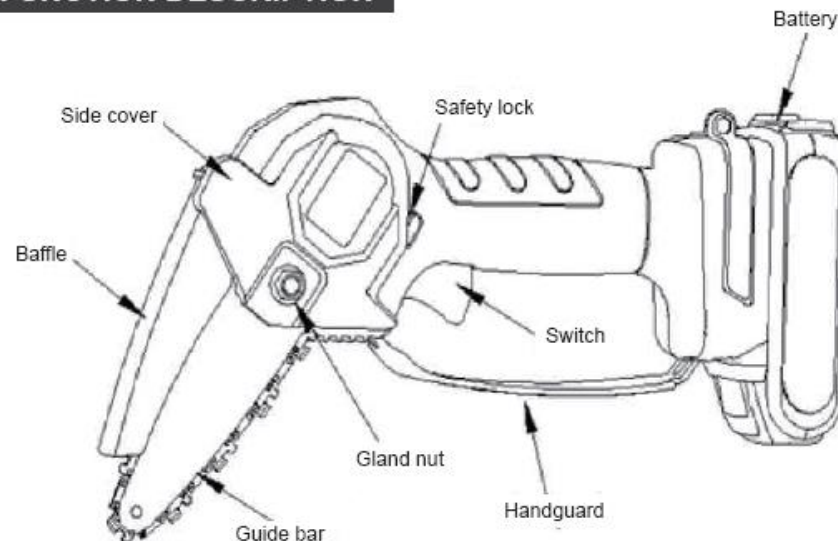


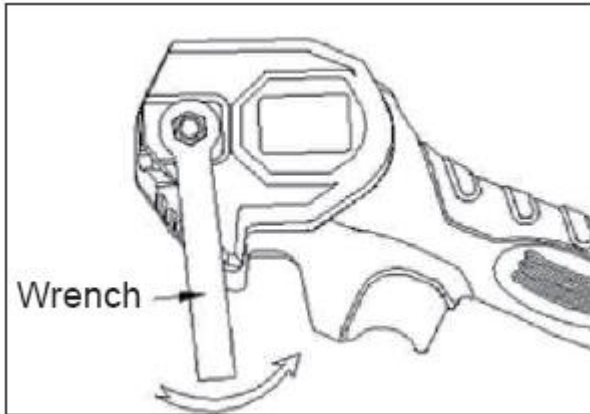


After loosening the pressure nut anti-clockwise, remove the pressure cover (side cover).

Operating Instruction

To remove the chain, loosen compression button remove the side cover anti-clock wise and remove the side cover.

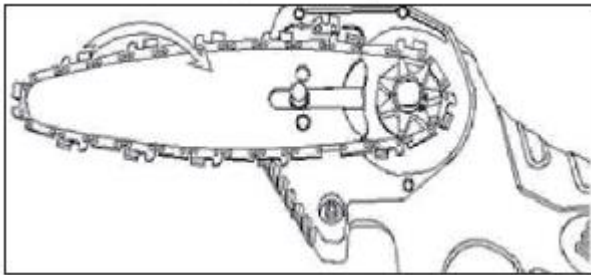

After removing the side cover, remove the guide plate directly as shown.



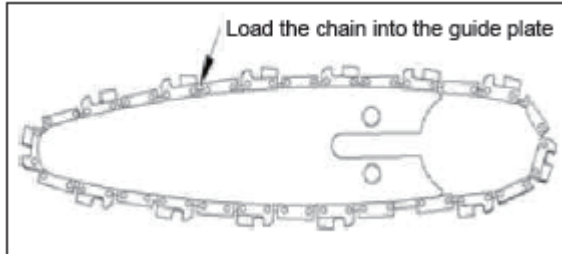


1. To remove the chain, loosen compression button remove the side cover After removing the side cover as pictured 'remove the guide directly.
2. To install the chain guide plate: first load the chain into the guide plate, and the middle guide tooth just sticks into the guide plate guide slot.

Note: the chain blade should be forward.

Note: The cordless saw has a device to adjust the tensioning of the chain. When installing the guide plate, make sure that the adjusting block gets stuck into the positioning adjusting hole at the end of the guide plate.

Align the pin hole and install the reverse hole and chain:

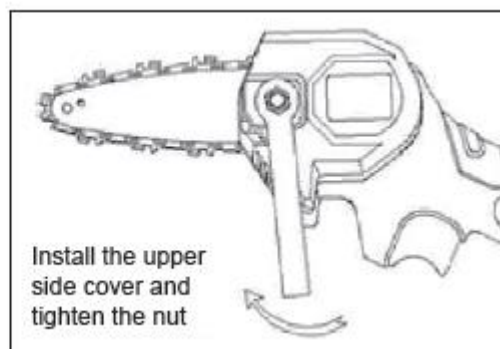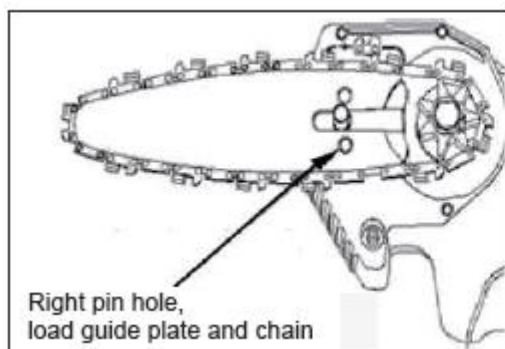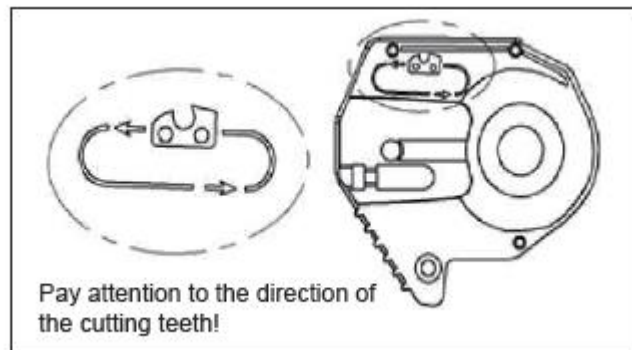


Install the side cover and tighten the screw nut:

3. How to adjust the tightness of the chain?






The adjustment standard is to lift the chain in the middle of the guide plate by hand and expose 1-3 middle guide teeth.


Loosen the compression nut.

As shown in the picture, twist the adjusting screw clockwise to tighten the chain, anti-clockwise is for loosening.

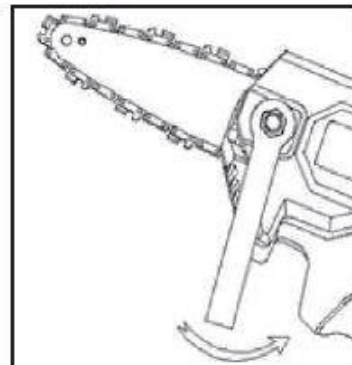

Loosen the clamp and tighten the nut

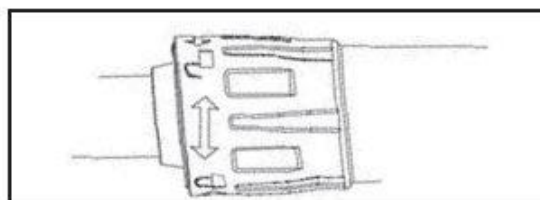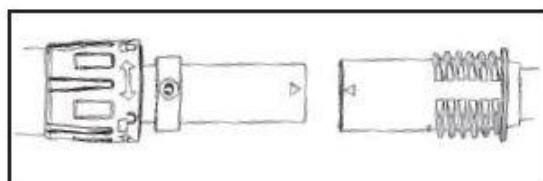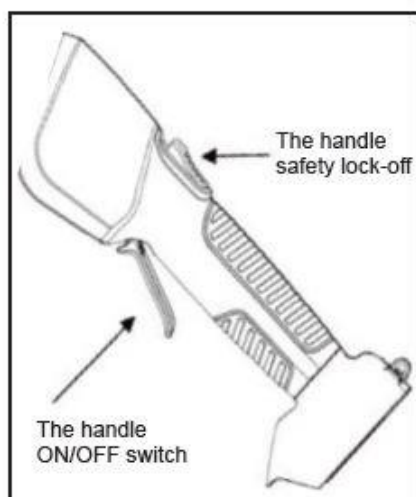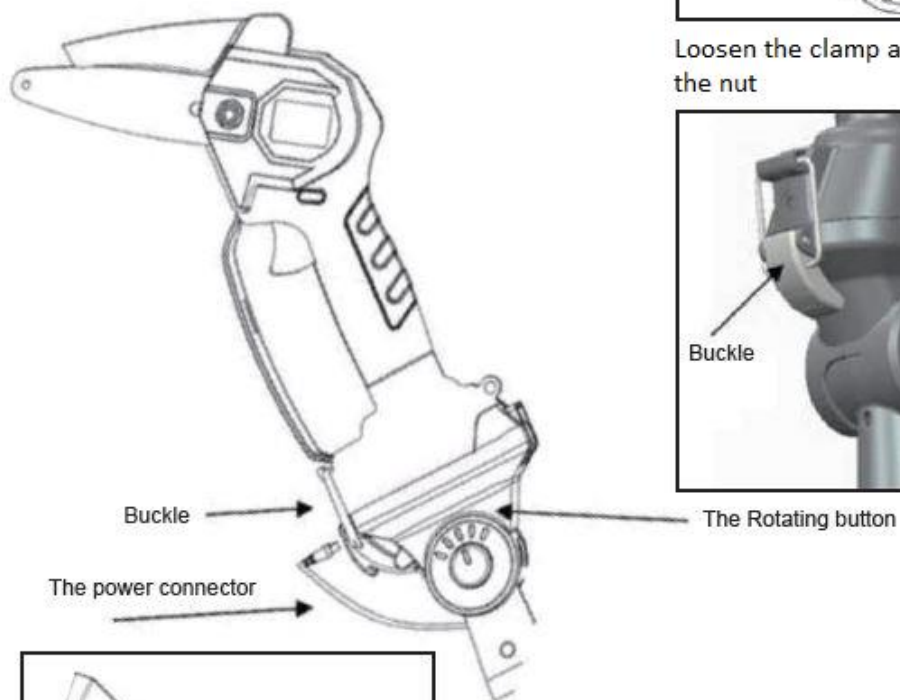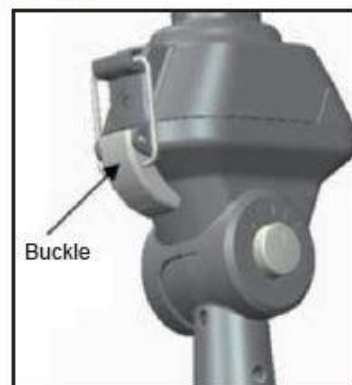

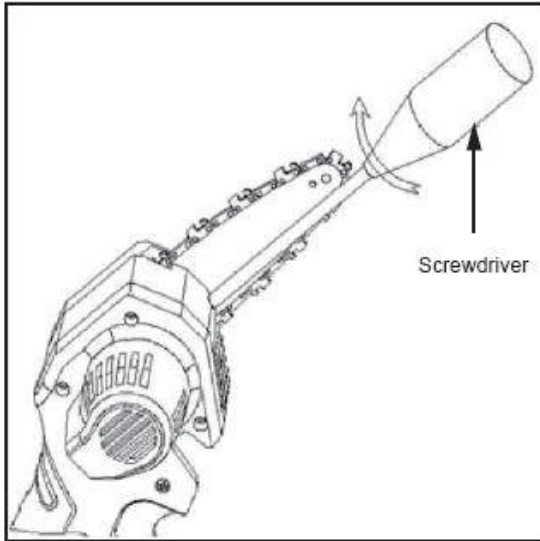


As shown in the picture, twist the adjusting screw clockwise to tension the chain, anti-clockwise is for loosening

The chain tightness is shown as below:


Note: 1-3 middle guide teeth are exposed in the pull-down chain.

A new chain will be stretched in the early stages of use. Please check and adjust to the appropriate tension frequently, because a loose chain will easily to derail, which may lead to rapid wear of the chain and guide plate.

The chain must be stuck to the sprocket After installation, please check it again.

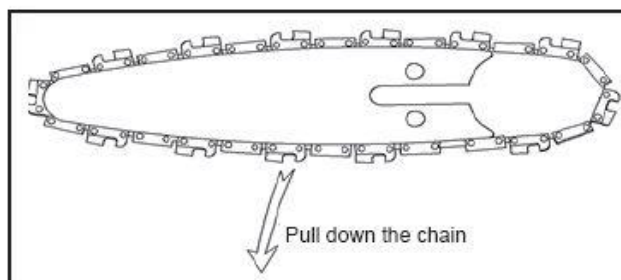


Pull down the chain to expose the three middle guide teeth.

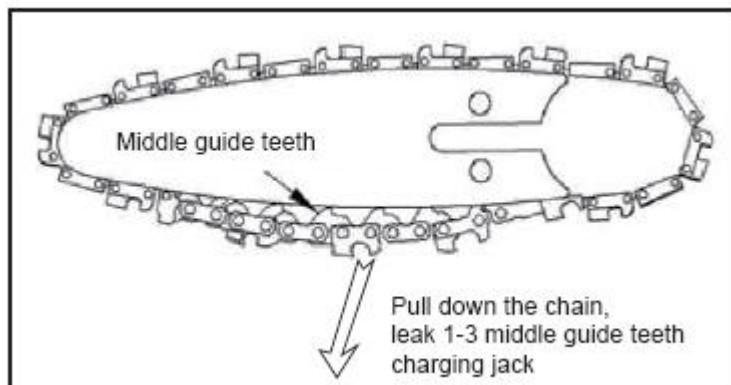

SPECIFICATION

Model		L249
Supply voltage		20 V
Blade length		90mm
Battery	Types	Li-ion
		1.5Ah
Rated Voltage		100-240V AC, 50-60Hz
Force Voltage		DC 21V
Charging current		0.8A
Net weight (not including batteries)		0.7KG

We reserve the right to improve specifications without prior notice.

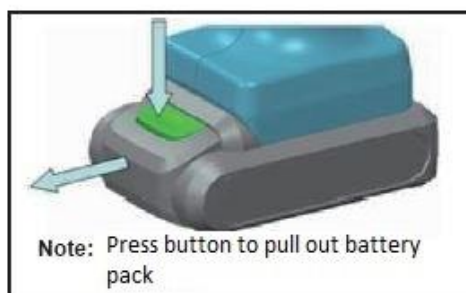

Extension rod control joint

CONTENTS


- 1) Cordless Saw
- 2) Battery
- 3) Charger
- 4) Instruction manual

- Do not expose the battery to extreme conditions such as high temperature or shock. Otherwise, it will cause personal injury due to the leakage of the electrolytic solution.
- Before charging, check that the surface of the battery is clean and dry.
- The battery of this product is not fully charged on delivery. Therefore, before the first use, it must be charged.
- Do not charge the battery for long periods of time. Do not completely drain the battery.
- Always keep in mind applicable safety instructions and protection requirements and environmental legislation.
- Check that the switch is in the off position.
- Connect the charger to the corresponding connector for the battery pack.
- Make sure the power is consistent with the rated values on the charger and adapter.
- When the red light is on the charger, it indicates that the battery is charging, and the green light indicates that the charge is completed. The average charge time is 3 hours.
- When charging is complete, disconnect the battery pack from the power source.
- Ensure the battery it is recharged at least once every three months.



Operating Instructions

- Please wear suitable clothing and work gloves when using this equipment.
- Before each use, make sure the belt is running normally.
- Start/off switch and safety switch must be in working order.
- If the switch is damaged, stop using the device.
- Make sure the voltage of the power supply is consistent with the voltage on the rating label.
- The risk of injury can be reduced by wearing PPE and ensuring that the devices are functioning properly.
- In order to save the use of electric batteries and ensure the best service life do not cut wet and dry branches over 60mm diameter and 20mm.
- When stopping operation, turn off the power switch and disconnect the battery box.
- When the device is running, keep your other hand at least 15cm away from the cutting area of the blade, and kept well away from the blade.
- Do not force this equipment to cut bigger branches, otherwise the blade may deform or get stuck.
- In cold or humid weather, to protect the battery pack, put it under waterproof clothing, do not use this equipment in the rain.
- We recommend that after daily use, battery pack should be disconnected, and the power switch (8) turned off. The saw should be stored in the matching toolbox.
- If the user feels the electricity is not strong enough or the cutting is not smooth enough, check if the charge is exhausted or the blade is dull.

Attaching the Pole

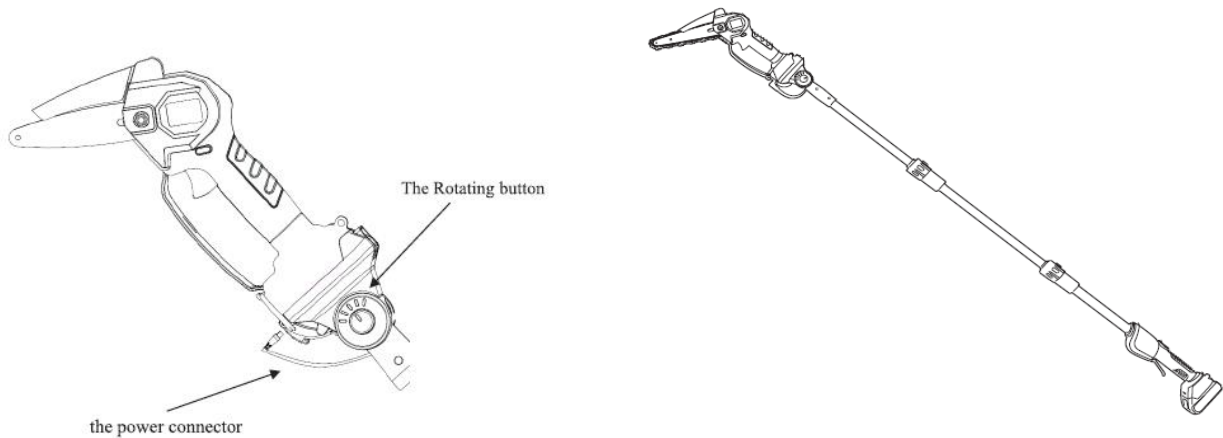

Clip the saw on top of the pole and attach and close the buckle.

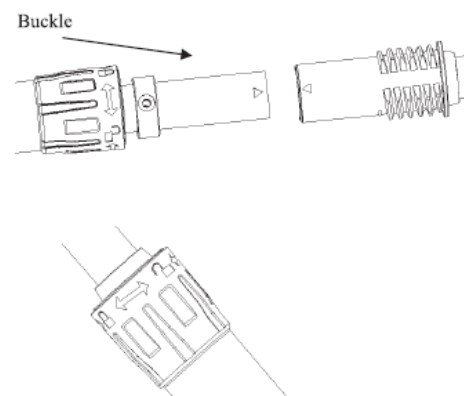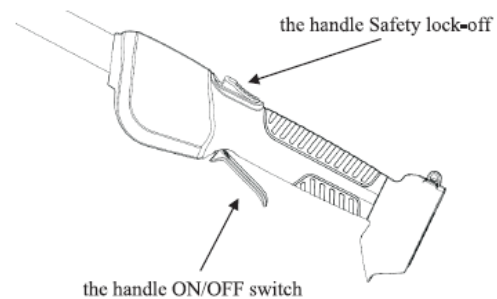

Cleaning and Maintenance

- Repair functions not mentioned herein shall be performed by the Service Centre.
- To ensure the safety of use, only the original parts can be used.
- Please switch off the equipment before starting any repair or maintenance.
- Clear the connection between the battery and the saw and store the battery in a safe package.
- Wear safety gloves when touching safety blades This can avoid sharp blade scratching the user.
- The following cleaning and maintenance must be carried out regularly. This ensures long-term and reliable operation of the equipment.

Maintenance

- Clean the chain carefully after each use. Wipe the chain with lubricating oil and spray with metal protection spray.
- Do not spray the equipment with water or expose it to water. This may cause electric shock.
- Keep the ventilator, motor housing and equipment handle clean.
- Use a damp cloth or brush cleaner.
- Do not use unsuitable cleaner. Otherwise this may cause the equipment to fail.
- Please clean the blade carefully after each use. Use oily cloth to wipe the blade and absorb the metal to protect the blade.
- After 8 hours of continuous operation, please remove debris such as dust from the front cover plate of the equipment.

Storage

- To ensure that the battery is fully charged, avoid storing the saw in extremely hot or cold environments.
- If the equipment will not be used for a long time, please remove the battery before storage.
- The battery and charger must be placed in the instrument box to prevent heat dust and moisture from entering, check if the switch is off.
- Check the switch if close or not.
- The battery should be stored in a dry environment under:
- To ensure the service life of the equipment store it in a fully charged state.
- Storage temperature: -5°C - 30°C
- Do not turn on the power switch when storing.

PLUG WIRING (UK & IRELAND)

This appliance is supplied with a mains adaptor/charger with BS1363 plug pins.

DO NOT use if the socket outlets in your home or office are not suitable for this product's mains adaptor/charger plug pins. Attempts to insert the mains adaptor/charger into the wrong socket is likely to cause electric hazard or damage.

DO NOT use with any other mains transformer/charger than the one that is supplied with this product.

CARE AND CLEANING INSTRUCTIONS

- Always switch off and unplug before cleaning.
- Do NOT immerse in water. Risk of electric shock.
- Do NOT use abrasive cleaners or sharp utensils to clean this appliance.
- Wipe surfaces with a soft dry cloth.
- Allow to dry thoroughly before further use.
- Store the appliance in a cool, dry place.

DISPOSAL

- Coopers of Stortford use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons, packaging in accordance with your local recycling regulations.
- At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.



Plastics, polybags – this is made from the following recyclable plastic.

Code & Symbol	
Type of Plastic	Please Specify (includes ABS, Nylon)

CUSTOMER SERVICES:

Distributed by / Verteilt durch / Distribué par.

UK: The Enterprise Department Ltd.
11 Bridge Street, Bishops Stortford, Herts, UK, CM23 2JU
Tel: 0330 331 0300

NI/EU:
D.S.B. LD, 160 Bd. de Fourmies, 59100 Roubaix, France
Tel: (+44) 1279 701269

