

Bladeless Neck Fan

Item No: L398

Instructions for Use

v004: 17/10/24

 
Please read and retain these instructions for future reference.

BERGSTRÖM

Dimensions

(H) 6 x (W) 21 x (D) 14cm

Weight: 220g

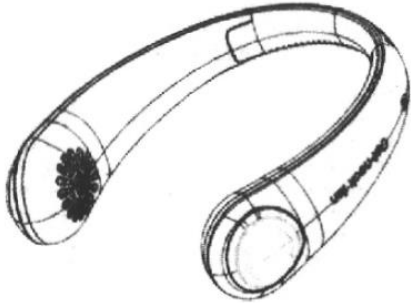

- PORTABLE BLADELESS HANGING NECK FAN
- LIGHTWEIGHT
- PORTABLE – CAN TAKE ANYWHERE WITH YOU
- SAFE BLADELESS DESIGN
- RECHARGEABLE VIA USB AND WHEN SWITCHED OFF.
- HANDS FREE
- ADJUSTABLE TO SECURE COMFORTABLY ROUND YOU NECK
- 3 SPEEDS.
- 62 AIR OUTLET HOLES CREATE A 360 DEGREE SURROUNDING AIR FLOW.
- USB CABLE PROVIDED

Technical Details

 
5V-1A, 5W

1200 Mah battery

ASSEMBLY INSTRUCTIONS / INSTRUCTIONS FOR USE:

Unpack the components carefully. Please check all parts have been removed from the packaging.

Parts

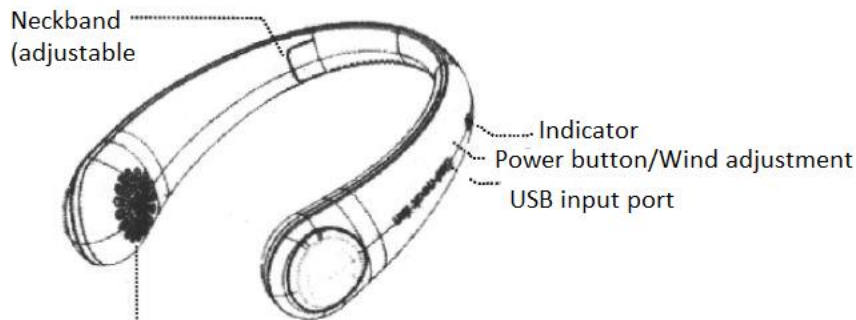


Power connection:

Note: The power to operate this fan is disabled when this is charging via USB cable. Will only function once charged and USB cable disconnected. This is to reduce risk of overheating.

This product is suitable for general USB interface line, which can be connected to mobile USB power supply, computer, ordinary and vehicle-mounted power USB supply or USB plug.

Wind adjustment


Put the fan around your neck with the wind outlet upwards. Press the Power button to turn the fan on. This will set the Speed to Level 1 (refreshing). Press the button again to increase to Level 2 (double cooling) and a third time for Level 3 (instant cooling).

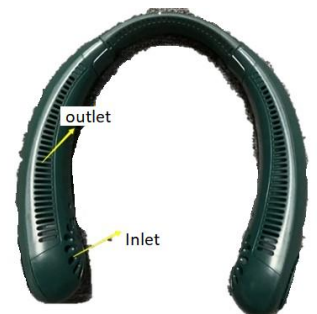

CHARGING:

ENSURE THE POWER IS SWITCHED OFF BEFORE CHARGING.

Insert the provide USB cable into the charging port and plug the other end into the USB power port or USB plug.. The blue light will flicker when the fan is charging and the flickering will stop when fully charged. **The power to operate this fan is disabled when this is charging via USB cable.**

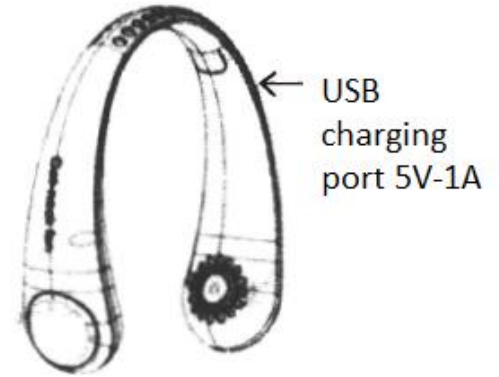

Fully charge time: 3.5-4hours
Using time:1-1.5hours


WARNINGS:

- **Do not charge with power switch set to ON.**
- Always remove the USB cable when charging is completed to allow fan to function.
- Children only to use the fan under adult supervision.
- No user serviceable parts.
- Always switch OFF when not in use.
- Do not immerse in water.
- Do not drop the fan.
- Do not use in dusty environments, near open fire, or places that produce hot air.
- Do not touch the protective net with your fingers or any other objects.

DISPOSAL:

- Coopers of Stortford use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons, packaging in accordance with your local recycling regulations.
- At the end of the product’s lifespan please check with your local council authorised household waste recycling centre for disposal.
- Plastics, polybags – this is made from the following recyclable plastic.



Code & Symbol	 OTHER
Type of Plastic	ABS
Commonly used for	CD’s, crisp packets, various flexible packaging, baby bottles, sunglass lenses
Notes	Not often or widely recycled

CUSTOMER SERVICES:

Distributed by / Verteilt durch / Distribué par.

UK: The Enterprise Department Ltd.

11 Bridge Street, Bishops Stortford Herts, UK, CM23 2JU

Tel: 0330 331 0300

NI/EU: D.S.B. LD, 160 Bd. de Fourmies, 59100 Roubaix, France

Tel: (+44) 1279 701269

DE/FR/CZ/SK: Hergestellt für 3Pagen, Sankt-Joeris-Strasse 16-28 53477 Alsdorf

Tel: +49(0)2404/980-204

