



## Outdoor Thermometer with Min & Max Display



Thank you purchasing our Outdoor Thermometer with Minimum & Maximum Display.

We hope you will be happy with your purchase

Our Thermometer can be mounted to a wall or a garden fence. The digital display will allow you to keep track of outdoor temperature with minimum / maximum readings in Celsius or Fahrenheit as well as the current temperature

How to read the temperature:

1. Press “**MINI**” button to show the minimum temperature
2. Long press “**MINI**” button for °C and °F conversion
3. Press “**MAXI**” button to show the maximum temperature
4. Long press “**MAXI**” button to clear the maximum & minimum temperature record

Please note: Memory will be automatically reset after battery is replaced.

How to replace the batteries:

1. The product requires 2 x AAA batteries (not included)
2. The battery compartment is located at the back of the product
3. Open the battery cover and insert 2 x AAA batteries according to the right polarity
4. Close the battery cover

Battery Warning:

- Do not mix alkaline, standard (carbon-zinc) and rechargeable batteries (including hydride)
- Do not mix old and new batteries
- Exhausted batteries are to be removed
- The supply terminals are not to be short-circuited
- Only batteries of the same or equivalent type as recommended are to be used
- Batteries are to be inserted with the correct polarity

#### Battery Disposal:

The wheelie bin symbol indicates the product and batteries must not be disposed of in the domestic waste as they can contain substances that are damaging to the environment. Please use designated collection points or recycling facilities when disposing of the item or batteries. Batteries should be removed from the product.  
Contact your local waste disposal agency or your retailer for further information

Product Code: G222434

Made in China for S&S Enterprises Ltd. 26 Perivale Park Middlesex UB67RL

