

Wifi Booster

L441 v001: 09/09/22

Please read and retain these instructions for future reference

BERGSTRÖM



Dimensions

(H) 11 x (W) 5.7. x (D) 6cm

Material: ABS, PC

- OUR WIRELESS WI-FI REPEATER HELPS TO INCREASE THE REACH OF YOUR WI-FI SO YOU CAN USE IT NO MATTER WHERE YOU ARE IN THE HOUSE, IT CAN EVEN POTENTIALLY REACH TO YOUR GARDEN, SO YOU CAN ENJOY YOUR ENTERTAINMENT FROM THE RELAXATION OF YOUR GARDEN CHAIR!
- FREQUENCY – 2.4GHZ TO 2.4835GHZ
- POWER REQUIREMENTS – 110V – 230V SOCKET
- COMPATIBLE WITH 802.11N/G/B DEVICES
- STABLE SIGNAL AND HIGH TRANSMISSION SPEED

ASSEMBLY INSTRUCTIONS / INSTRUCTIONS FOR USE:

Unpack the components carefully. Please check all parts have been removed from the packaging.

- includes 1 x WIFI wireless repeater, 1XRJ45 network cable

INSTRUCTIONS FOR USE

LED Explanation

| Icon | Indication | Status |
|---|------------|---|
|  | POWER LED | NO: The device is power on . OFF: The Device is not receiving electrical power |
|  | WLAN LED | Wireless signal |
|  | WPS LED | Flashing: WPS connection is established or WPS signal of another device is expected |
|  | LAN LED | NO: The LAN port is connect OFF: The LAN port is disconnected Flashing: Transferring data to/from a network device |

The Enterprise Department

UK Head Office, 11 Bridge Street, Bishop's Stortford, CM23 2JU

Tel: 0844 4824400*, Fax: 01279 756595

www.coopersofstortford.co.uk

EU address: D.S.B. LD, 160 Bd. de Fourmies, 59100 Roubaix, France

Tel: (+44) 1279 701269

*UK Calls cost around 7 pence per minute plus your telephone company's network access.
Please check with your telephone supplier.

Button Explanation

WPS Button: If your host router supports WPS function, you can press the WPS button and then press the WPS button of the WiFi Repeater to establish a secure connection between the host router and the WiFi Repeater.

Reset Button: This button is used to restore the Repeater's factory default settings. With the Repeater powered on, use a pin to press and hold the Reset button for about 8 seconds.

LAN Port: One 10/100Mbps RJ45 Ethernet port is used to connect an Ethernet-enabled device to a Wi-Fi network, such as Internet TV, DVR, Gaming console and so on. Please note that this port cannot be connected to a router.

Configure the WI-FI Booster Wirelessly

1

A1. Plug the Wi-Fi Repeater to a socket, WLAN indicator flashes.

A2. Click on the network icon( or ) on the right bottom of your desktop. You will find the signal from the BF ROSWIFI-XXXXXX.

Click on Connect and wait for a few seconds.

(Or connect your computer /laptop to a WiFi repeater with an RJ45 cable)



2

A3. Open web browser and type
http://192.168.11.1 in the browser's address box.
This number is the default IP address for this device




Note: Please check whether the WiFi-Repeater accord with factory default settings once you can't download http://192.168.11.1.

If you are still not sure what reasons you can reset the Wifi- Repeater, just need to press the reset button for 10 seconds then try again.


3

A4. The following login screen will appear. Select the language, enter the password, and then click log in. The default password is "admin"

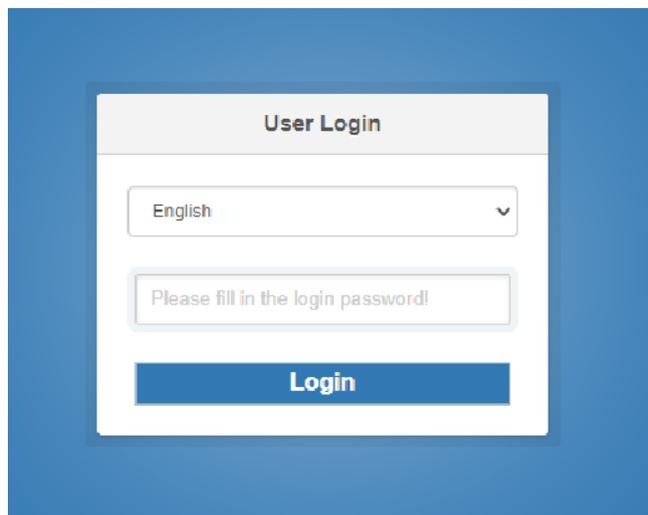


4

A5. After logging in, you will see the web page below: Click 'WISP Mode'.

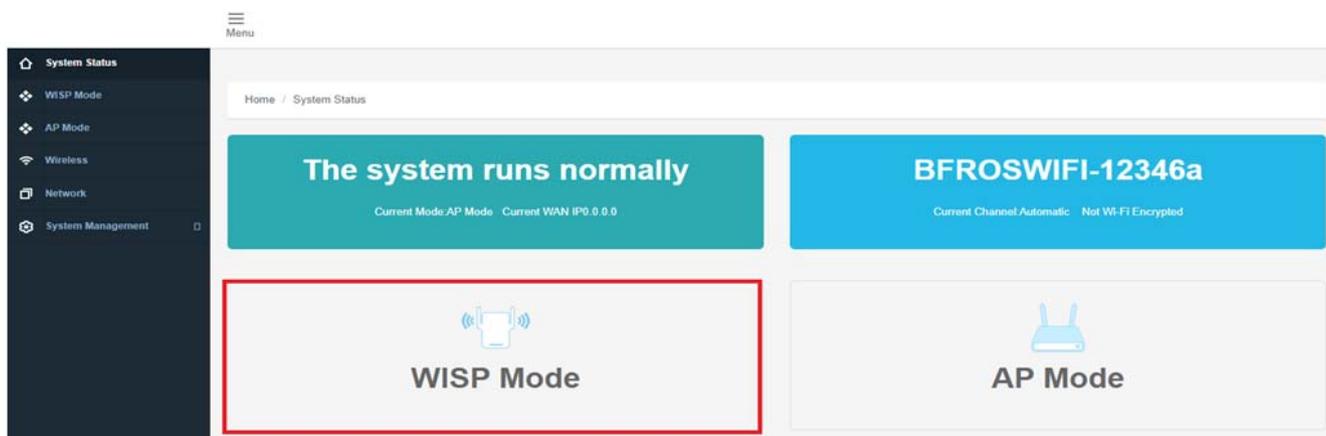


5

A6. Click Scan and select continue.

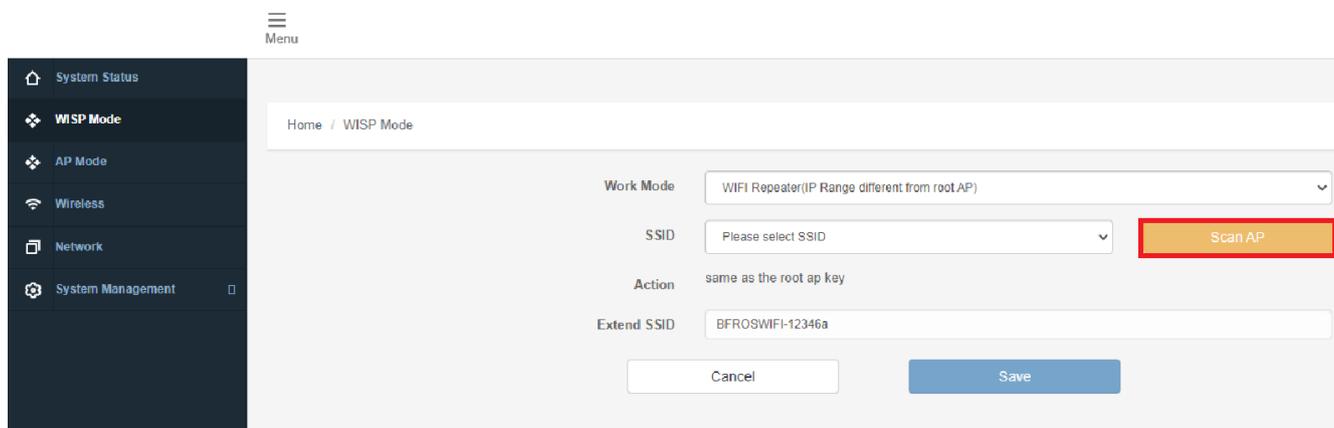


6

A7. Select your Wireless SSID to continue.

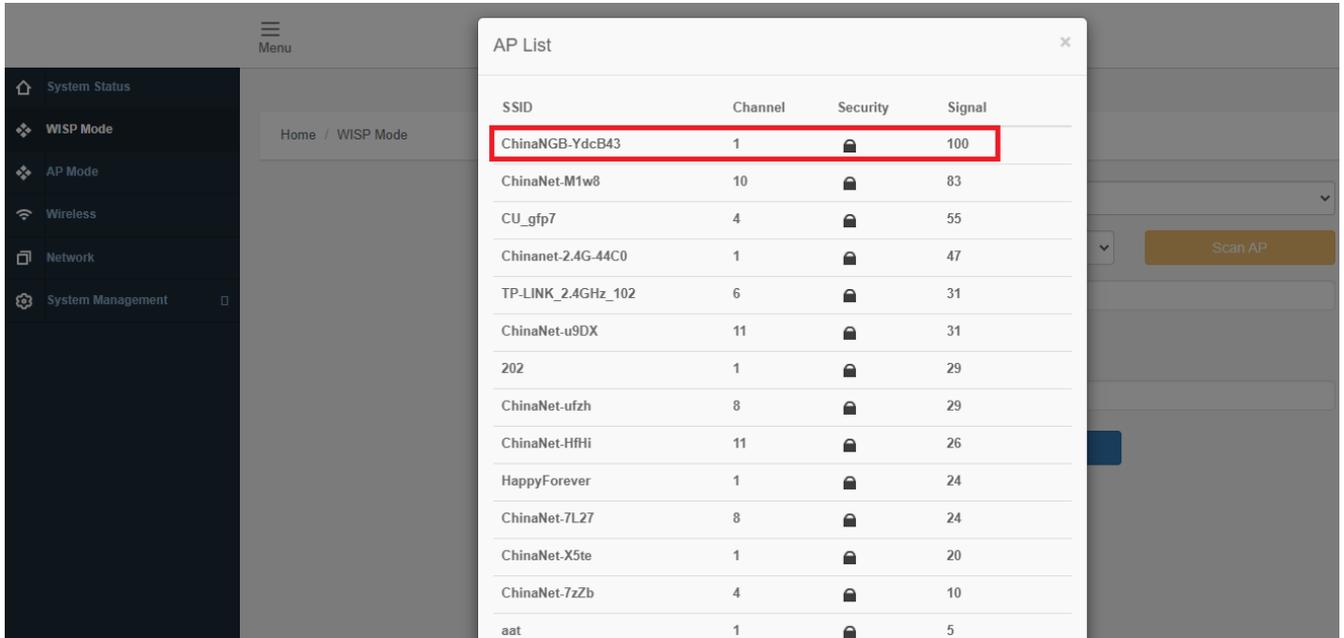

7

A8. When you see below, please do not change any setting but only insert the key of your network.

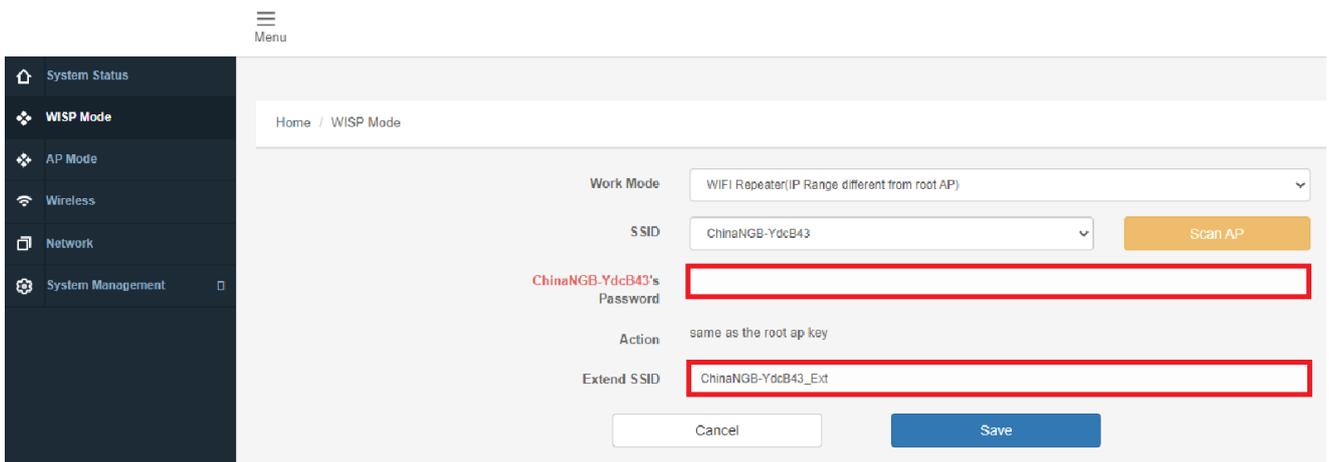

Click on ' Save ' button, The Repeater will restart


Wait for a few seconds your Wi-fi Repeater is ready for use

The default wireless SSID and Security key of Wi-Fi Repeater is same as your AP/route

8

Use the Repeater as a Network Adapter


The Repeater can be used as a wireless adapter to connect any Ethernet-enabled device, such as a Blu-Ray player, game console, DVR, or smart TV, to your wireless network. After the Repeater is connected to the Internet, you can connect an Ethernet-only device to the Repeater using an Ethernet cable.

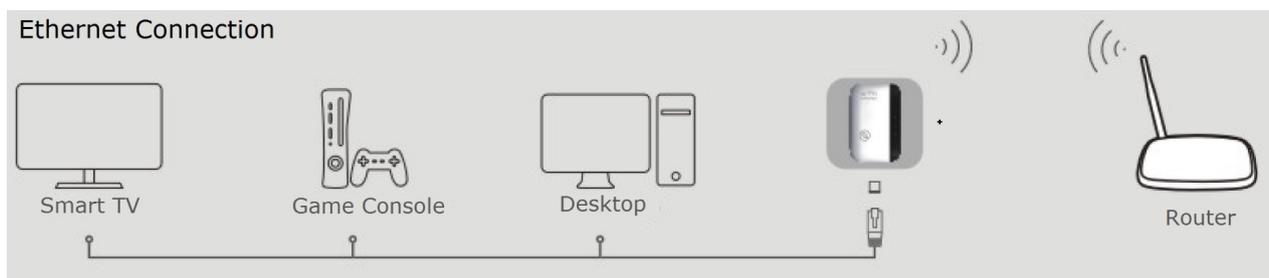

9


B. Configure the Wireless AP Mode.

1. Plug the Wi-fi Repeater into a wall socket
2. Follow process A3 to A5
3. Click on 'AP Mode' to continue.

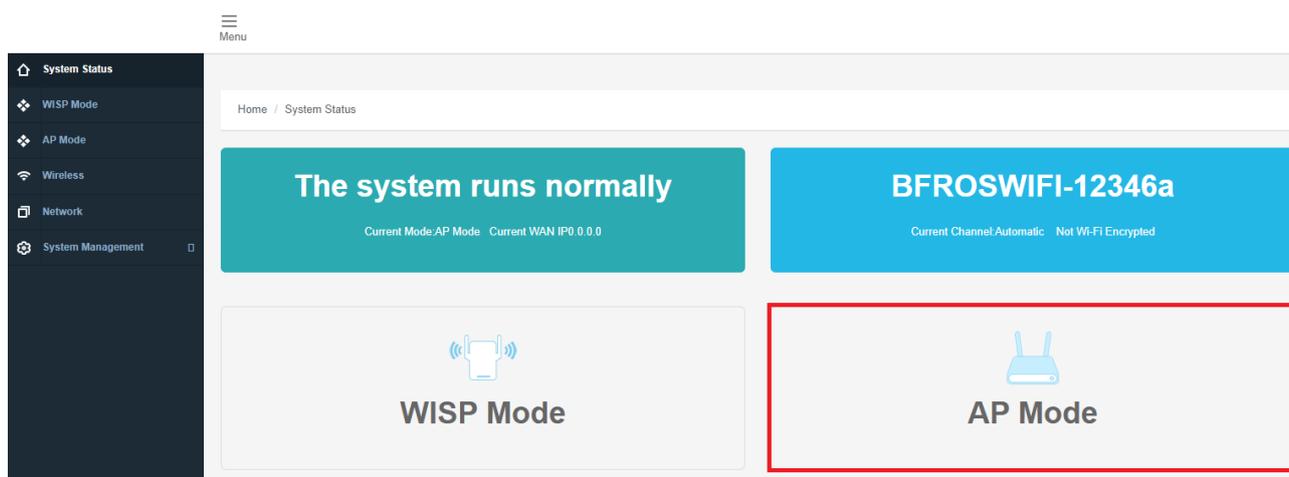

10

4. The following message will be displayed on your web browser,

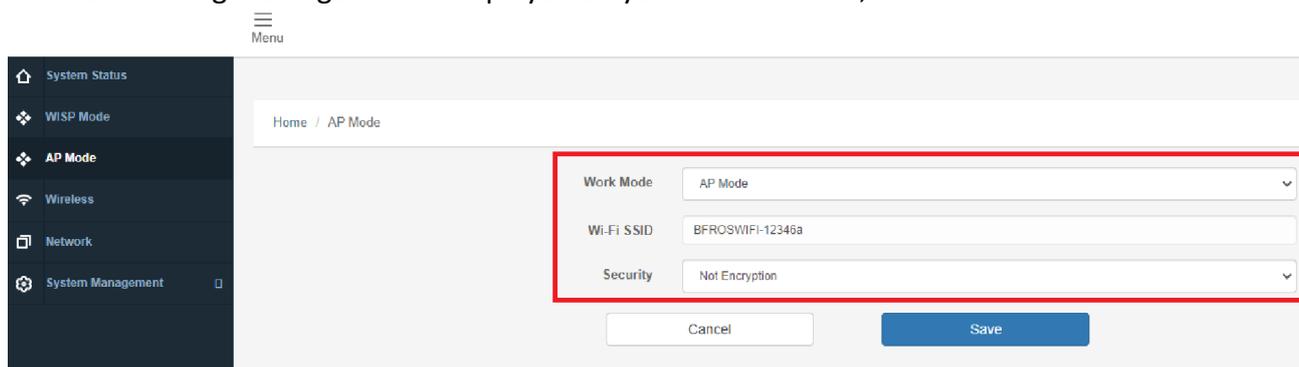

Relocate

Plug in the Wi-fi booster halfway between your router and the Wi-Fi dead zone.



The repeater Wi-fi booster to the end of the host network's SSID and uses the same Wi-Fi password.

DISPOSAL

- Coopers of Stortford use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons, packaging in accordance with your local recycling regulations.
- At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.
- Plastics, polybags – this is made from the following recyclable plastic.



| | |
|-------------------|--|
| Code & Symbol |  OTHER |
| Type of Plastic | ABS, PC |
| Commonly used for | CD's, crisp packets, various flexible packaging, baby bottles, sunglass lenses |
| Notes | Not often or widely recycled |

