

Kensington Music Centre with DAB Radio

L790 v01: 03/07/23

Please read and retain these instructions for future reference



Power Details:

Input: 15V, 1.7A, 25.5W

FM87.5 – 108MHz

Band III 174.92-239.2 MHz DAB

Accessories: Remote control (requires 2x AAA size batteries – not included)

Please read this instruction manual thoroughly before starting and ensure you are familiar with the operation of your new Kensington Music Centre with DAB Radio here.

User instruction

Unpack the components carefully. Please check all parts have been removed from the packaging.

WARNINGS AND SAFETY INSTRUCTIONS:

WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED:

- READ ALL INSTRUCTIONS BEFORE USE.
- FOR DOMESTIC INDOOR USE ONLY.
- BEFORE USE, CHECK THOROUGHLY FOR ANY DEFECTS AND DO NOT USE IF DEFECTS ARE FOUND. TAKE CARE NOT TO DROP THE APPLIANCE AS HEAVY IMPACTS MAY CAUSE INTERNAL DAMAGE.
- BEFORE CONNECTING THE APPLIANCE, CHECK IF THE VOLTAGE INDICATED ON THE BOTTOM OF THE APPLIANCE IS IN ACCORDANCE WITH THE MAINS VOLTAGE IN YOUR HOME.
- BEFORE EACH USE, CHECK THE APPLIANCE AND POWER CABLE AND PLUG CAREFULLY FOR DAMAGE.

Kensington Music Centre with DAB Radio

L790 v01: 03/07/23

Please read and retain these instructions for future reference

- DO NOT USE IF ANY DEFECTS ARE FOUND.
- WE RECOMMEND THAT THE POWER CABLE IS NOT KINKED OR STORED IN A TWISTED MANNER, AND THAT YOU REGULARLY CHECK ITS CONDITION.
- THIS APPLIANCE CAN BE USED BY CHILDREN AGED FROM 8 YEARS AND ABOVE, AND PERSONS WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES OR LACK OF EXPERIENCE AND KNOWLEDGE IF THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE IN A SAFE WAY AND UNDERSTAND THE HAZARDS INVOLVED. CHILDREN SHALL NOT PLAY WITH THE APPLIANCE. CLEANING AND USER MAINTENANCE SHALL NOT BE MADE BY CHILDREN WITHOUT SUPERVISION.
- CHILDREN OF LESS THAN 3 YEARS SHOULD BE KEPT AWAY UNLESS CONTINUOUSLY SUPERVISED.
- **SOME PARTS OF THIS PRODUCT CAN BECOME VERY HOT AND CAUSE BURNS. PARTICULAR ATTENTION HAS TO BE GIVEN WHERE CHILDREN AND VULNERABLE PEOPLE ARE PRESENT.**
- THE USE OF ANY ACCESSORY OR ATTACHMENTS NOT SUPPLIED BY COOPERS OF STORTFORD MAY CAUSE INJURIES AND INVALIDATE ANY WARRANTY YOU MAY HAVE.
- DO NOT LET THE POWER CABLE HANG OVER THE EDGE OF A TABLE OR COUNTER, OR TOUCH HOT SURFACES.
- DO NOT PLACE ON OR NEAR HEAT SOURCES.
- USE ON A LEVEL, STABLE SURFACE.
- DO NOT COVER THE ITEM IN ANY WAY WHEN IN USE AS THIS MAY CAUSE OVERHEATING.
- DO NOT USE THIS APPLIANCE FOR ANY OTHER USE THAN THE INTENDED USE IT IS DESIGNED FOR.
- ENSURE THERE IS SUFFICIENT DISTANCE BETWEEN THIS APPLIANCE AND OTHER ITEMS ON THE WORK SURFACE OR WORKSTATION, OR SUFFICIENT DISTANCE BETWEEN THE APPLIANCE AND THE CONFINES OF THE AREA IN WHICH IT IS SITUATED. WE RECOMMEND A MINIMUM CLEARANCE AROUND ALL FACES OF AT LEAST 10CM.
- DO NOT PLACE UNDER OR WITHIN 1M OF FLAMMABLE MATERIALS SUCH AS CURTAINS, DRAPERIES, SHELVES, LOOSE WALLPAPER, FURNITURE, CUSHIONS, ETC.
- TO PROTECT AGAINST ELECTRIC SHOCK, DO NOT IMMERSE POWER CABLE, PLUG OR APPLIANCE, IN WATER OR ANY OTHER LIQUID.
- UNPLUG FROM OUTLET WHEN NOT IN USE AND BEFORE CLEANING.

Kensington Music Centre with DAB Radio

L790 v01: 03/07/23

Please read and retain these instructions for future reference

- DO NOT LEAVE UNATTENDED WHEN POWERED ON.
- ALLOW TO COOL BEFORE CARRYING OR PLACING IN STORAGE.
- ANY REPAIRS MUST BE CONDUCTED BY A QUALIFIED ELECTRICIAN OR ELECTRICAL SERVICE AGENT.


Contents

PREPARATION FOR USE	6
LOCATIONS OF CONTROLS	7
GETTING STARTED	11
BASIC OPERATIONS.....	11
FM OPERATION.....	13
DAB OPERATION	13
CD - MP3 / USB OPERATION.....	14
BT FUNCTION.....	16
TURNTABLE OPERATION.....	17
LISTENING TO TAPE	18
<u>General operation</u>	18
USB RECORDING	19
AUX IN OPERATION.....	21
MUTE / EQ OPERATION	21
PHONES OPERATION	22
SETTINGS.....	22
FACTORY RESET	22

Kensington Music Centre with DAB Radio

L790 v01: 03/07/23

Please read and retain these instructions for future reference

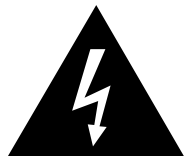

The lightning flash and arrow head within the triangle is warning sign alerting you of dangerous voltage inside the product

CAUTION

**RISK OF ELECTRIC SHOCK
DO NOT OPEN**

CAUTION : TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The exclamation point within the triangle is a warning sign alerting you of important instructions accompanying the product

IMPORTANT SAFETY INSTRUCTIONS:

1. Read the instructions. All user guidelines must be read before starting the device.
2. Keep the instructions for future use.
3. Attention, use and security guidelines must be respected.
4. The device must not be used near water or be put in contact with moisture.
5. Make sure no liquid is spilled on the device and device openings.
6. Move device carefully to avoid shocks.
7. Do not block the vents of the device outputs.
8. Do not place the device near a heat source (e.g. radiator). Do not expose it to sunlight.
9. Plug in the device as indicated in these instructions.
10. This device has a connection with overload protection (security device) decision-making.
11. For cleaning the device, please follow the recommendations in this manual
12. The power cable should be unplugged if device not used for longer periods.

Kensington Music Centre with DAB Radio

L790 v01: 03/07/23

Please read and retain these instructions for future reference

13. Device shall be repaired by a qualified person when:

- a. the plug or the power cord is damaged,
- b. objects have fallen into the device or liquid was spilled into the device.
- c. device was exposed to the rain,
- d. device does not work correctly without notable exterior change,
- e. device fell and the subwoofer is broken.

14. No user serviceable parts.

15. MAINS plug is used to disconnect the device and has to be readily operable and easily accessible.

16. To prevent injury, this device must be securely attached to the floor/wall in accordance with the installation instructions.




**CLASS I LASER
PRODUCT**

BATTERY INSTALLATION (Remote control)

The battery compartment is located on the back of the remote control.

1. Remove the battery compartment door.
2. Insert two (2) AAA size batteries (not included) into the battery compartment following the polarity markings inside the battery compartment.
3. Close the battery compartment door.

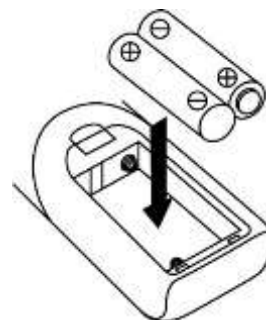

Kensington Music Centre with DAB Radio

L790 v01: 03/07/23

Please read and retain these instructions for future reference

BATTERIES

- **ALWAYS USE ALKALINE BATTERIES. DO NOT USE LITHIUM BATTERIES.**
- INSTALL BATTERIES IN ACCORDANCE WITH ITS POLARITY SYMBOLS. DO NOT FIT BATTERIES IN REVERSE.
- ENSURE THE BATTERY COMPARTMENT IS RE-SECURED BY THE SCREW OR SECURING DEVICE.
- DO NOT SHORT CIRCUIT THE BATTERY TERMINALS.
- REMOVE THE BATTERIES IF LEFT FOR LONG PERIODS.
- **KEEP BATTERIES AWAY FROM CHILDREN AND PETS.**
- IF YOU THINK BATTERIES MIGHT HAVE BEEN SWALLOWED OR PLACED INSIDE ANY PART OF THE BODY, SEEK IMMEDIATE MEDICAL ATTENTION.
- DO NOT MIX USED AND NEW BATTERIES.
- **NEVER DISPOSE OF BATTERIES IN A FIRE.**
- BATTERY DISPOSAL, SPENT OR EXPIRED BATTERIES MUST BE DISPOSED OF AND RECYCLED IN COMPLIANCE WITH YOUR LOCAL AUTHORITY REGULATIONS.
- FOLLOW THE BATTERY MANUFACTURER'S SAFETY, USAGE, AND DISPOSAL INSTRUCTIONS.

PREPARATION FOR USE

INSTALLATION

Unpack all parts and remove protective material.

Do not connect the unit to the mains before checking the main voltage and before all other connections have been made.


Do not cover any vents and make sure that there is a space of several centimetres around the unit for ventilation.

Kensington Music Centre with DAB Radio

L790 v01: 03/07/23

Please read and retain these instructions for future reference




LOCATIONS OF CONTROLS

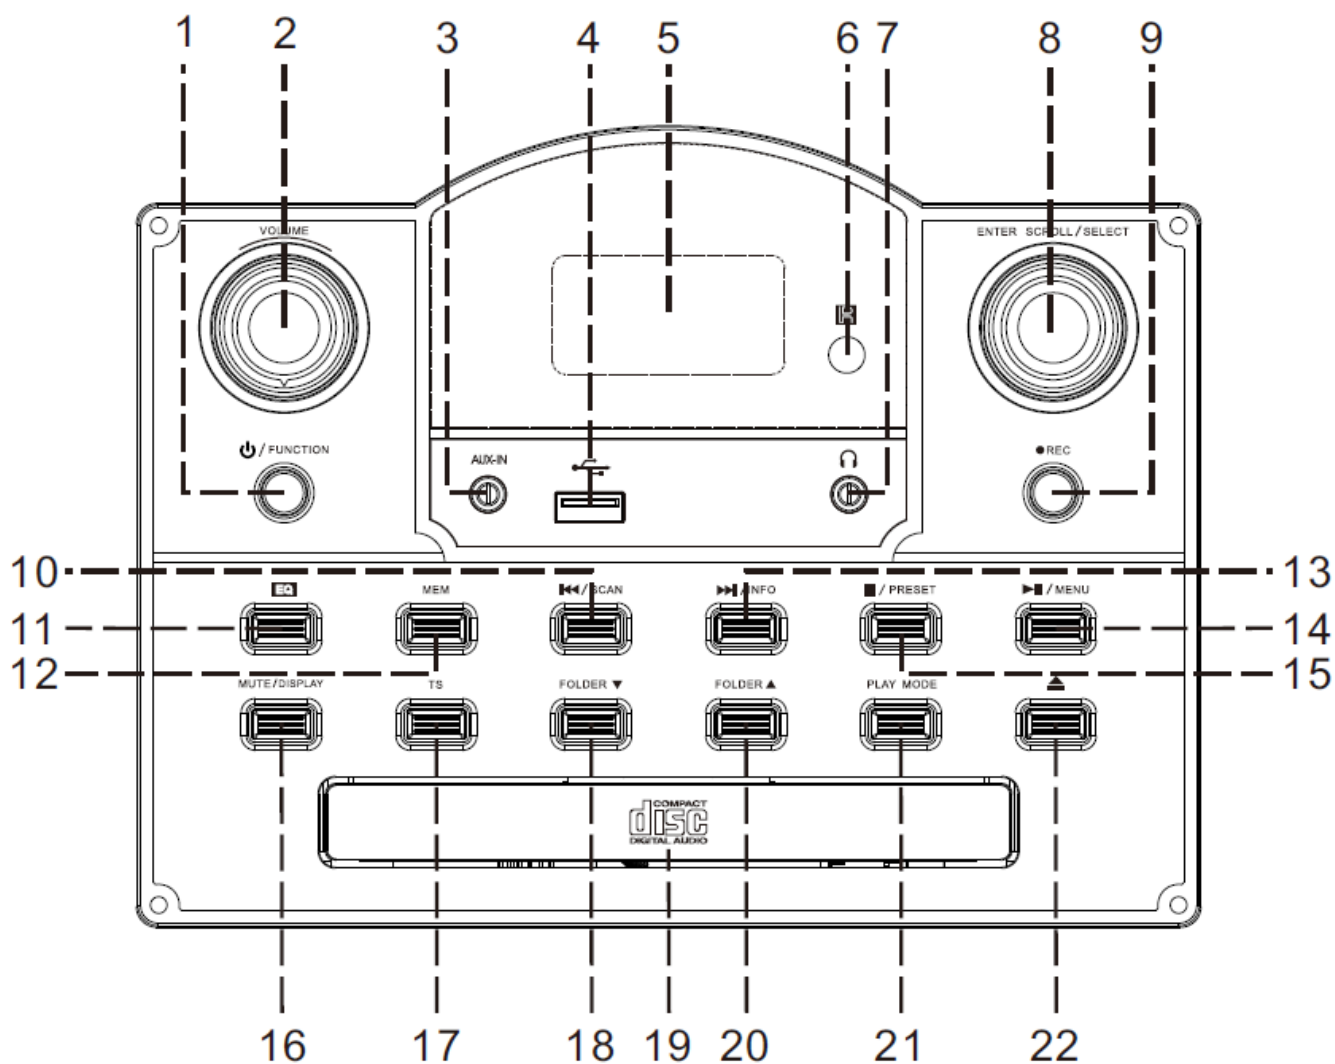

Kensington Music Centre with DAB Radio

L790 v01: 03/07/23

Please read and retain these instructions for future reference

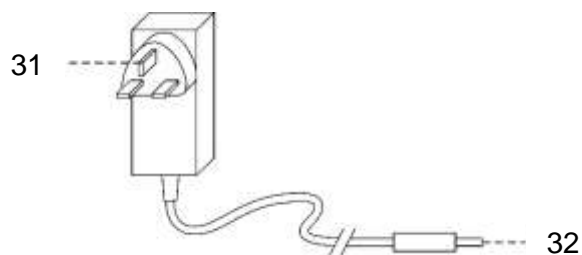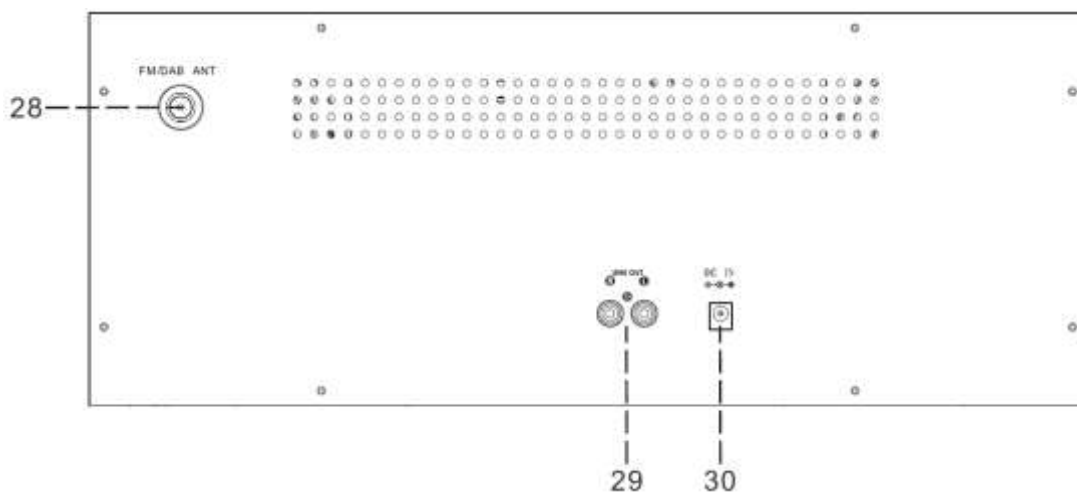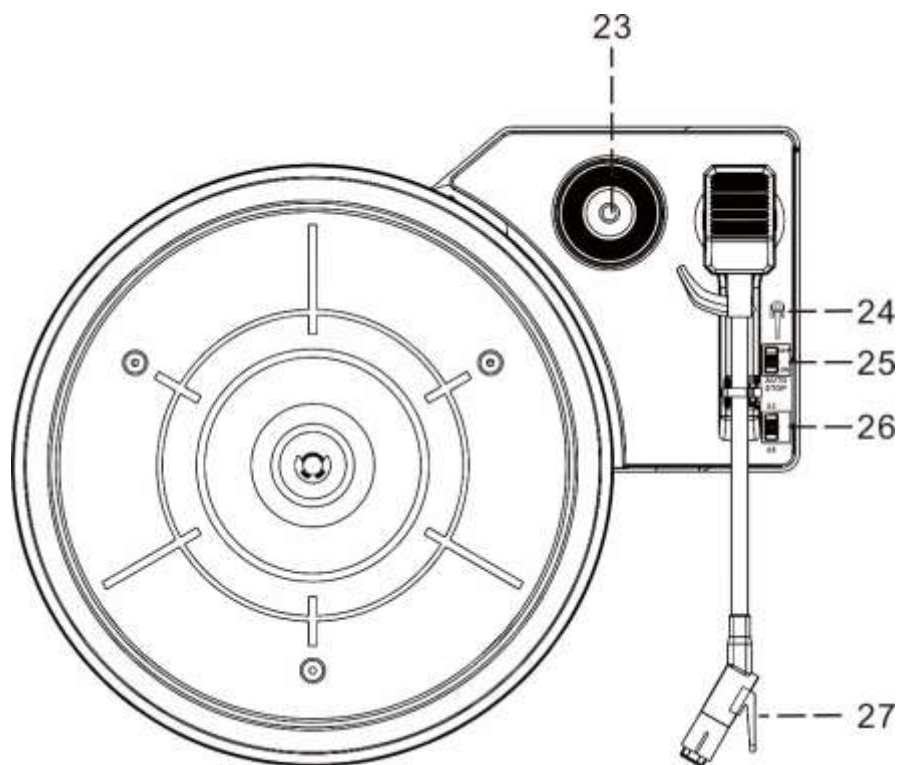






Kensington Music Centre with DAB Radio

L790 v01: 03/07/23

Please read and retain these instructions for future reference

Main Unit

- | | | |
|---|--|-------------------------------|
| 1. Standby/Function button | 11. Preset EQ button | 22. CD tray open/close button |
| 2. Volume knob | 12. Memory button | 23. Spindle adaptor |
| 3. 3.5mm aux in jack | 13. Skip up  / Info button | 24. Cue lever |
| 4. USB socket | 14. Play/pause  / menu button | 25. Auto stop switch |
| 5. LCD display | 15. Stop  / preset button | 26. Turntable speed selector |
| 6. Remote sensor | 16. Mute / Display button | 27. Pick up holder |
| 7. 3.5mm headphone jack | 17. TS (Track Separation) button | 28. FM antenna |
| 8. Enter / Scroll / Select | 18. Folder down button | 29. Line out socket (L/R) |
| 9.  record button | 19. CD tray | 30. DC in jack |
| 10. Skip down  / Scan button | 20. Folder up button | 31. AC/DC adaptor |
| | 21. Play mode button | 32. DC plug |

Kensington 7 in 1 Music Centre with DAB Radio

L790 v001: 03/07/23

Please read and retain these instructions for future reference

Remote Control

Power On/Standby: press to turn on or standby

Function: press to select the function modes

FOLDER +/-: In MP3/USB mode, press to select folder

EQ Sound settings: press to select different EQ effect

Mute: Press to mute the sound from speaker temporarily

Display: Press to show the current time

Volume + (to increase the volume)

Volume - (to decrease the volume)

P.MODE: In CD/USB mode, press to activate Repeat / Random play modes

INFO: In DAB/FM mode, press to show the radio information

REC: Press to activate recording function

⏮ - Track / Tune backwards

⏭ - Track / Tune forwards

⏸ - In CD/MP3 & USB mode, press once to Play or Pause the music

MENU: In FM/DAB mode, press to enter the Menu setting
In standby mode, press and hold to enter time setting

■ STOP: In CD/USB mode, press to stop CD/MP3 playback or cancel programmed memory


Enter – In FM mode, press to choose Stereo / Mono mode
In DAB mode, press and hold to choose “Manual Tune”

SCAN: In FM/DAB mode, press to tune the radio station

PRESET: In DAB/FM mode, press and hold to enter preset station setting. Then press it again to store the radio station. Press once to recall the preset station

DELETE: In USB mode, press to delete the file(s) in the USB memory

PROGRAM: In CD mode, press to active CD program function

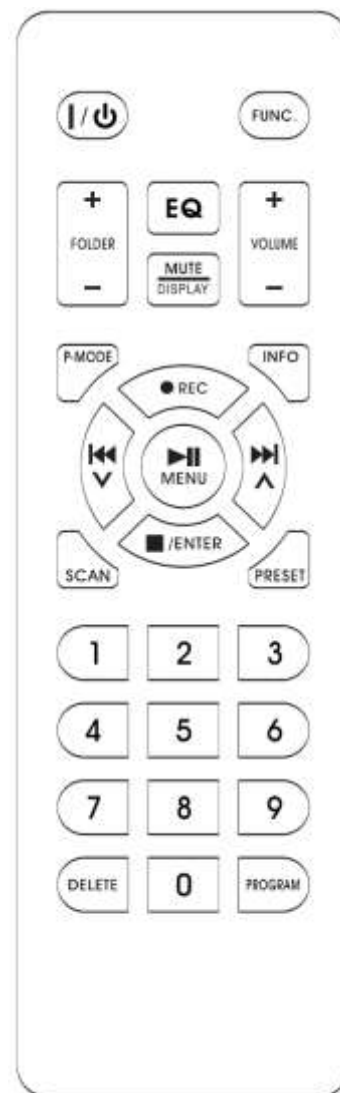

GETTING STARTED

Installation

- Unpack all parts and remove protective material.
- Do not connect the unit to the mains before checking the main voltage and before all other connections have been made.
- Do not cover any vents and make sure that there is a space of several centimeters around the unit for ventilation.

CONNECTION - AC/DC Adaptor

1. Insert the DC plug to the DC in jack of the main unit, then connect the AC/DC adaptor to AC outlet.
2. When you first plug the unit into the mains, the unit will go into standby mode. The Standby LED will light up
3. Turn on the unit by pressing "On/Standby" button. If the LCD display is on with backlighting, it means the power supply is normal. Now the system is ready to play music.

Caution:

Usage of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

This unit should not be adjusted or repaired by anyone except qualified service personnel.

Important:

Since movement of the CD mechanism and the sensitive circuitry may cause interference to the radio tuner nearby, switch this unit off while operating other radio devices.

BASIC OPERATIONS

Power ON / OFF

Press "POWER / FUNCTION" button to enter the working mode.

Press and hold “POWER / FUNCTION” button to turn off the unit in standby mode.

Selecting Modes

Press the “POWER / FUNCTION” button on the unit or the “FUNC.” button on the remote repeatedly to switch between modes.


Adjusting Volume

Rotate the “VOL” knob on the unit or press “VOL -/+” buttons on the remote to decrease / increase the volume.

Total 40 level volume and it displays MIN – MAX.

ERP power management

If the POWER button is not pressed and held to turn OFF the unit after it has stopped playing, the unit will power off automatically after around 10 minutes.

Press “POWER / FUNCTION” button on the unit or the “” button on the remote to wake the device up from standby mode.

FM OPERATION

1. Turn on the system and set the volume to a low level. Press "FUNCTION" button to enter into FM mode.
2. Connect the FM/DAB antenna onto the FM socket at the back of the unit, press the "SCAN" button to search the next available station. Or press and hold the "▶▶" or "◀◀" button for 4-5 seconds to start searching.
3. If you tune to a weaker FM station, the reception will automatically switch to mono.
You may press "SCROLL/ENTER" on unit or "ENTER" on remote control to change Stereo or Mono mode.
4. During FM working mode, press "INFO" button to see the following information on the screen: Auto(stereo/mono), Radio Text, Program Type, Signal Strength, Time/Date and Frequency.

When 'Strong stations only' shown on the display, the FM search only stops on strong stations.

DAB OPERATION

1. Connect the FM / DAB antenna at the back of the unit.
2. Turn the system 'on' and set the volume to a low level. Press "FUNCTION" button to enter into DAB mode.
3. The unit will scan the DAB station automatically until DAB stations are received, it stores all received DAB stations in the preset memory automatically. Once the auto-scan has been completed, rotate the "SCROLL" knob on the unit or the "TUNER -" or "TUNER +" button on the remote control to choose the DAB stations. If you tune into a DAB stereo station, 'stereo' will show on the screen.
4. During DAB playing mode, press "INFO" button on the main unit to see the information of the DAB station played on the screen, i.e. Program Type, Ensemble Information, Transponder, Audio Bit-Rate, Signal-Strength, Time/Date, DLS Information.

DAB MANUAL TUNING

1. Turn the system 'on' and press "FUNCTION" button to enter into DAB mode.
2. Press and hold the "SCROLL/ENTER" button, 'Manual tune' will show on the

display.

3. Turn the "SCROLL" knob on the main unit or the "TUNER -" or "TUNER +" button on the remote control to select the transponder, then press the "ENTER" button to confirm station to listen to.

MEMORY FUNCTION IN DAB/FM MODE


1. In DAB/FM playing mode, choose the desired radio station. Press and hold "PRESET" button for 2 seconds, "Empty P1" will flash on the display. Then, press "▶▶" or "◀◀" button to choose the desired preset station.
2. Press "PRESET" button again to confirm and 'Preset 1 Stored' will show on the display.
3. Repeat the above 1 - 2 steps to program 20 desired DAB stations or 20 FM stations.
4. Press "PRESET" button one time to recall the stored stations. Then, press "▶▶" or "◀◀" button to choose the stored station and then press "PRESET" button to confirm.

CD - MP3 / USB OPERATION

COMPACT DISC CARE

To remove a disc from its storage case, press down on the centre of the case and lift the disc out, holding it carefully by the edges.

Fingerprints and dust should be carefully wiped off the discs recorded surface with a soft cloth. Unlike conventional records, compact discs have no grooves to collect dust and microscopic debris, so gently wiping with a soft cloth should remove most particles. Wipe in a straight line from the inside to the outside of the disc.

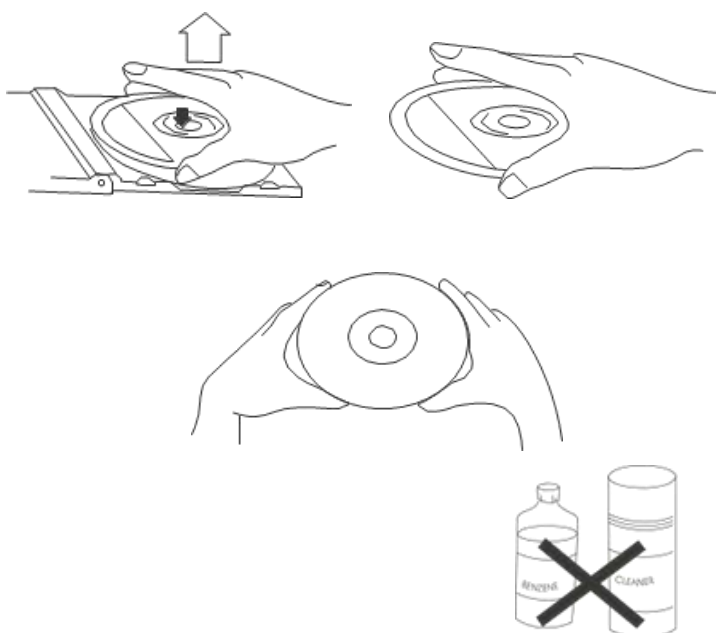

Note: CD or USB mode have the same operating procedures.

Playing CD or USB

1. Press the "Power" button at the front panel and set the volume to a low level.
2. Press the "FUNCTION" button to enter the CD or USB mode.
3. CD: Press CD door "OPEN" button to open the CD door. Place a CD with the printed side facing up inside the tray, then close the CD door. The first track will start playback.
USB: Carefully insert USB drive in the USB socket. The first track will start to play back.
4. Press "PLAY/PAUSE" button to pause the playback. The track time will start blinking. Press "PLAY/PAUSE" button again to resume the playback.
5. Press "STOP" to stop the playback.

TRACK SKIP AND HIGH SPEED TRACK SEARCH IN CD / USB MODE

1. During CD/USB playback, press "▶▶" (Tracks Forward) button repeatedly to skip to following tracks. When press "◀◀" (Tracks Backwards) button one time, the unit will return to the beginning of the track. Press "◀◀" (Tracks Backwards) button again for the previous track.
2. To rapidly search forward or backward within a track and locate a specific passage of it, press and hold "▶▶" or "◀◀" button. The player will search forward or backward at high speed. Release the button when you hear your desired passage and the playback will resume normal from that point.
3. To select next folder (Album), turn the "SCROLL" knob on unit or press the "FOLDER" button on the remote control to select the desired folder and start playback from the desired folder.

REPEAT and RANDOM Function

Press the “PLAY-MODE” button on the unit or the “P-MODE” button on the remote control to choose the Repeat-Mode:

Rep1: plays the current playing track

RepF: plays the current playing folder (only by MP3-CD or USB)

RepA: plays the complete CD or USB

Rand: Random Play-Mode

NOTE: There is no folder in the disc if no MP3 is detected. When playing a CD-Disc, there has no ALBUM repeating function

MEMORY FUNCTION IN CD/MP3 MODE

1. In stop mode, press “MEMORY” to enter PROGRAM mode, “MEM” “P01 T 01” will show on the screen.
2. Press the “▶▶” or “◀◀” button to select your desired track and then press the “MEMORY” button to confirm.
3. Repeat step 1 and step 2 to continue to program.
Note: You can save a total of 20 MP3 tracks and 20 CD tracks. ‘FULL’ will show on the screen once over 20 MP3 tracks or 20 CD tracks are saved.
4. Press the PLAY/PAUSE button to play the saved tracks, press “▶▶” or “◀◀” button to select a track in the sequence saved.
5. Press the “■ STOP” button twice to leave program mode. The entire program stored in memory is canceled.

BT FUNCTION

1. Turn on the unit and press the “FUNCTION” button to select *BT* mode.
2. The LCD display will show [BT disconnected] and flashing.
3. Select from your portable device (Smartphone, Tablet) the ID *BT* tagged as ‘L790’, then confirm connection.
4. Once the connection is finished and the equipment successfully paired, the LCD display will show [BT connected].

5. Now you can stream the music to the unit and enjoy the music through the speakers of this device. Adjust the Volume to a safe level.

TURNTABLE OPERATION


IMPOTANT

Phono and Aux are sharing the same function band. Once the 3.5mm Aux-in jack is being connected, unit will switch to Aux-in function automatically. Therefore, make sure the 3.5mm Aux-in jack is not being connected if you wish to play a record.

PLAYING RECORDS

This system includes a full-size, 3-speed, belt-drive turntable. You can play $33\frac{1}{3}$ / 45 / 78 rpm records.

1. Press the "FUNCTION" button to enter the "PHONO/AUX" MODE.
2. Make sure that you have removed the stylus cover from the stylus and have released the tone arm lock that secured the tone arm to the tone arm rest.
3. Set the turntable speed selector to the appropriate speed $33\frac{1}{3}$ or 45 or 78 rpm. If you are playing 45 rpm 'singles', place the 45 rpm adapter on the centre spindle.
4. Place your record on the centre spindle.
5. Raise the cue lever to lift the tone arm off its rest. Move the tone arm to the edge of the record. The turntable starts automatically. Use the cue lever to gently lower the tone arm onto the record.
6. Press the "VOLUME -/+ " button to the desired level.
7. When the tone arm reaches the end of the record it automatically returns to the tone arm rest and the record player stops.

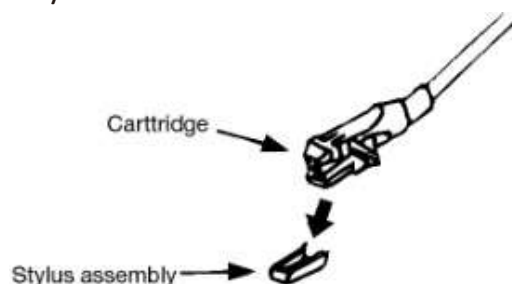

NOTE: Do not turn or stop the turntable manually. Moving or jarring the turntable without securing the tone arm clamp could result in damage to the tone arm.

LISTENING TO TAPE**General operation**

Cassette playback:

Turn on the unit and set to Phono/AUX function. Insert the tape following the direction of the below figure. The system will start the playback automatically after inserting of cassette tape


Stop and eject:

Press the "Tape forward / Eject" button completely inwards and the cassette tape will be ejected through the cassette door cover. The "tape forward / eject" button will stay at lowest height position.

Fast forward:

Press the "tape forward / Eject" button half inwards during Playback mode, the tape winding forward direction. The "tape forward / eject" button will stay at middle height position.

Slightly press the "Tape forward / Eject" button again to resume normal playback. The "tape forward / eject" button will resume to the highest position.

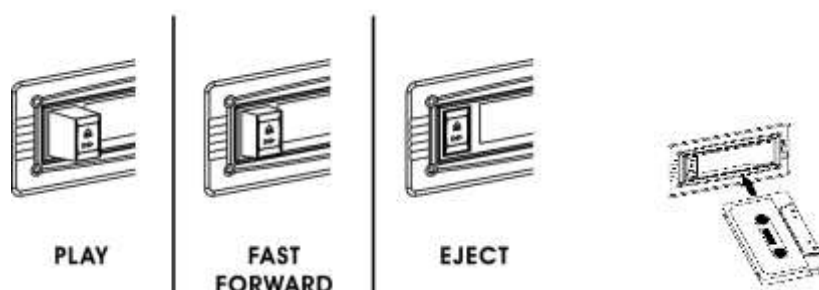

Remark

- Make sure the direction is correct when inserting the tape into the system.

- Some searching noise can be heard and the system cannot perform normal playback function during fast forward mode.
- It is recommended to remove the cassette tape from the system every times after listening and not to leave the cassette tape inside the system when not under playback mode.

USB RECORDING

1. CD/MP3 RECORDING

Recording one track:

1. Plug USB drive into USB socket.
2. When playing the desired CD/MP3 track, press the "RECORD" button once, "Check" then "REC USB" will show on the display.
3. Press "RECORD" button again which will show "REC One". Then press the "RECORD" button to confirm to record the playing track.

Recording all tracks in a disc:

1. Plug USB drive into USB socket.
2. During the CD/MP3 stop mode, press the "RECORD" button once, "Check" then "REC USB" will show on the display.
3. Press "RECORD" button again which show "REC All". Then press the "RECORD" button to confirm to record all tracks.

2. BT RECORDING

1. Plug USB drive into USB socket.
2. During the BT playing mode, press the "RECORD" button once and the display will show "Check" then "REC USB". "USB" is flashing.
3. Press "RECORD" button again to confirm. "REC USB" is flashing in the display and the unit starts recording.

3. AUX IN RECORDING

1. Plug USB drive into USB socket.

2. During the AUX-IN playing mode, press the “RECORD” button once and the display will show “Check” then “REC USB”. “USB” is flashing.
3. Press “RECORD” button again to confirm. “REC USB” is flashing in the display and the unit starts recording.

4. DAB/FM RECORDING

1. Plug USB drive into USB socket.
2. During the DAB/FM playing mode, press the “RECORD” button once and the display will show “Check” then “REC USB”. “USB” is flashing.
3. Press “RECORD” button again to confirm to choose record the playing DAB/FM station. “REC USB” is flashing in the display and the unit starts recording.

NOTE:

- Press “STOP” button to stop the record function during recording mode.
- Press **“INFO” button of the remote control** under Bluetooth/Aux recording, to select the recording bit rate from 32 – 256KHz. Press “▶▶” or “◀◀” button to choose the desired bit rate and press “INFO” button again to confirm.
- The bit rate of Bluetooth/Aux-in/DAB/FM/ recording is preset at 128KHz.
- The recording bit rate for CD/MP3 recording cannot be changed.
- After recording, the USB will generate different folders to store the recorded tracks:

FROM CD: to store the tracks recorded from MP3 disc

RIP: to store the tracks recorded from CD disc

RED: to store the tracks recorded from BLUETOOTH / AUX-IN / DAB / FM

DELETE USB RECORDING (BY REMOTE CONTROL)

Delete one Track:

1. During the USB stop mode, press the “DELETE” button on the remote control once, ‘DEL-T001’ will show on the display.

2. Press “▶▶” or “◀◀” button to choose the file to delete.
3. Press “DELETE” button again and the display will show “Yes” and flashing “No”, press “▶▶” to choose “Yes”
4. Press “DELETE” button again to confirm.

Delete all Tracks:

1. During the USB stop mode, press and hold the “DELETE” button for few seconds on the remote control, ‘DEL-A’ will show on the display
2. Press “DELETE” button again and the display will show “Yes” and flashing “No”, press “▶▶” to choose “Yes”.
3. Press “DELETE” button again to confirm. All files in the USB will be deleted.

AUX IN OPERATION

Press “FUNCTION” button to select the AUX mode. Insert the audio cable (not included) into the matching ‘AUX IN’ socket of the unit.

Start the playback of the connected device and you can hear the sound in the unit.

MUTE / EQ OPERATION

During playing mode, press “MUTE” button on the remote control once, the sound will not be heard from the speakers and ‘MUTE’ will show on the display; press “MUTE” button or “VOL +/-” or “EQ” button to cancel mute function and the sound can be heard again from the speakers.

During playing mode, press “EQ” button to choose the different sound effect from “POP/ CLASSIC /ROCK/ JAZZ / FLAT”, you can choose the desired one.

Note: To leave the “EQ” mode, press and choose ‘FLAT’.

PHONES OPERATION



During usual operation insert the earphone's cable (not included) into the matching 'PHONES' socket of the unit. Now you can hear the sound exported to your earphones.

Note: Set the volume lever lower during the PHONES operation.

To prevent possible hearing damage, do not listen at high volume levels for long periods.

SETTINGS

LANGUAGE SETTING

During FM or DAB playing mode, press "MENU" button and then rotate the "SCROLL" knob Backward or Forward to choose 'Language' and press "SCROLL" knob to confirm enter into "LANGUAGE" setting. You can choose from "English – German". Press the "SCROLL" Knob again to choose your desired language.

TIME AND DATE

1. Set the unit to Standby mode
2. Press and hold the "MENU" button on the remote control or "MENU/PLAY-PAUSE" button on the unit, "24 HR" is flashing in the display.
3. Set the "12 HR" or "24 HR" mode by pressing "INFO/▶▶" or "◀◀/SCAN" button. To confirm press the "MENU" button, the hour begin flashing.
4. Set the hour by pressing the "INFO/▶▶" or "◀◀/SCAN" button. To confirm press the "MENU" button, the minutes begin flashing.
5. Set the minutes by pressing the "INFO/▶▶" or "◀◀/SCAN" button. To confirm press the "MENU" button again and the time setting is finished.

FACTORY RESET

In DAB mode, press and hold the "INFO" button on the unit, "Press Select Key to Reset" will show in the display. Press the "SCROLL/ENTER" button to confirm. "System Reset" will show in the display which means the factory reset is successful.

PLUG WIRING (UK & IRELAND)

This appliance is supplied with a mains adaptor/charger with BS1363 plug pins.

DO NOT use if the socket outlets in your home or office are not suitable for this product's mains adaptor/ charger plug pins. Attempts to insert the mains adaptor/charger into the wrong socket is likely to cause electric hazard or damage.




DO NOT use with any other mains transformer/charger than the one that is supplied with this product

CARE AND CLEANING INSTRUCTIONS

- Always switch off and unplug before cleaning.
- Do NOT immerse in water. Risk of electric shock.
- Do NOT use abrasive cleaners or sharp utensils to clean this appliance.
- Wipe surfaces with a soft dry cloth.
- Allow to dry thoroughly before further use.
- Store the appliance in a cool, dry place.

DISPOSAL

- Coopers of Stortford use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons, plastics, packaging in accordance with your local recycling regulations.
- At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.
- Plastics, plastic packaging – this is made from the following recyclable plastic.

Code & Symbol	 PVC	 OTHER	 LDPE
Type of Plastic	Polyvinyl Chloride	ABS, Silica gel	Low Density Polyethylene

CUSTOMER SERVICES:

Customers in GB (England, Scotland and Wales), please contact our customer services -

UK Head Office, 11 Bridge Street, Bishop's Stortford, CM23 2JU, Tel: 0330 331 0300

Customers in Northern Ireland and Europe, please contact our customer services -
D.S.B. LD, 160 Bd. de Fourmies, 59100 Roubaix, France, Tel: (+44) 1279 701269

