



Microwave Jacket Potato Cooker



Thank you for purchasing our Microwave Jacket Potato Cooker, a great solution to enjoy perfectly baked potatoes in a microwave.

Thanks to its unique combination of a lid vent and dimpled base, which allows moisture to escape, you can tuck into your baked potato in minutes

Simply add butter, cheese or beans for fast, nutritious and delicious lunches, suppers or snacks.

Features:

- Cooks in minutes
- Easy to use
- Top rack dishwasher safe
- Microwave use only
- Generous capacity: you can fit as many as 3 medium size potatoes

Please note:

Cooking times may vary depending on your microwave.
It is important to know how your microwave works and to check the food every now and then, especially the first few times, shortening or lengthening the cooking times as necessary

HOW TO USE:

**QUICK AND
EASY
TO USE**



Step 1:

Put in Potato



Step 2:

Put lid on cook
7 - 10 min



Step 3:

Take out
well-cooked potato



SUGGESTED COOKING TIME:

MICROWAVE OVEN POWER	Potatoes QTY	Cooking Time	Max Cooking Time	MICROWAVE OVEN POWER	Potatoes QTY	Cooking Time	Max Cooking Time
800 Watts	1 piece	10 mins	12 mins	900 Watts	1 piece	8 mins	10 mins
	2 piece	12 mins	16 mins		2 piece	11 mins	15 mins
	3 piece	17 mins	23 mins		3 piece	17 mins	22 mins
MICROWAVE OVEN POWER	Potatoes QTY	Cooking Time	Max Cooking Time	MICROWAVE OVEN POWER	Potatoes QTY	Cooking Time	Max Cooking Time
1000Watts	1 piece	7 mins	10 mins	1200Watts	1 piece	6 mins	9 mins
	2 piece	11 mins	13 mins		2 piece	10 mins	12 mins
	3 piece	15 mins	20 mins		3 piece	15 mins	20 mins

SAFETY AND USE GUIDELINES:

- For microwave use only. Not suitable for use in conventional ovens.
- Before first use, wash the product using a soft cloth and ensure it is dry before using.
- Do not use heavy detergents, bleach or other corrosive cleaning agents.
- If using in a dishwasher, place carefully in the dishwasher’s top rack.
- If item is or appears damaged, do not use.
- Ensure the product is dry, clean and free of food particles before pre-heating.
- Always use heat-resistant gloves when removing the Microwave Jacket Potato Cooker from the microwave, use both hands and keep the item level.
- Should the item show any sign of fault, immediately stop using.
- Do not place flammable liquids, corrosive chemicals or non-food items in the Microwave Jacket Potato Cooker
- Only use in a microwave that has a functioning turntable, ideally of 24.5cm in diameter. Ensure that the Microwave Jacket Potato Cooker can rotate freely when in use.
- Do not use the grill or convection function on the microwave when using the Microwave Jacket Potato Cooker
- Allow item to cool between uses to avoid overheating and damage
- Always allow item to cool completely before washing.
- Distribute the food evenly in Microwave Jacket Potato Cooker and keep an eye on the product whilst in use.

