



Multi-Function Rechargeable Scrubber



Thank you for purchasing our Multi-Function Rechargeable Scrubber.

We hope you will be happy with your purchase.

Features:

- Cordless and Rechargeable
- Interchangeable Heads
- Single Charge lasts up to 60 minutes
- The pole extends to 44"

Set includes:



Scrubber handle

Extension pole

Spinning scrubber


All purpose brush
– great for all around cleaning

Heavy duty brush
– perfect for large jobs with lots of flat surface area

Corner brush
– ideal for cleaning grout, corners and tight places


AC adapter

Setting up unit:

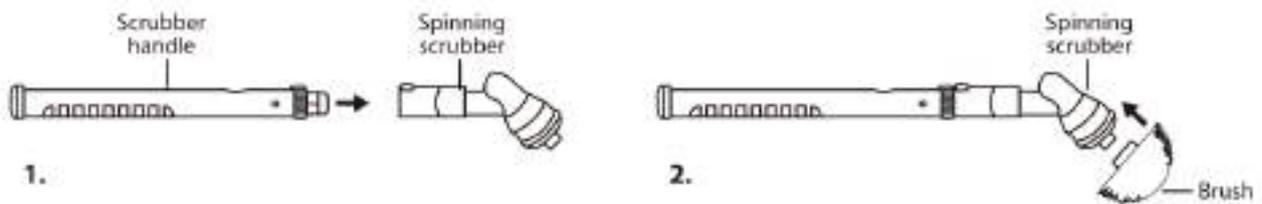

Normal:

1. Connect the scrubber handle to the spinning scrubber.
2. Firmly insert the required brush to the spinning scrubber.

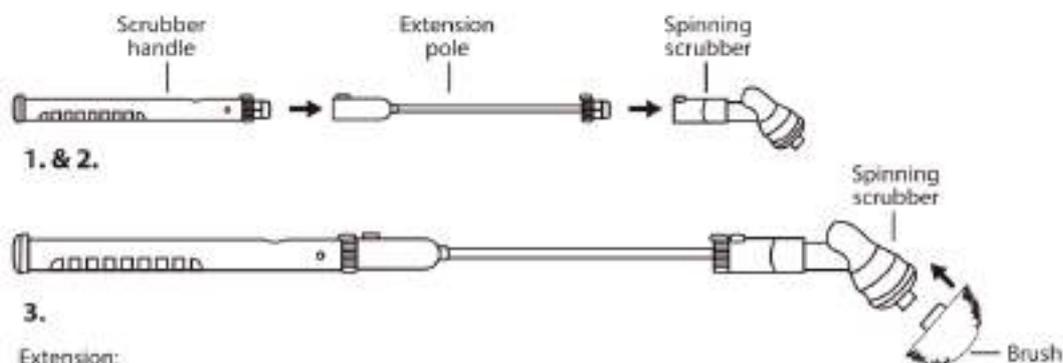

Extension:

1. Connect the scrubber handle to the extension pole until you hear a "click" sound.
2. Connect the spinning scrubber to other side of the extension pole until you hear a "click" sound.
3. Firmly insert the required brush to the spinning scrubber.

To use:

1. Add water and cleaning solution to the place you want to clean and / or the head of scrubber.
2. Turn on the scrubber by pressing on / off switch.
3. Hold the unit handle and slowly. Control the scrubber head to the desired cleaning area softly.
4. Turn off when finished.
5. Make sure the unit is dry before storing.

Care Instruction:


- Clean Main unit, scrubber hand and extension pole with a soft cloth.
Only use a mild detergent to clean unit. Do not use alcohol-based or abrasive cleaners.
3 detachable scrubber brush heads can be hand washed. Detach brush heads before washing.
Let all parts dry before storing.

Charging the Unit

1. Please make sure the unit is off
2. Open the bottom cover on the Scrubber's handle
3. Connect the adapter to the charging point and wall socket to charge
4. Red Indicator will turn on
5. The first charge will take 20 hours of charge
6. Once the battery is fully charged, the Red light will turn to Green
7. Remove the adapter when fully charged and cover the bottom cover
8. Subsequent charges from empty will take up to 4-5 hours

Technical Parameters

110-240V~0.25-0.3A~50/60HZ

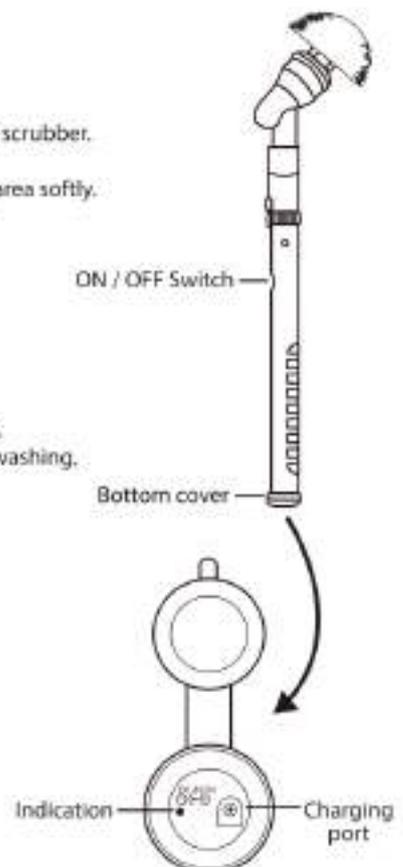

CAUTION

Store out of reach of children. This is not a toy.

Close supervision is required. When any appliance is used by or near children.

To protect against the risk of electric shock, do not put the battery charger in water or other liquids. Do not charge battery if it is wet or shows signs of corrosion.

Do not use an extension cord. Plug the charger directly in to a standard 120v power outlet.

Do not charge this unit outdoors.

Do not attempt to use this charger with any other products.

Do not attempt to charge this product with any other charger.

Do not use this charger in wet or damp conditions. It is intended for indoor use only.

Do not use the charger near sinks or tubs. Do not immerse in water.

Do not abuse the cord. Do not carry the charger by the cord or yank the cord to disconnect keep charging cord away from heat and sharp edges.

Do not allow the cord to hang over the edge of a table or counter or touch hot surfaces. The charger should be placed away from sinks and hot surfaces.

Unplug the charger when not in use and before cleaning.

Do not operate adapter if it has received a sharp blow, been dropped or otherwise damaged in any other way. Do not disassemble the adapter for any reason.

For best results, do not charge a battery when the temperature is below 40°F (5°C) or above 105°F (40°C).

Always store this unit indoors.

Do not operate in the presence of explosives and / or other flammable fumes or liquids.

Do not store or use the appliance close to high temperatures.

If there is an abnormal noise, smell, smoke or any other failure or breakage is found during operation, turn off the switch and unplug it.

Only charge the unit when it is in the off position.

This appliance is only for household use, not for commercial or industrial use.

Always use proper eye protection when using this unit with irritating substances. Rubber gloves are also recommended.

Only change the scrubber heads when the unit is in the off position.

Keep hair, loose clothing and all parts of the body away from the moving parts of the unit.

Do not use this unit when the protective charging cover is not in place. Do not submerge the handle in water or other liquids.

To avoid risk of suffocation, keep all plastic bags away from children.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.