

3x3m DELUXE POP UP GAZEBO

Item codes: M321

Instructions for Use

v001: 25/01/24

Please read and retain these instructions for future reference


GAINSBOROUGH
Garden & Wildlife

Read Before Assembly


- Upon opening of the package, please check that all parts are included and that no damage has occurred during shipping. Please kindly note that, in order to ensure that the product arrives in good condition and avoid possible damage or deformation during transportation, we have reinforced the packaging.
- Please read the instructions carefully before assembly. Mind not pinching your fingers when setting up or shutting down the canopy.
- Please setup the canopy using two people or more.
- Keep this product away from flame or heat source. Do not cook, use fire-pits, use outdoor heaters, ignite fireworks under or close to the canopy.
- Do not setup or use the canopy when there is heavy wind, rain or snow.
- Please check all fixings regularly and re-tighten as necessary to ensure safety.

Parts

Canopy Frame x 1pcs

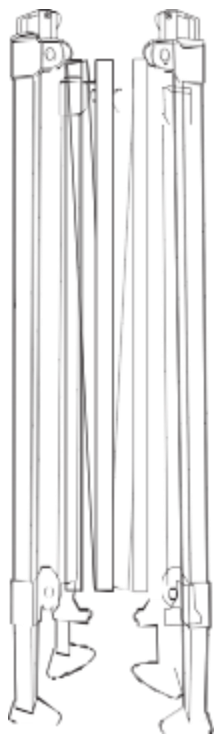


Canopy Top x 2pcs

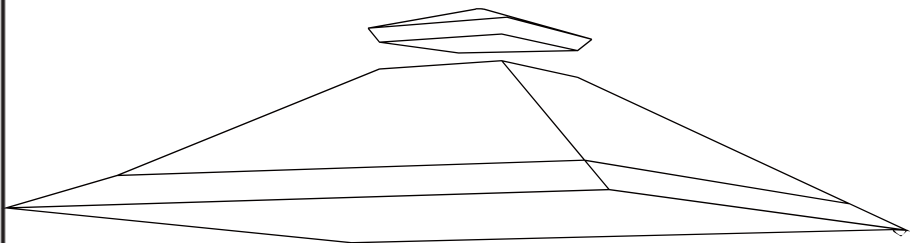

RopeX4pcs




Tent Stake X 8pcs

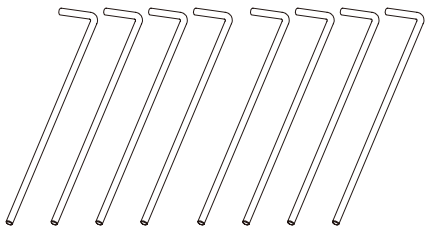

Setting Up the Canopy


1 UNFOLDING THE FRAME AJAR

- Unfold the frame ajar by pulling the frame from each end. (Mind not pinching fingers.)

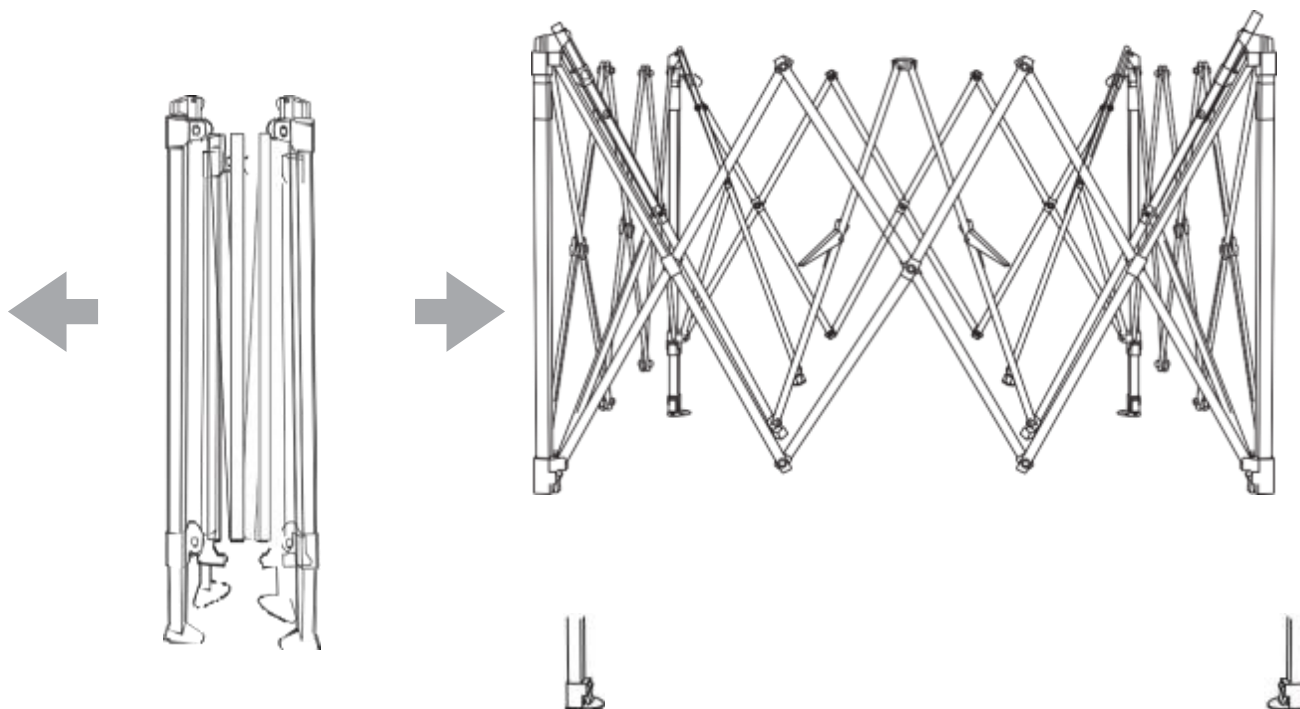



- Pull up the metal rods at the four corners of the frame.



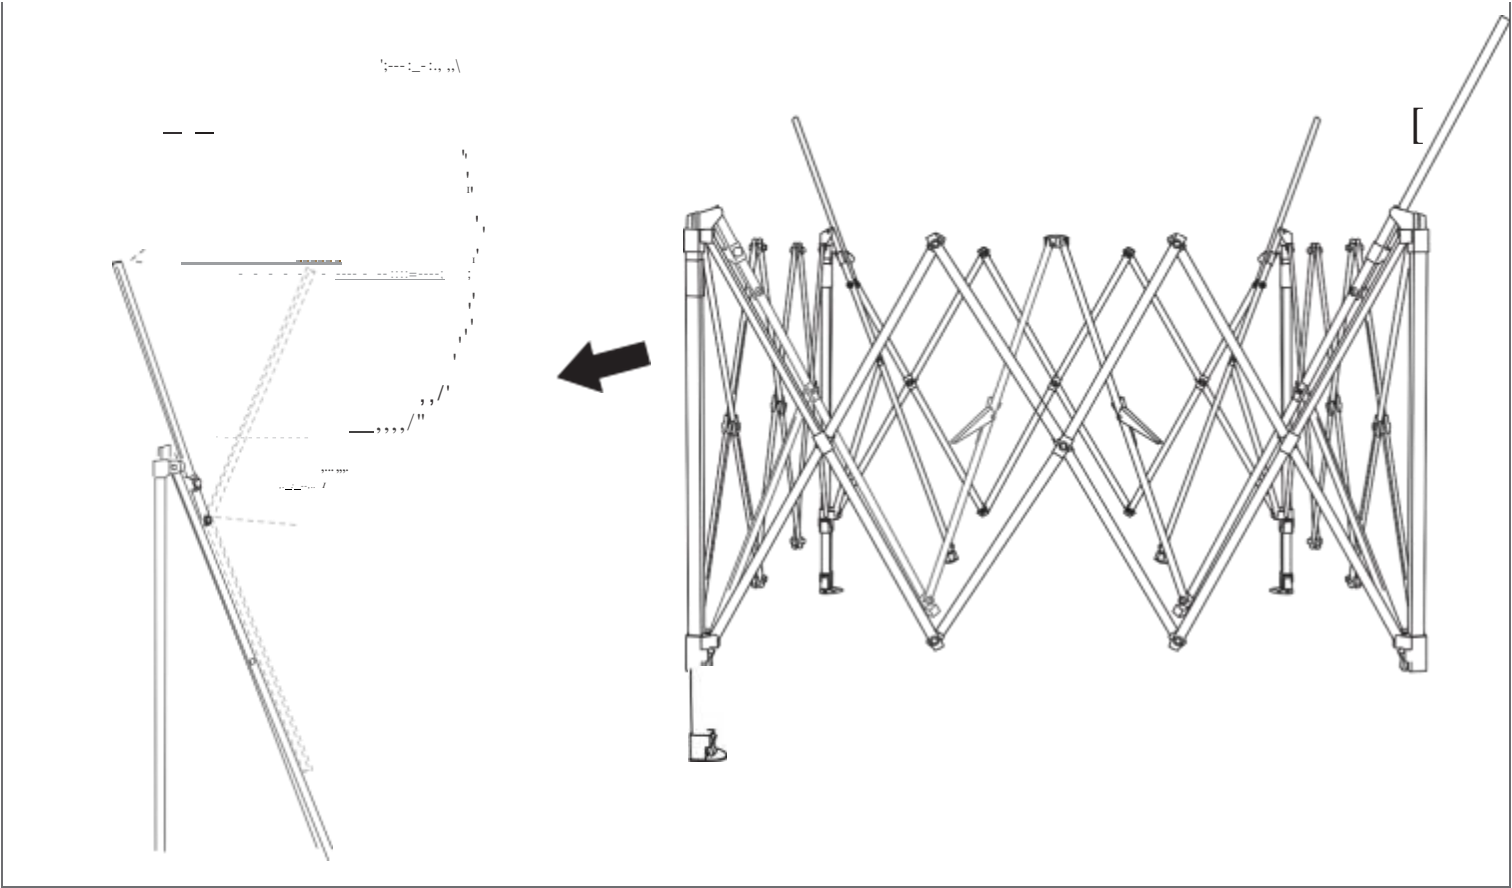

2, ATTACHING THE CANOPY TOP

- Takeout the small canopy top and hang the 4 cloth corners inside it on the 4 plastic brackets corresponding to the center of the top of the frame.

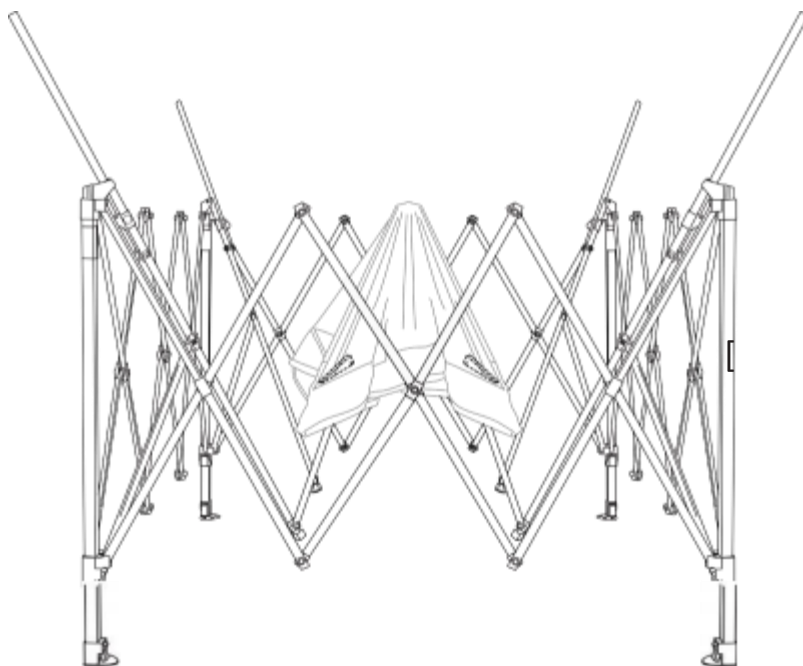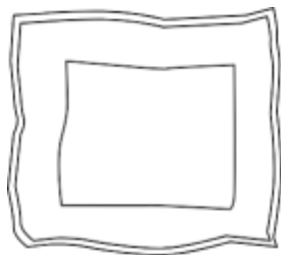


- Takeout the big canopy top, put it on the top of the frame, hang the 4 cloth corners inside it on the supported metal rods.
- Close the Velcro straps at the seams of the big and small canopy top to fix the two.





3 UNFOLDING THE FRAME FULLY

- Unfold the frame fully by pushing the legs' sliders up. The sliders will be secured if the frame is fully unfolded.

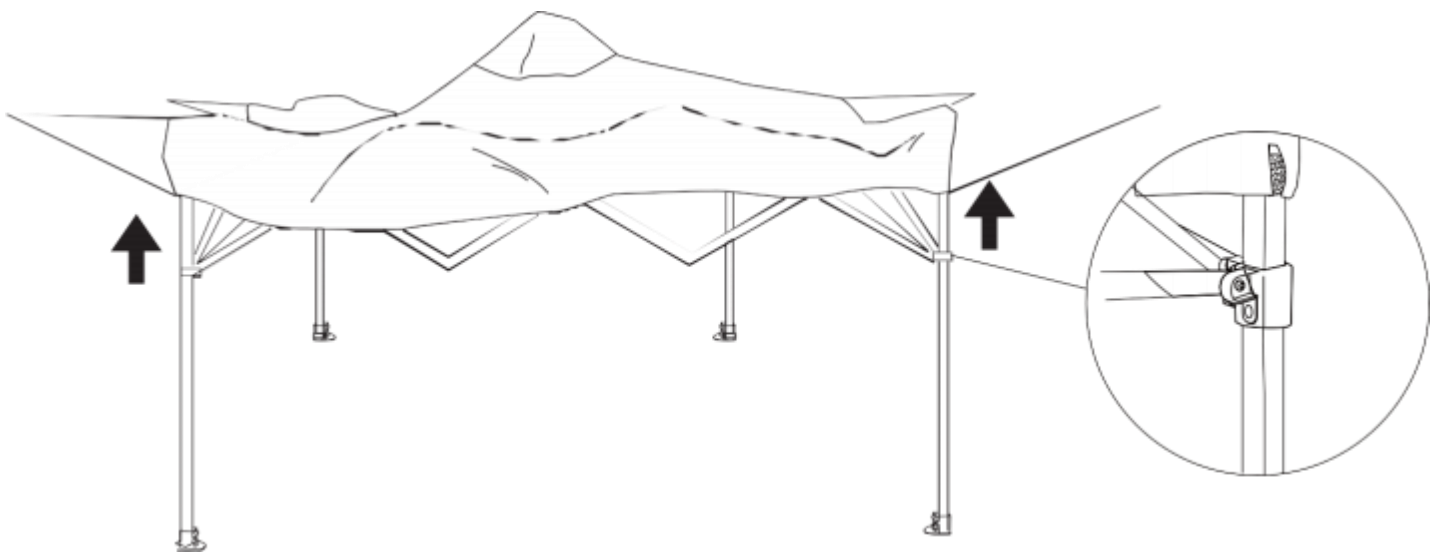



- Secure the canopy top to the corners of the canopy frame using the Velcro connections.

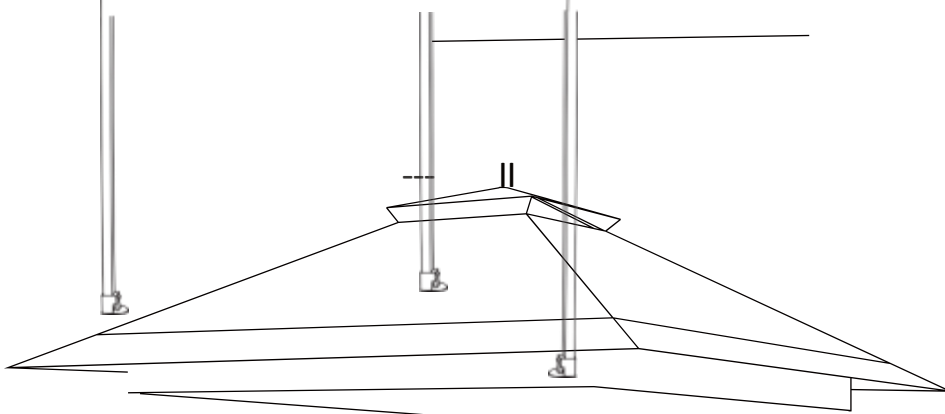


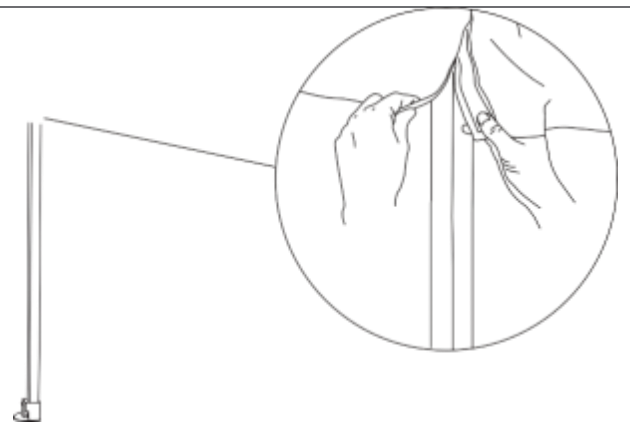

4 ADJUSTING THE CANOPY HEIGHT

- There are three height adjustment holes in the inner leg. Press the red button on each leg and raise or lower the height of the canopy. (*Mind not pinching fingers.)

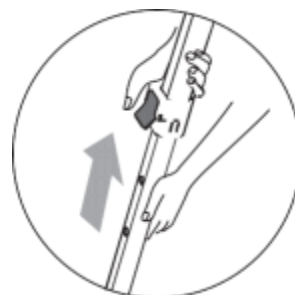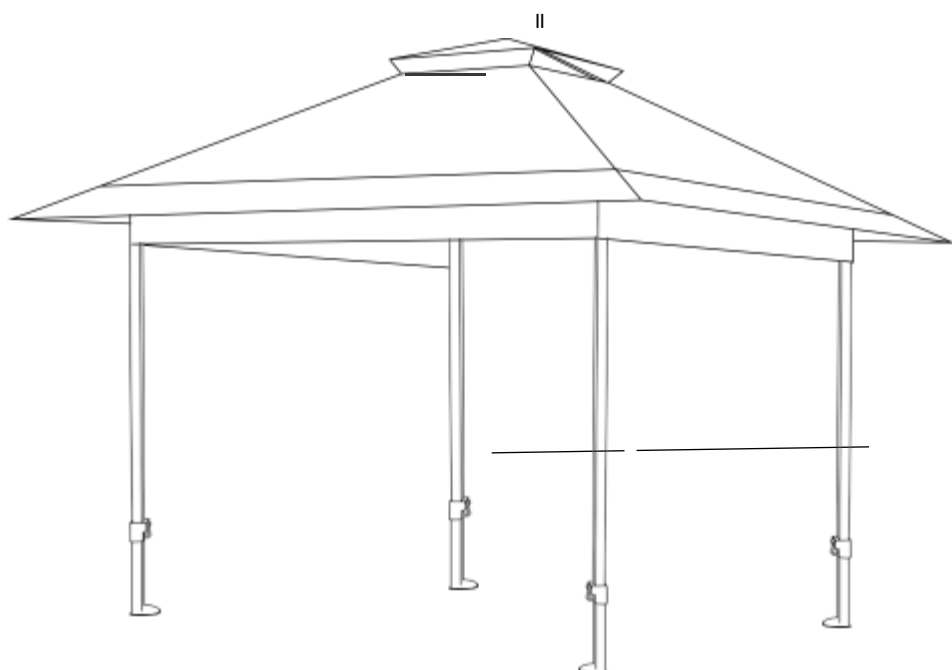


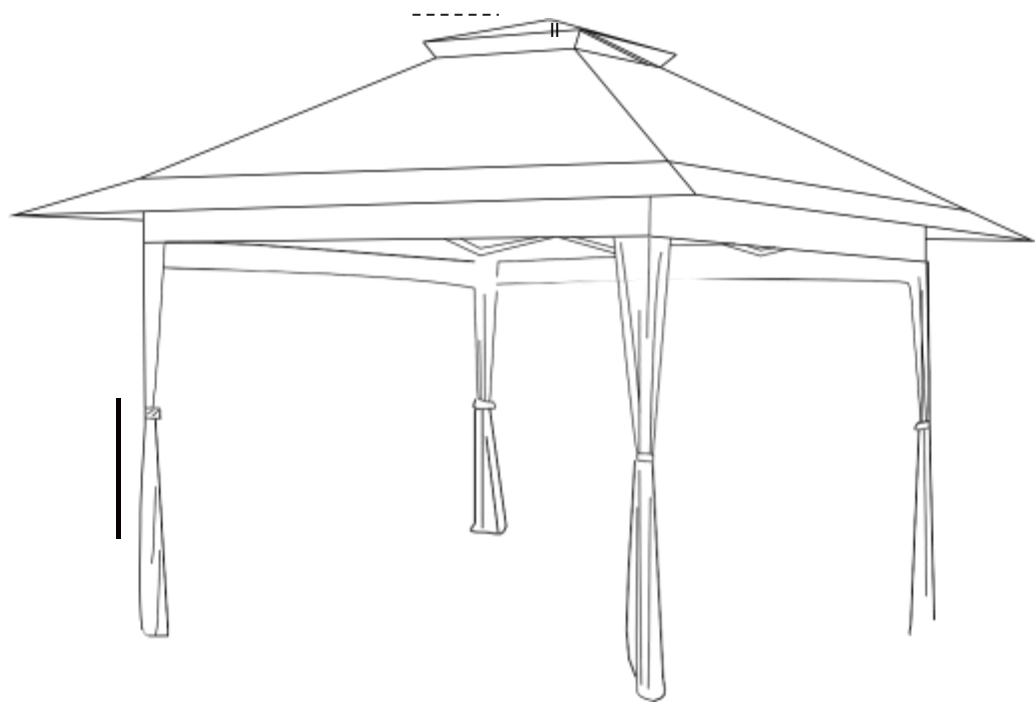

6 SECURING THE CANOPY IN PLACE

- Insert a stake into the foot of each canopy leg.



Secure four stakes to the ground at a proper distance from the canopy. Tie the canopy's ropes to the stakes. Ensure appropriate tension on the rope. Fill up the sandbags and fix them to each leg.

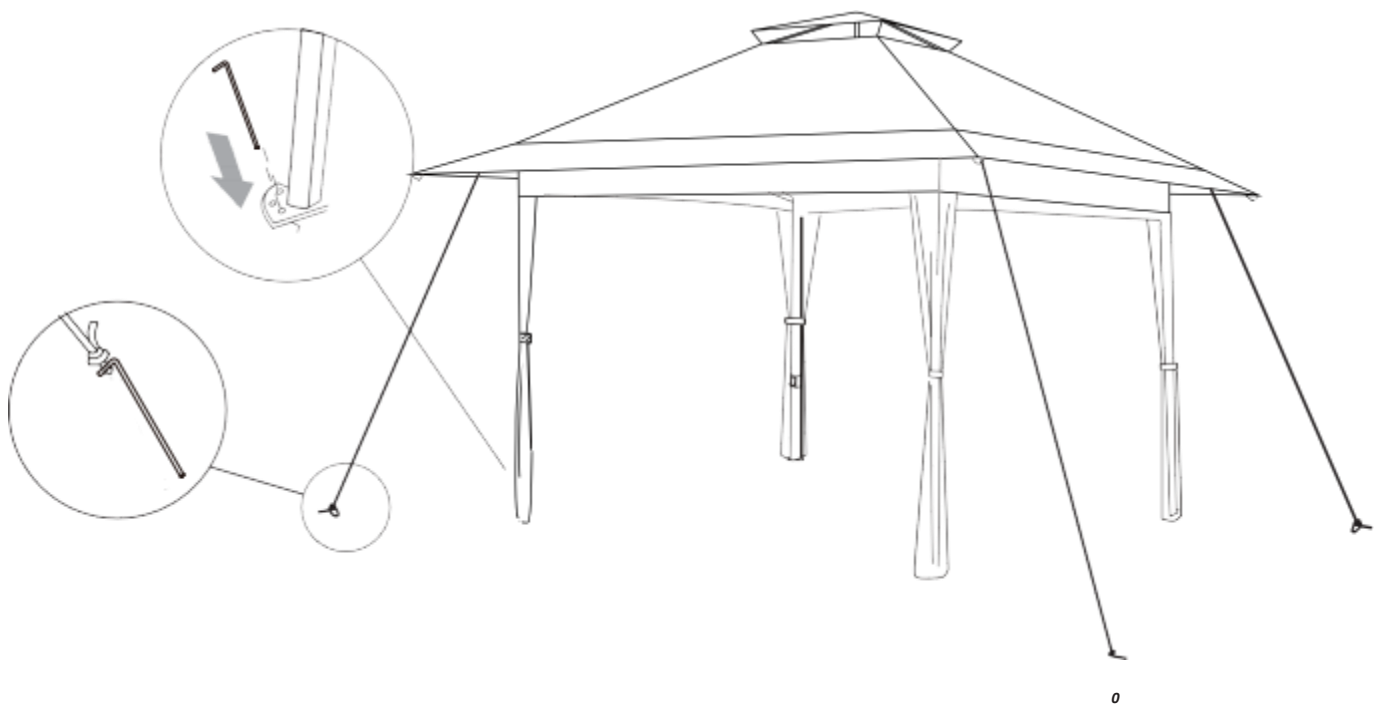

TAKING DOWN THE CANOPY



1. PUT AWAY ITEM FOR FIXING CANOPY



Untie the sandbags and pull the stakes from the ground.

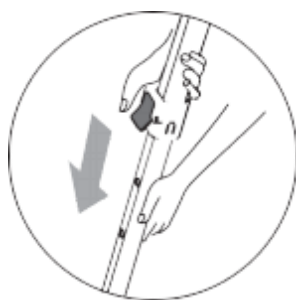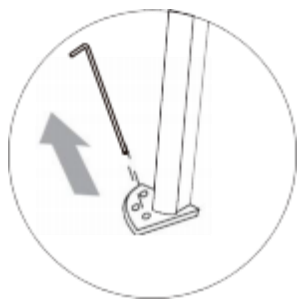

2 UNLOCKING THE FRAME

- ☐ Press the push button on each leg and retract the legs to their original height.
- ☐ Remove the canopy tops, and press the plastic button on the supported metal rod to retract the metal rod.
- ☐ Lift four legs up and squeeze the frame to fold up.

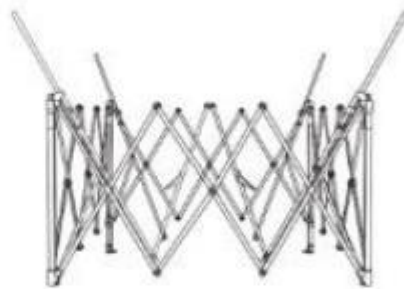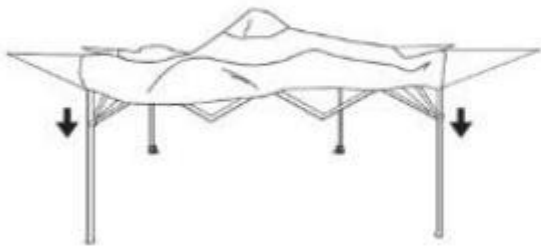

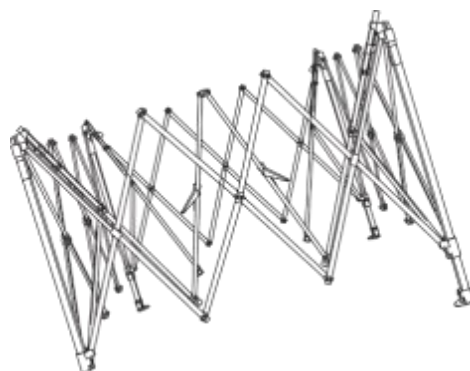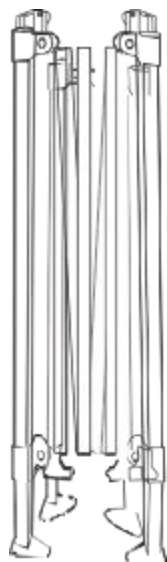

CARE AND CLEANING INSTRUCTIONS:

- Do NOT use abrasive cleaners or sharp utensils to clean this product.
- Store the item in a cool, dry place.
- Wipe with a clean dry cloth.
- Please mind your fingers when assembling.

DISPOSAL

- Coopers of Stortford use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons, packaging in accordance with your local recycling regulations.
- At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.

**CUSTOMER SERVICES:**

Distributed by / Verteilt durch / Distribué par.

UK: The Enterprise Department Ltd.

11 Bridge Street, Bishops Stortford, Herts, UK, CM23 2JU

Tel: 0330 331 0300

NI/EU:

D.S.B. LD, 160 Bd. de Fourmies, 59100 Roubaix, France

Tel: (+44) 1279 701269