

Please read and retain these instructions for future reference



## Component List



Power details:

Product model: AD009

Load speed: 1200rpm

Load current: 2.8A

Rated voltage: 3.7V

Battery capacity: 1500mp

Charging voltage: 5V

Rated speed: about 1000pm

Rated current:  $\leq 12\text{A}$

Operating temperature range: -10°C~40°C.


Single working time:  $\leq 30s$

Charging current: 1 A

**ALWAYS USE ALKALINE BATTERIES.  
DO NOT USE LITHIUM BATTERIES.**

**Please read this instruction manual thoroughly before starting and ensure you are familiar with the operation of your new rechargeable turbo chopper.**


## Component List

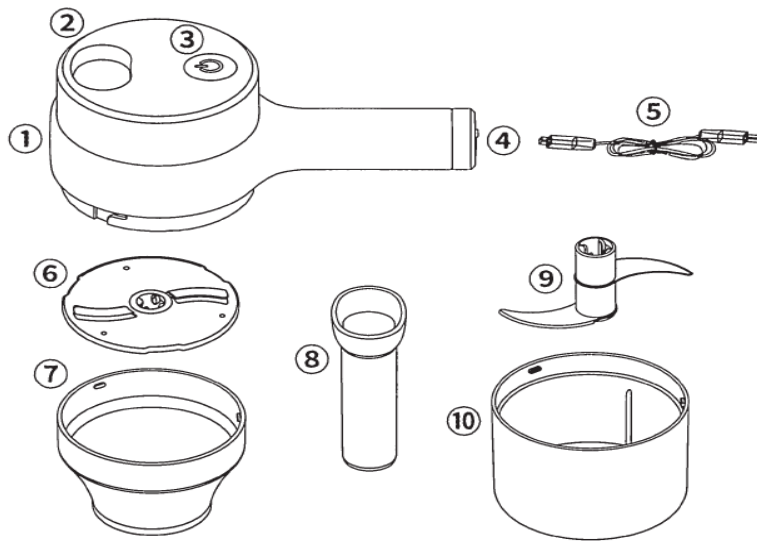

- 1 - Main Body
- 2 - Feeding Port
- 3 - Power Button
- 4 - USB-C charging port
- 5 - USB-C Charging cable
- 6 - Slicing blade
- 7 - Clear Cone
- 8 - Pusher Bar
- 9 - Cutting Blade
- 10 - Clear Cup

### User instructions:


Please fully charge the unit for the first time. When fully charged, the blue indicator light will stay on.

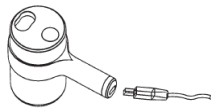

NOTE: The product is equipped with USB-C interface charging only cable.

### Cutting

1. Put the Cutting Blade on the knife shaft of the transparent cup.
2. Then put food into the transparent cup and attach to the main unit. The feeding port can be used to add extra ingredients during cutting/crushing.
3. Press the power button gently to turn on (the blue indicator light stays on when pressing the power button)
4. Power will turn off after 30 secs. Press again to continue chopping

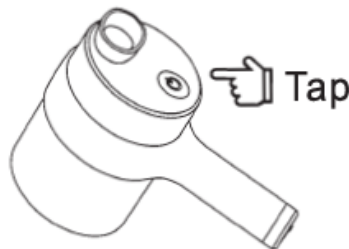

NOTE: if the unit is overfilled, it may cause the blade to jam and not rotate.

The blade is sharp so take care when handling and do not put fingers into the feeding port



1 Install the blade.



2 Put the ingredients into the cooking cup.



3 Rotate and install the cup body until the snap is tight.



4 Feed materials directly into the feeding port.



5 Cover the pressing bar to prevent the splashing of food materials and gently press the switch at the same time.



6 The feeding port can add ingredients while crushing and then pour out the ingredients after completion.

## Slicing

- 1 Hold the disc with the blade facing up and insert into the slot on the clear cone.
- 2 Attach the clear cone to the unit and twist to lock.
- 3 Press the power button gently to turn on (the blue indicator light stays on when pressing the power button)
- 4 Feed food into the unit through the feeding port. Use the pusher bar to avoid placing fingers near the cutting blades.



Put the disc with up knife face up.



When installing the cutter head, align the groove position with the snap position of the cup body and install it.



Rotate and install the transparent cone until the snap is tight.



After installation, put the ingredients into the feeding port, and press the switch gently to use (please be sure to use it with the pressing bar)

Key for the indicator light prompt:

State	instructions
Charging	The red light is on for a long time
Full charge	The blue light is on for a long time
In use	The blue light is on for a long time

Troubleshooting:

Fault phenomenon	Indicator light	Cause analysis	Troubleshooting
Press and hold the switch after installing the host and it will not start	Not on / red light flashing	Battery out of power	Charge the host
Host charging	The light is not bright	Check whether the charging line is loose	Unplug and reinsert the charging port
Pungent smell when used		It is normal for a new motor to be used for the first time	If it still emits pungent smell after repeated use please contact the designated maintenance point

#### WARNINGS AND SAFETY INSTRUCTIONS:

WHEN USING ANY APPLIANCE, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED:

- READ ALL INSTRUCTIONS BEFORE USE.
- FOR DOMESTIC INDOOR USE.
- NOT FOR COMMERCIAL USE.
- BEFORE USE, CHECK THOROUGHLY FOR ANY DEFECTS AND DO NOT USE IF DEFECTS ARE FOUND. TAKE CARE NOT TO DROP THE APPLIANCE AS HEAVY IMPACTS MAY CAUSE INTERNAL DAMAGE.

- THE USE OF ANY ACCESSORY OR ATTACHMENTS NOT RECOMMENDED BY COOPERS OF STORTFORD MAY CAUSE INJURIES AND INVALIDATE ANY WARRANTY YOU MAY HAVE.
- DO NOT PLACE ON OR NEAR HEAT SOURCES.
- DO NOT COVER THE ITEM IN ANY WAY WHEN IN USE AS THIS MAY CAUSE OVERHEATING.
- DO NOT USE THIS APPLIANCE FOR ANY OTHER USE THAN THE INTENDED USE IT IS DESIGNED FOR.
- DO NOT LEAVE SWITCHED ON OR UNATTENDED.
- BEFORE ADDING INGREDIENTS PLEASE MAKE SURE THE BLADE IS INSTALLED IN PLACE AND OPERATES FREELY.
- THIS PRODUCT CANNOT BE USED TO PROCESS HARD FOOD, SUCH AS COFFEE BEANS, SOYBEANS, RICE, ROCK SUGAR, ICE CUBES , FAT MEAT OR MEAT WITH BONE OR FASCIA OR FROZEN FOOD WITH SIMILAR INGREDIENTS.
- HOLD THE KNIFE HOLDER ON THE BLADE WHEN TAKING IT OUT OR INSTALLING IT AS THE BLADE IS VERY SHARP.
- THIS PRODUCT IS SUITABLE FOR CUTTING MELONS , FRUITS AND VEGETABLES, PLEASE DO NOT LEAVE THE SCOPE OF USE OF THE PRODUCT.
- BEFORE DISCARDING THE APPLIANCE, THE BATTERY MUST BE REMOVED FROM THE APPLIANCE.
- WHEN TAKING OUT THE BATTERY, THE APPLIANCE MUST BE POWERED OFF AND THE BATTERY SHOULD BE DISPOSED OF SAFELY.

#### **BATTERY WARNING:**

- **KEEP OUT OF REACH OF CHILDREN. IF SWALLOWED OR PLACED INSIDE ANY PART OF THE BODY SEEK IMMEDIATE MEDICAL ATTENTION.**
- INSTALL BATTERIES IN ACCORDANCE WITH ITS POLARITY SYMBOLS. DO NOT FIT BATTERIES IN REVERSE.
- DO NOT SHORT CIRCUIT THE BATTERY TERMINALS.
- REMOVE THE BATTERIES IF LEFT FOR LONG PERIODS.
- **KEEP BATTERIES AWAY FROM CHILDREN AND PETS.**
- DO NOT MIX USED AND NEW BATTERIES.
- **NEVER DISPOSE OF BATTERIES IN A FIRE.**
- BATTERY DISPOSAL, SPENT OR EXPIRED BATTERIES MUST BE DISPOSED OF AND RECYCLED IN COMPLIANCE WITH YOUR LOCAL AUTHORITY REGULATIONS.
- FOLLOW THE BATTERY MANUFACTURER'S SAFETY, USAGE, AND DISPOSAL INSTRUCTIONS.

#### **CARE AND CLEANING INSTRUCTIONS**

- ALWAYS SWITCH OFF AND REMOVE BATTERIES BEFORE CLEANING.
- DO NOT IMMERSE IN WATER.
- DO NOT USE ABRASIVE CLEANERS OR SHARP UTENSILS TO CLEAN THIS APPLIANCE.
- WIPE SURFACES WITH A SOFT DRY CLOTH. DRY THOROUGHLY BEFORE FURTHER USE.
- STORE THE APPLIANCE IN A COOL, DRY PLACE
- AFTER USING THE PRODUCT, PLEASE IMMEDIATELY CLEAN THE BLADE, TRANSPARENT CUP, TRANSLAPRATE CONE, PRESSING BAR AND THE LOWER COVER OF THE MAIN COVER.
- WHEN CLEANING THE PRODUCT HOST, YOU CAN DIRECTLY WASH IT UNDER THE FAUCET FOR A SHORT TIME OR WIPE IT WITH A SOFT WET CLOTH.
- THE BIOLOGICAL PIGMENT OF THE FOODS WILL NOT AFFECT THE USE AND HEALTH.
- THE BLADE IS VERY SHARP AND CANNOT BE TOUCHED BY HAND. IN ORDER TO AVOID INJURY, THE WATER SHOULD BE VERY CLEAR DURING THE CLEANING SO THE BLADE IS ABLE TO BE SEEN WHEN BEING CLEANED.
- IT IS STRICTLY FORBIDDEN TO DISINFECT ALL PARTS OF THIS PRODUCT AT HIGH TEMPERATURE.
- AFTER CLEANING THE PRODUCT, PLEASE WIPE OR DRY ALL PARTS OF THE PRODUCT, THEN REASSEMBLE IT.
- PUT THE PRODUCT AWAY AND IF IT IS UNUSED FOR A LONG TIME CHANGE AND MAINTAIN THE PRODUCT WITHIN THREE MONTHS.
- DO NOT USE SHARP OBJECTS TO SCRATCH THE MACHINE.

- THE CONTINUOUS WORKING TIME OF THIS PRODUCT CANNOT EXCEED 30 SECONDS. AFTER CONTINUES WORKING FOR 30 MINUTES SECONDS IT NEEDS TO REST FOR 2 MINUTES BEFORE USING. THE INTERVAL OF 30 SECONDS IS 2 MINUTES AS A CYCLE.
- AFTER CONTINUOUS WORKING FOR 3 CYCLES, THE PRODUCT MUST BE COOLED FOR 30 MINUTES TO ENSURE THE SERVICE LIFE OF THE PRODUCT.



#### BATTERY DISPOSAL

- SPENT OR EXPIRED BUTTON CELLS MUST BE DISPOSED SAFELY AWAY FROM CHILDREN ACCESS AND RECYCLED IN COMPLIANCE WITH YOUR LOCAL AUTHORITY REGULATIONS.
- FOLLOW THE BATTERY MANUFACTURER'S SAFETY, USAGE, AND DISPOSAL INSTRUCTIONS.

#### DISPOSAL

- Coopers of Stortford use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons in accordance with your local authority recycling regulations.
- At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.



Code & Symbol		
Type of Plastic	Polystyrene	Please Specify (includes ABS, Nylon)

#### CUSTOMER SERVICES:

Distributed by / Verteilt durch / Distribué par.

UK: The Enterprise Department Ltd.  
11 Bridge Street, Bishops Stortford, Herts, UK, CM23 2JU  
Tel: 0330 331 0300

NI/EU:  
D.S.B. LD, 160 Bd. de Fourmies, 59100 Roubaix, France  
Tel: (+44) 1279 701269

