

 
# Tree LED Door Curtain with Tension Rod

## Instructions for Use

Please read and retain these instructions for future reference

Item No: M992 / 46567

v001: 05/07/24

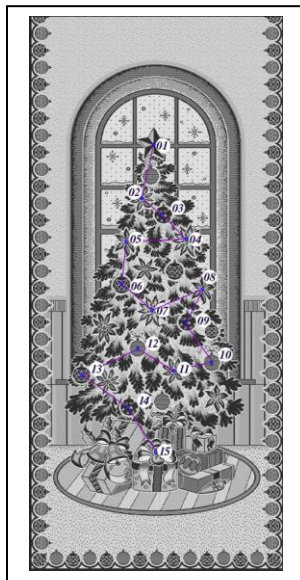

**Power Details:** Battery Type & details: 2x AA Batteries  
(Not Included)

**ALWAYS USE ALKALINE BATTERIES.  
DO NOT USE LITHIUM BATTERIES.**

**Please read this instruction manual thoroughly before starting and ensure you are familiar with the operation of your new Tree LED Door Curtain with Tension Rod**

### **ASSEMBLY INSTRUCTIONS / INSTRUCTIONS FOR USE:**

Unpack the components carefully. Please check all parts have been removed from the packaging.

- For indoor use only as decorative curtain panel or wall hanging.
- This seasonal product is not intended for permanent use.
- DO NOT place this product near heaters, fireplaces, candles or other sources of heat.
- Please read and follow the instructions for light placement below.
- This product is NOT A TOY and should NOT be operated by children. Children should be supervised whenever this product is in their presence.
- Remove light string before washing. DO not use in or near water with lights attached.

 
## Parts

- 1x 15 LED light bulbs chain. (2 x AA batteries required. Not included)
- 1x plastic rod (4 parts)
- 1x tension rod
- 1x fabric panel



## Assembly instructions

- Determine the back of the panel (the care and fibre label are sewn on the back of the panel).
- Refer to the diagram. The number 1 represents the bulb at the end of the string. The number 15 represents the bulb nearest the battery box.
- Working from the back of the panel, begin with the end light and start inserting the tip of the bulb through the knit hole. The hole looks like a buttonhole in fabric. Push the lights all the way through the curtain.
- Follow the number sequence in the diagram, inserting all bulbs into the proper holes.
- Use tension rod to hang on top at the top of the panel (rod pocket on panel) and adjust the size of tension rod to fit the door/window.
- Assemble the plastic rod (4 small parts) to become one long plastic rod. Insert this into the pocket at the bottom of the panel.
- Once you hang the panel, you may find it necessary to slightly untwist some of the wire on the light so make the panel hang flat and smooth.
- Once in place the battery pack with batteries inserted can be placed into the small pocket at the back side in the middle of the panel.

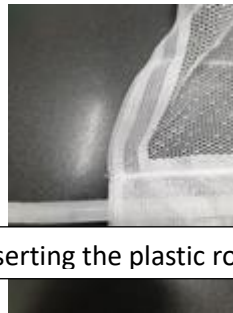

Inserting the plastic rod



Battery box pocket

## Care & Maintenance

Machine washable at 30 degrees. **IMPORTANT: Remove string lights before washing.**

## **WARNINGS AND SAFETY INSTRUCTIONS:**

WHEN USING ANY APPLIANCE, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED:

- READ ALL INSTRUCTIONS BEFORE USE.
- FOR DOMESTIC INDOOR USE ONLY.
- NOT FOR COMMERCIAL USE.
- BEFORE USE, CHECK THOROUGHLY FOR ANY DEFECTS AND DO NOT USE IF DEFECTS ARE FOUND. TAKE CARE NOT TO DROP THE APPLIANCE AS HEAVY IMPACTS MAY CAUSE INTERNAL DAMAGE.
- THE USE OF ANY ACCESSORY OR ATTACHMENTS NOT RECOMMENDED BY COOPERS OF STORTFORD MAY CAUSE INJURIES AND INVALIDATE ANY WARRANTY YOU MAY HAVE.
- DO NOT PLACE ON OR NEAR HEAT SOURCES.
- DO NOT COVER THE ITEM IN ANY WAY WHEN IN USE AS THIS MAY CAUSE OVERHEATING.
- DO NOT USE THIS APPLIANCE FOR ANY OTHER USE THAN THE INTENDED USE IT IS DESIGNED FOR.
- DO NOT LEAVE SWITCHED ON OR UNATTENDED.



- NOT SUITABLE FOR CHILDREN UNDER 36 MONTHS DUE TO SMALL PARTS - CHOKING HAZARD.
- ALWAYS USE UNDER ADULT SUPERVISION.
- DO NOT LEAVE CHILDREN UNATTENDED.
- IF ANY PIECES ARE MISSING STOP PLAY IMMEDIATELY AND ADULT TO CHECK ALL AREAS AND CHILDREN TILL ALL ITEMS ARE FOUND.

## **BATTERIES**

- **ALWAYS USE ALKALINE BATTERIES. DO NOT USE LITHIUM BATTERIES.**
- **BATTERY WARNING: KEEP OUT OF REACH OF CHILDREN. IF SWALLOWED OR PLACED INSIDE ANY PART OF THE BODY SEEK IMMEDIATE MEDICAL ATTENTION.**
- INSTALL BATTERIES IN ACCORDANCE WITH ITS POLARITY SYMBOLS. DO NOT FIT BATTERIES IN REVERSE.
- DO NOT SHORT CIRCUIT THE BATTERY TERMINALS.
- REMOVE THE BATTERIES IF LEFT FOR LONG PERIODS.
- **KEEP BATTERIES AWAY FROM CHILDREN AND PETS.**
- DO NOT MIX USED AND NEW BATTERIES.
- **NEVER DISPOSE OF BATTERIES IN A FIRE.**
- BATTERY DISPOSAL, SPENT OR EXPIRED BATTERIES MUST BE DISPOSED OF AND RECYCLED IN COMPLIANCE WITH YOUR LOCAL AUTHORITY REGULATIONS.
- FOLLOW THE BATTERY MANUFACTURER'S SAFETY, USAGE, AND DISPOSAL INSTRUCTIONS.

## **CARE AND CLEANING INSTRUCTIONS**

 
- ALWAYS SWITCH OFF AND REMOVE BATTERIES BEFORE CLEANING.
- DO NOT IMMERSE IN WATER.
- DO NOT USE ABRASIVE CLEANERS OR SHARP UTENSILS TO CLEAN THIS APPLIANCE.
- WIPE SURFACES WITH A SOFT DRY CLOTH. DRY THOROUGHLY BEFORE FURTHER USE.
- STORE THE APPLIANCE IN A COOL, DRY PLACE.


## BATTERY DISPOSAL

- SPENT OR EXPIRED BUTTON CELLS MUST BE DISPOSED SAFELY AWAY FROM CHILDREN ACCESS AND RECYCLED IN COMPLIANCE WITH YOUR LOCAL AUTHORITY REGULATIONS.
- FOLLOW THE BATTERY MANUFACTURER'S SAFETY, USAGE, AND DISPOSAL INSTRUCTIONS.

## DISPOSAL

- Coopers of Stortford use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons in accordance with your local authority recycling regulations.
- At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.
- Plastics, polybags – this is made from the following recyclable plastic.



Code & Symbol	 OTHER
Type of Plastic	Please Specify (includes ABS, Nylon)

Distributed by / Verteilt durch / Distribué par.

UK:

The Enterprise Department Ltd.

11 Bridge Street, Bishops Stortford

Herts, UK, CM23 2JU

Tel: 0330 331 0300

NI/EU:

D.S.B. LD, 160 Bd. de Fourmies, 59100 Roubaix, France

Tel: (+44) 1279 701269

DE/FR/CZ/SK:

hergestellt für 3Pagen

Sankt-Joeris-Strasse 16-28

53477 Alsdorf

Tel: +49(0)2404/980-204

[kontakt@3pagen.de](mailto:kontakt@3pagen.de)

UK  
CA

