

SPOT CLEANER

Item No: P224

Instructions for Use

v001: 18/09/24

Please read and retain these instructions for future reference



Power Details: Voltage details: 220-240V~
Frequency details: 50Hz/60Hz
Wattage details: 500W

Accessories: Hose 1PC 1.5M+Self-cleaning head 1PC+Completed hair brush 1PC +TPE pet brush small head 1PC

Please read this instruction manual thoroughly before starting and ensure you are familiar with the operation of your new Spot Cleaner.

1. Important Tips:

Precautions for safe use

Please follow the steps in this manual to install the machine. Keep this manual properly. If you provide this machine to a third party, please include this manual with the machine. Any operation inconsistent with the instructions in this manual may cause product damage or serious personal injury. This machine is only suitable for operation in a regular home environment and is not suitable for use in an industrial environment or outdoors.

① This machine is not suitable for people with physical, sensory or intellectual disabilities or those who lack experience and common sense (including children) unless they are supervised or guided by others to ensure that they can be used safely.

② Do not touch the plug or any live part of the product with wet hands to avoid the risk of electric shock.

③ If the charger or power cord is damaged, please stop using it immediately. Please call our after-sales personnel for replacement to avoid harm.

- ④ Please keep the airflow channels, rotating and movable parts of this machine away from long hair, loose clothing, fingers and other parts of the body. Do not point the vacuum hose and accessories towards your eyes, ears, or put them into your mouth.
- ⑤ If this product is not used for a long time, the power should be turned off.
- ⑥ If this machine cannot work properly because it has been dropped, damaged, left outdoors or dropped into water, please do not take it out for operation. Please contact our company's professional maintenance personnel for repairs in time to avoid danger and personal injury.
- ⑦ During use, if you find leakage or excessive motor temperature or abnormal noise, such as overheating of the body, strange sounds, odors, weak suction, etc., you should stop using it immediately and call our company's professional maintenance personnel.
- ⑧ After unpacking this machine, please immediately dispose of the packaging bags used by the packaging machine to avoid the risk of suffocation when children play.
- ⑨ Do not place the machine outdoors or store it in a place that may freeze, and do not place the product near a heat source.
- ⑩ Do not expose the machine to fire or high temperature to avoid product damage or explosion risk.
- ⑪ After using the machine, please clean the sewage tank in time and keep the ventilation path open to avoid blockage, which will cause the suction to decrease and the motor to heat up, thus affecting the service life of the fabric cleaning machine.
- ⑫ After using the machine, please store it in a dry place. Humid places will affect the insulation and service life of electrical appliances.
- ⑬ The fabric cleaning machine has a power-on setting and cannot be soaked in water or rinsed. Please check the smoothness of the suction nozzle regularly. If there is any blockage, please clear it in time to avoid the blockage causing a decrease in suction power and affecting the performance of the machine.
- ⑭ Please make sure to shut down the machine before replacing the roller brush. When the machine fails, do not repair it yourself. Repairs must be carried out by professional maintenance personnel recognized by our company or please call our after-sales department for help.
- ⑮ Do not disassemble or assemble the closed machine by yourself. There are no customer-repairable parts in this machine, and do not try to change the performance of the machine, otherwise it will cause danger.
- ⑯ Using a voltage that does not correspond to the specifications of this product will damage the motor and may even cause harm to the user. The correct rated voltage is marked on the nameplate.

⑰ To prevent tripping, the machine should be placed against a wall after use. Do not use the clean water bucket and wastewater bucket if they are not installed correctly. Do not place any small objects on the air outlet, and do not block the air outlet. Remove any small objects that may hinder the smooth air flow of the air outlet to prevent the machine from overheating.

All technical and other data reflected in this product manual are obtained by our company or a designated third-party testing company, and the final right of interpretation belongs to our company.

About the scope of use of the product

① This product is suitable for flat surfaces such as porcelain tiles in indoor environments, and is suitable for cleaning short-pile carpets.

② Do not use this product near or on the surface of flammable or explosive objects, as there is a risk of fire and explosion.

③ Do not use this product near a working fireplace or heater to prevent the machine shell from deforming.

④ Do not smoke high-temperature substances (unextinguished cigarette butts, matches or hot ashes, etc.), ultra-fine substances (such as lime, cement, sawdust, gypsum powder, ashes, carbon powder, etc.), dangerous items (such as solvents, descalers, etc.) etc.), chemical substances (such as acids, detergents, etc.) and other substances with uncertain physical properties.

⑤ Do not use this fabric cleaning machine to absorb detergent, kerosene, gasoline, alcohol, paint, perfume, etc. These liquids may cause a short circuit, fire or explosion in the machine.

⑥ Do not use this fabric cleaning machine to absorb toner and toner used inside laser printers and copiers. These objects may cause fire or explosion.

⑦ Do not use this fabric cleaning machine to pick up sharp objects, such as glass fragments, small toys, pins, paper clips, stones, plaster, large pieces of paper, etc. These objects may cause blockage and damage the machine.

⑧ Do not use this fabric cleaning machine to absorb any burning or smoking objects, such as cigarette ashes that have not extinguished the heat source, burning cigarette butts or matches, etc. Stains with strong grease, strong stickiness or strong dyeing properties, such as shoe polish, paint, and pigments, are not within the scope of use of this product.


⑨ Do not use cleaners other than those specified. (The specified cleaning agent is a household non-foaming cleaner.)

About the machine


- ① When handling sewage and cleaning solutions, local environmental protection regulations should be followed.
- ② Do not disassemble or assemble the closed machine by yourself. There are no customer-repairable parts in this machine, and do not try to change the performance of the machine, otherwise it will cause danger.
- ③ Using a voltage that does not correspond to the specifications of this product will damage the motor and may even cause harm to the user. The correct rated voltage is marked on the nameplate.
- ④ Do not shake the machine up and down or hit it violently to prevent sewage from flowing into the motor.
- ⑤ When the motor is working, please do not lift or carry the appliance up and down, and do not tilt the machine to one side or lay it flat to prevent sewage from entering the motor.
- ⑥ To prevent tripping, the machine should be placed against a wall after use.
- ⑦ Do not use if the clean water tank and sewage bucket are not installed correctly.
- ⑧ Do not place any small objects on the air outlet, and do not block the air outlet. Remove any small objects that may hinder the smooth air flow of the air outlet to prevent the machine from overheating.
- ⑨ Do not get the machine body wet, otherwise fire and electric shock may occur due to short circuit of the machine.
- ⑩ The water tank contains water stains, which are residues from product testing before leaving the factory. This is a normal phenomenon, so please feel free to use it.

2. Know your product:


2.1 Product overview

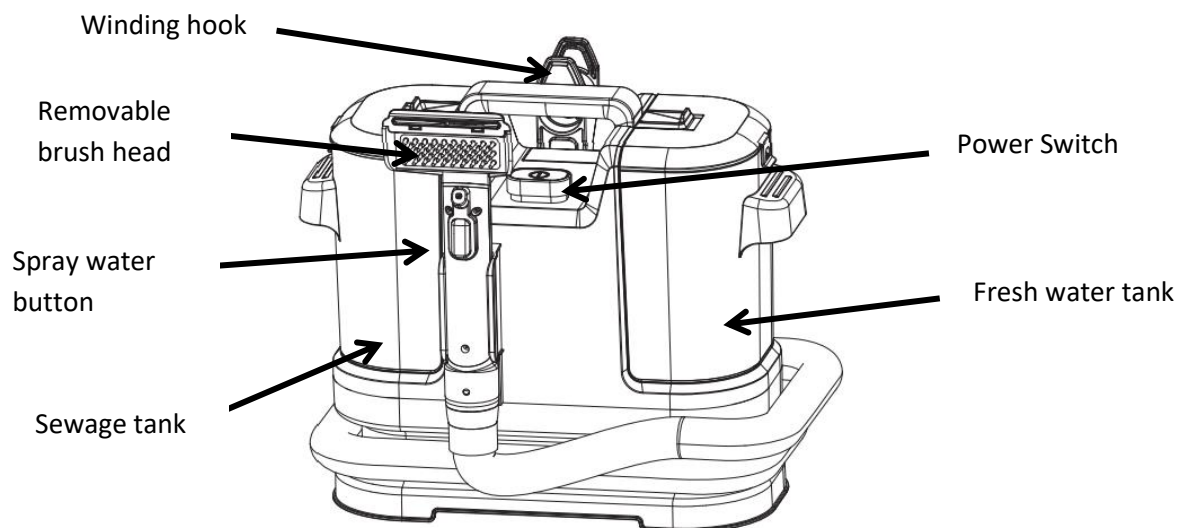

Product configuration

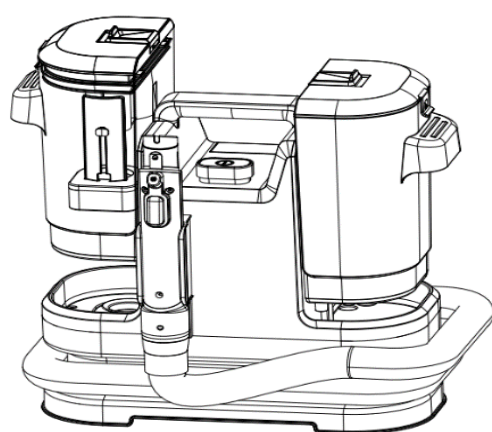 

Main
machine

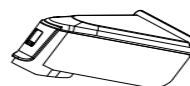 


Brush head




Winding hook

2.2 Product disassembly and assembly

 ① Installation of wire winding hook

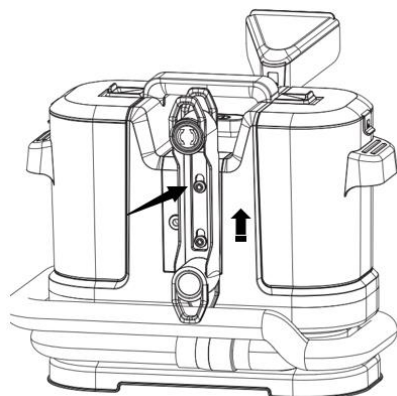


 Insert the winding hook into the cylinder of the machine body and push it upward until you hear a "pop!" sound, then the installation is complete.

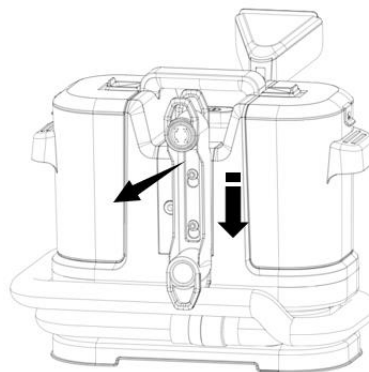


To disassemble, push the thread winding hook down, unhook and take it out.

 ② Brush head disassembly and assembly

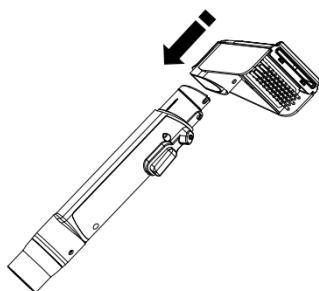

 Insert the brush head into position, and when you hear a "pop!" the installation is

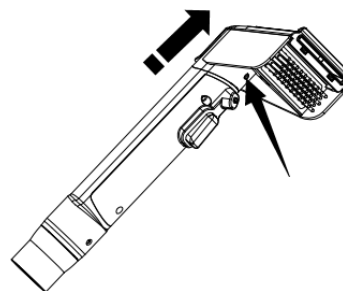

Press and hold the unlock button. When you feel it is released, pull it out to remove

2.3 Technical Parameters


Product name:	Wet and dry Spot carpet washing machine
Model No.:	M-304 AC-A
Rated voltage (V):	220-240V
Rated power (W):	500W
Sewage tank capacity:	800/1300ml
Clean water tank capacity:	1800ml

3. Daily use and maintenance:


3.1 Daily using



 
1. Check whether it can be washed according to the washing label on the fabric.

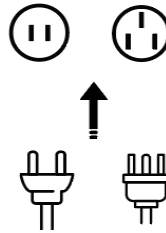

 2. Insert the corresponding plug according to the socket type.

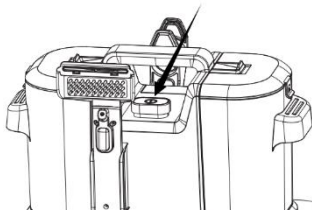

 
3. Press and hold the power button of the main unit, and the machine will sound.

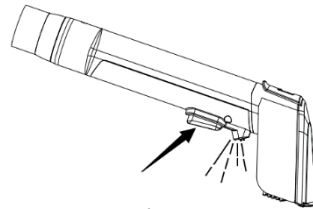


4. Press and hold the water spray button to start cleaning.

4. For Wet Stains. Turn ON using the power button and vacuum up the liquid mess. Spray the stain area. Scrub with the bristles, then tilt hand tool forward and drag across the stain area to extract liquid. Repeat if needed.
5. For Dry stains. Turn ON using the power button. spray the stain area. Scrub stain again, then tilt hand tool forwards and drag across the stain area to extract liquid. Repeat if needed.

 Add fresh water

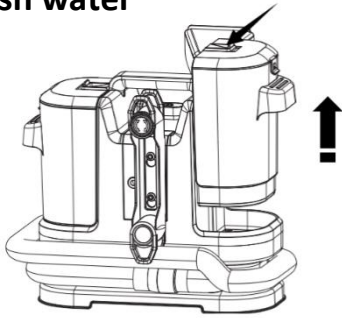

 1. Slide the water tank slide button and pull out the clean water tank vertically.

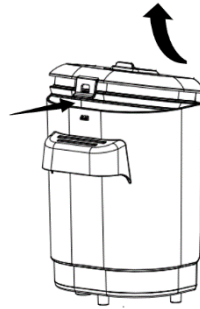


2. Unlock the lock and open the fresh water tank cover.




3. Pour in appropriate amount of water.



 4. Close the clean water tank cover.

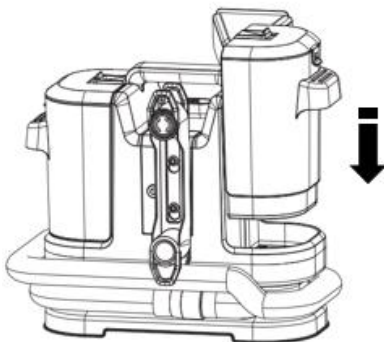


 5. Reinstall the clean water tank vertically.

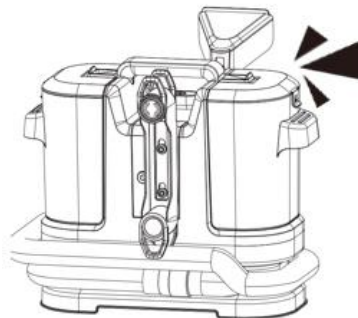


6. When you hear a "click", the installation is complete.

 
5.1 Routine maintenance

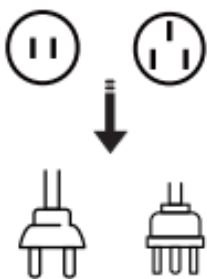

 
1. Before maintenance, confirm whether the product is powered off

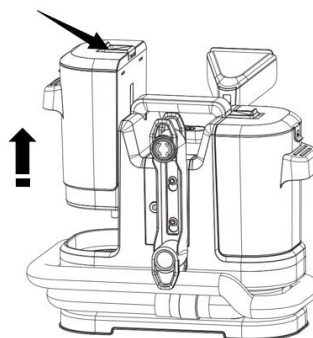

 2. Slide the outer water tank lock hook and remove the sewage tank vertically.

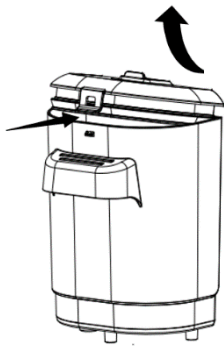

 3. Open the sewage tank cover

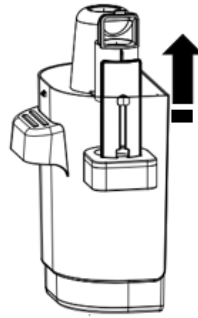


4. Remove the buoy bracket




5. Rinse the sewage tank, dry it in the shade and then reinstall it.



 6. Clean the buoy bracket, dry it in the shade and then reinstall it.

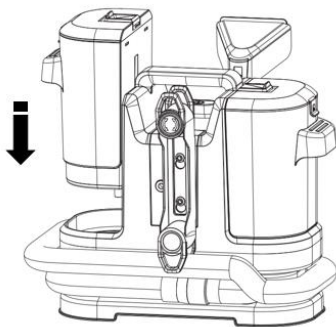

 7. Install the sewage tank vertically

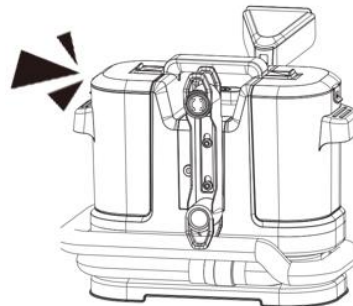

8. When you hear a "click", the installation is complete.

Kind tips:

The machine should be stored in a cool, dry place away from direct sunlight.

5.2 Troubleshooting

If you find some abnormalities during use of the machine, you can check and eliminate them by referring to the table below.

Problems:	Check item
Product does not start:	Check if there is power
Product has no suction:	Whether the sewage reaches the MAX line and the buoy rises.
The water spray nozzle does not spray water:	<p>1. The water pipe is long, please wait patiently. Water will usually come out within 3 seconds.</p> <p>2. Check whether there is water in the clean water tank.</p>

WARNINGS AND SAFETY INSTRUCTIONS:

WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED:

- READ ALL INSTRUCTIONS BEFORE USE.
- FOR DOMESTIC INDOOR USE ONLY.
- DO NOT USE OUTDOORS OR FOR COMMERCIAL USE.
- ONLY USE WITH THE MAINS ADAPTOR/CHARGER SUPPLIED.
- **DO NOT** USE ANY OTHER MAINS ADAPTOR/CHARGER AS THIS MAY CAUSE DAMAGE AND INVALIDATES ANY WARRANTY YOU MAY HAVE.
- BEFORE USE, CHECK THOROUGHLY FOR ANY DEFECTS AND DO NOT USE IF DEFECTS ARE FOUND. TAKE CARE NOT TO DROP THE APPLIANCE AS HEAVY IMPACTS MAY CAUSE INTERNAL DAMAGE.
- BEFORE CONNECTING THE APPLIANCE, CHECK IF THE VOLTAGE INDICATED ON THE BOTTOM OF THE APPLIANCE IS IN ACCORDANCE WITH THE MAINS VOLTAGE IN YOUR HOME.
- CHECK THE APPLIANCE AND POWER CABLE CAREFULLY FOR DAMAGE BEFORE EACH USE.
- THIS APPLIANCE CAN BE USED BY CHILDREN AGED FROM 8 YEARS AND ABOVE, AND PERSONS WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES OR LACK OF EXPERIENCE AND KNOWLEDGE IF THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE IN A SAFE WAY AND UNDERSTAND THE HAZARDS INVOLVED. CHILDREN SHALL NOT PLAY WITH THE APPLIANCE. CLEANING AND USER MAINTENANCE SHALL NOT BE MADE BY CHILDREN WITHOUT SUPERVISION.
- CHILDREN OF LESS THAN 3 YEARS SHOULD BE KEPT AWAY UNLESS CONTINUOUSLY SUPERVISED.
- THE USE OF ANY ACCESSORY OR ATTACHMENTS NOT RECOMMENDED BY COOPERS OF STORTFORD MAY CAUSE INJURIES AND INVALIDATE ANY WARRANTY YOU MAY HAVE.
- DO NOT LET THE POWER CABLE HANG OVER THE EDGE OF A TABLE OR COUNTER, OR TOUCH HOT SURFACES.
- DO NOT PLACE ON OR NEAR HEAT SOURCES.

- USE ON A LEVEL, STABLE SURFACE.
- DO NOT COVER THE ITEM IN ANY WAY WHEN IN USE AS THIS MAY CAUSE OVERHEATING.
- DO NOT USE THIS APPLIANCE FOR ANY OTHER USE THAN THE INTENDED USE IT IS DESIGNED FOR.
- ENSURE THERE IS SUFFICIENT DISTANCE BETWEEN THIS APPLIANCE AND OTHER ITEMS ON THE WORK SURFACE OR WORK STATION, OR SUFFICIENT DISTANCE BETWEEN THE APPLIANCE AND THE CONFINES OF THE AREA IN WHICH IT IS SITUATED. WE RECOMMEND A MINIMUM CLEARANCE AROUND ALL FACES OF AT LEAST 10CM.
- KEEP ITEM AT LEAST 1M AWAY FROM COMBUSTIBLE MATERIAL SUCH AS FURNITURE, CUSHIONS, BEDDING, PAPER, CLOTHES, CURTAINS ETC.
- TO PROTECT AGAINST ELECTRIC SHOCK, DO NOT IMMERSE POWER CABLE, MAINS ADAPTOR/CHARGER OR APPLIANCE, IN WATER OR ANY OTHER LIQUID.
- UNPLUG FROM OUTLET WHEN NOT IN USE AND BEFORE CLEANING.
- DO NOT OPERATE ANY APPLIANCE WITH A DAMAGED POWER CABLE OR MAINS ADAPTOR/CHARGER OR AFTER THE APPLIANCE MALFUNCTIONS OR HAS BEEN DAMAGED IN ANY MANNER. WE RECOMMEND THAT THE POWER CABLE IS NOT KINKED OR STORED IN A TWISTED MANNER, AND THAT YOU REGULARLY CHECK ITS CONDITION.
- DO NOT LEAVE UNATTENDED.
- ALLOW TO COOL BEFORE CARRYING OR PLACING IN STORAGE.
- ANY REPAIRS MUST BE CONDUCTED BY A QUALIFIED ELECTRICIAN OR ELECTRICAL SERVICE AGENT.

PLUG WIRING (UK & IRELAND)

This appliance is supplied with a mains adaptor/charger with BS1363 plug pins.

DO NOT use If the socket outlets in your home or office are not suitable for this product's mains adaptor/ charger plug pins. Attempts to insert the mains adaptor/charger into the wrong socket is likely to cause electric hazard or damage.

 
DO NOT use with any other mains transformer/charger than the one that is supplied with this product.


CARE AND CLEANING INSTRUCTIONS

- Always switch off and unplug before cleaning.
- Do NOT immerse in water. Risk of electric shock.
- Do NOT use abrasive cleaners or sharp utensils to clean this appliance.
- Wipe surfaces with a soft dry cloth.
- Allow to dry thoroughly before further use.
- Store the appliance in a cool, dry place.

DISPOSAL

- Coopers of Stortford use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons in accordance with your local authority recycling regulations.
- At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.
- Plastics, polybags – this is made from the following recyclable plastic.

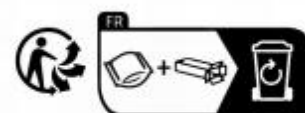

Code & Symbol	 PETE
Type of Plastic	Polyethylene Terephthalate

- At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.

Distributed by / Verteilt durch / Distribué par.

UK:

The Enterprise Department Ltd.

11 Bridge Street, Bishops Stortford

Herts, UK, CM23 2JU

Tel: 0330 331 0300

NI/EU:

D.S.B. LD, 160 Bd. de Fourmies, 59100 Roubaix, France

Tel: (+44) 1279 701269

DE/FR/CZ/SK:

hergestellt für 3Pagen

Sankt-Joeris-Strasse 16-28

53477 Alsdorf

Tel: +49(0)2404/980-204

kontakt@3pagen.de

