

## An instruction manual

■ Please read the user manual carefully and keep it properly before using the product.  
■ The content of this manual has been carefully verified. If there are any printing errors or misunderstandings in the content, please contact us as soon as possible.

### Mite removal device CC-002

#### Safety precautions

- When connecting to external charging, a charger with  $\text{CEC}$  or  $\text{CQC}$  certification of  $5\text{V} \sim 2\text{A}$  or above must be used.
- It is prohibited to use this product to absorb detergents, kerosene, glass residue, needles, soot, wet dust, sewage, matches, and other items.
- It is prohibited to use this product to absorb small particles such as cement, gypsum powder, wall powder, or larger objects such as toy paper balls. Otherwise, it may cause malfunctions such as clogging of the vacuum cleaner and burning of the motor.
- Do not allow this product to be near sources of ignition or other high-temperature places.
- When using this product, please pay attention to installing the filter element component properly.
- Household mite removers should not be used continuously for more than 1 hour, and the vacuum cleaner filtration system should be cleaned regularly.
- Please do not pour or splash water or other liquids into the machine to avoid causing short circuits and burning the machine.
- When storing this device for a long time without using it, please ensure that it is charged and discharged at least once every three months.
- When your vacuum cleaner is fully charged and needs to be cleaned or repaired, please shut down and disconnect the charging power supply first.
- When cleaning the vacuum cleaner, use a dry cloth to wipe it, and do not use cleaning agents such as gasoline/banana water that can easily crack or fade the shell.
- Please do not use or store the vacuum cleaner under unfavorable conditions such as high or low temperatures. It is recommended to use it indoors at an ambient temperature ( $0\text{--}40^\circ\text{C}$ ). Please store it in a cool and dry place and prohibit prolonged exposure to sunlight.
- This product is not a toy and it is prohibited for children to play with it as a toy.
- When the entire machine is fully charged and cannot work, it must be inspected and repaired at the designated repair point. Do not disassemble the machine without permission.
- The product is not recommended for individuals with physical, sensory, or mental impairments or lack of experience and knowledge in use (including children), unless there is supervision or guidance from someone responsible for their safety related to product use.
- This product contains lithium batteries inside. When preparing to dispose of this device, please completely remove the battery from the device (before removing the battery, the switch must be turned off and the charging power must be disconnected. The machine bottom should be facing up, and the six screws on the bottom cover should be removed to separate the body bottom cover. Remove the motherboard and battery, and separate the battery from the motherboard). Do not dispose of the battery at will. Please dispose of the battery in a dedicated recycling bin. Do not mix with other household waste to avoid polluting the environment.

#### Safety precautions

- When connecting to external charging, a charger with  $\text{CEC}$  or  $\text{CQC}$  certification of  $5\text{V} \sim 2\text{A}$  or above must be used.
- It is prohibited to use this product to absorb detergents, kerosene, glass residue, needles, soot, wet dust, sewage, matches, and other items.
- It is prohibited to use this product to absorb small particles such as cement, gypsum powder, wall powder, or larger objects such as toy paper balls. Otherwise, it may cause malfunctions such as clogging of the vacuum cleaner and burning of the motor.
- Do not allow this product to be near sources of ignition or other high-temperature places.
- When using this product, please pay attention to installing the filter element component properly.
- Household mite removers should not be used continuously for more than 1 hour, and the vacuum cleaner filtration system should be cleaned regularly.
- Please do not pour or splash water or other liquids into the machine to avoid causing short circuits and burning the machine.
- When storing this device for a long time without using it, please ensure that it is charged and discharged at least once every three months.
- When your vacuum cleaner is fully charged and needs to be cleaned or repaired, please shut down and disconnect the charging power supply first.
- When cleaning the vacuum cleaner, use a dry cloth to wipe it, and do not use cleaning agents such as gasoline/banana water that can easily crack or fade the shell.
- Please do not use or store the vacuum cleaner under unfavorable conditions such as high or low temperatures. It is recommended to use it indoors at an ambient temperature ( $0\text{--}40^\circ\text{C}$ ). Please store it in a cool and dry place and prohibit prolonged exposure to sunlight.
- This product is not a toy and it is prohibited for children to play with it as a toy.
- When the entire machine is fully charged and cannot work, it must be inspected and repaired at the designated repair point. Do not disassemble the machine without permission.
- The product is not recommended for individuals with physical, sensory, or mental impairments or lack of experience and knowledge in use (including children), unless there is supervision or guidance from someone responsible for their safety related to product use.
- This product contains lithium batteries inside. When preparing to dispose of this device, please completely remove the battery from the device (before removing the battery, the switch must be turned off and the charging power must be disconnected. The machine bottom should be facing up, and the six screws on the bottom cover should be removed to separate the body bottom cover. Remove the motherboard and battery, and separate the battery from the motherboard). Do not dispose of the battery at will. Please dispose of the battery in a dedicated recycling bin. Do not mix with other household waste to avoid polluting the environment.

#### Safety precautions


- When connecting to external charging, a charger with  $\text{CEC}$  or  $\text{CQC}$  certification of  $5\text{V} \sim 2\text{A}$  or above must be used.
- It is prohibited to use this product to absorb detergents, kerosene, glass residue, needles, soot, wet dust, sewage, matches, and other items.
- It is prohibited to use this product to absorb small particles such as cement, gypsum powder, wall powder, or larger objects such as toy paper balls. Otherwise, it may cause malfunctions such as clogging of the vacuum cleaner and burning of the motor.
- Do not allow this product to be near sources of ignition or other high-temperature places.
- When using this product, please pay attention to installing the filter element component properly.
- Household mite removers should not be used continuously for more than 1 hour, and the vacuum cleaner filtration system should be cleaned regularly.
- Please do not pour or splash water or other liquids into the machine to avoid causing short circuits and burning the machine.
- When storing this device for a long time without using it, please ensure that it is charged and discharged at least once every three months.
- When your vacuum cleaner is fully charged and needs to be cleaned or repaired, please shut down and disconnect the charging power supply first.
- When cleaning the vacuum cleaner, use a dry cloth to wipe it, and do not use cleaning agents such as gasoline/banana water that can easily crack or fade the shell.
- Please do not use or store the vacuum cleaner under unfavorable conditions such as high or low temperatures. It is recommended to use it indoors at an ambient temperature ( $0\text{--}40^\circ\text{C}$ ). Please store it in a cool and dry place and prohibit prolonged exposure to sunlight.
- This product is not a toy and it is prohibited for children to play with it as a toy.
- When the entire machine is fully charged and cannot work, it must be inspected and repaired at the designated repair point. Do not disassemble the machine without permission.
- The product is not recommended for individuals with physical, sensory, or mental impairments or lack of experience and knowledge in use (including children), unless there is supervision or guidance from someone responsible for their safety related to product use.
- This product contains lithium batteries inside. When preparing to dispose of this device, please completely remove the battery from the device (before removing the battery, the switch must be turned off and the charging power must be disconnected. The machine bottom should be facing up, and the six screws on the bottom cover should be removed to separate the body bottom cover. Remove the motherboard and battery, and separate the battery from the motherboard). Do not dispose of the battery at will. Please dispose of the battery in a dedicated recycling bin. Do not mix with other household waste to avoid polluting the environment.

## An instruction manual

■ Please read the user manual carefully and keep it properly before using the product.  
■ The content of this manual has been carefully verified. If there are any printing errors or misunderstandings in the content, please contact us as soon as possible.

### Mite removal device CC-002

#### Product structure diagram

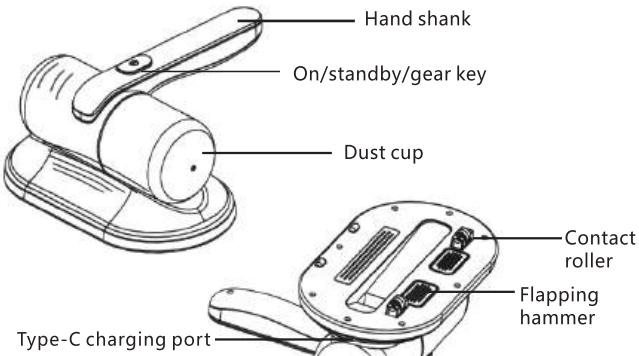

The pictures are for reference only, please refer to the actual product for details.

#### Packing list

Main engine	Instructions	Type-C charging cable
1 unit	1 book	1 article

### Warranty card

Customer	Full name:	Warranty period			
	Address:				
	Telephone:				
	Purchase date:				
Please fill out each column of this warranty card in detail and stamp it with the dealer's seal, otherwise it will be invalid. 1. This product is free of charge for one year from the date of purchase under normal use. 2. If parts need to be replaced beyond the regular limit specified in the above item, maintenance fees will be charged as appropriate. 3. During the warranty period, if there are any of the following situations, repair will not be free of charge: a. Failure to present warranty card or purchase voucher (invoice or receipt). b. Repairs beyond the warranty period. c. Damage caused by disassembly or renovation. d. Damage caused by incorrect/negligent use or improper human use. e. Failure or damage caused by non ordinary household use (such as prolonged use in harsh environments). f. The appearance is naturally stained due to use.		Certificate	Dealer signature and seal	Release date reserved for future use	2023/4/10

#### Specification parameters

Product Name	Mite removal instrument
Product model	CC-02
Charging input	$5\text{V}\sim 2\text{A}$
Working voltage	$7.4\text{V}\approx$
Rated power	68W
Dust collection capacity	185mL

#### Usage method

- On/standby/gear key: Press this button once to turn on the machine, which defaults to low gear operation. Press the button again for high gear operation, and press the button a third time to turn off the machine.
- Dust collection cup disassembly: Hold the handle with one hand and rotate the dust collection cup to the left with the other hand to remove it. When installing, align the hole position and rotate it to the right to complete the installation.
- The indicator light turns red when charging, but does not display when fully charged.

#### Common faults and analysis

Fault phenomenon	Cause analysis	Resolvent
Unable to power on	Low battery Not pressing the on/standby/gear button to turn on the machine.	Recharge and restart for use Press the on/standby/gear button again to turn on the machine.
Machine suction decreases	The dust collection cup is full The filter screen is blocked by garbage.	Clean the dust collection cup Clean the filter screen
Machine unable to charge	Blockage at the suction port of the machine The charging cable is not connected properly Damaged charging cable	Clean the blockage at the suction port Reconnect the charging cable Replace and purchase a new original charging cable

#### Specification parameters

Product Name	Mite removal instrument
Product model	CC-02
Charging input	$5\text{V}\sim 2\text{A}$
Working voltage	$7.4\text{V}\approx$
Rated power	68W
Dust collection capacity	185mL

#### Usage method

- On/standby/gear key: Press this button once to turn on the machine, which defaults to low gear operation. Press the button again for high gear operation, and press the button a third time to turn off the machine.
- Dust collection cup disassembly: Hold the handle with one hand and rotate the dust collection cup to the left with the other hand to remove it. When installing, align the hole position and rotate it to the right to complete the installation.
- The indicator light turns red when charging, but does not display when fully charged.

#### Common faults and analysis

Fault phenomenon	Cause analysis	Resolvent
Unable to power on	Low battery Not pressing the on/standby/gear button to turn on the machine.	Recharge and restart for use Press the on/standby/gear button again to turn on the machine.
Machine suction decreases	The dust collection cup is full The filter screen is blocked by garbage.	Clean the dust collection cup Clean the filter screen
Machine unable to charge	Blockage at the suction port of the machine The charging cable is not connected properly Damaged charging cable	Clean the blockage at the suction port Reconnect the charging cable Replace and purchase a new original charging cable

#### Specification parameters

Product Name	Mite removal instrument
Product model	CC-02
Charging input	$5\text{V}\sim 2\text{A}$
Working voltage	$7.4\text{V}\approx$
Rated power	68W
Dust collection capacity	185mL

#### Usage method

- On/standby/gear key: Press this button once to turn on the machine, which defaults to low gear operation. Press the button again for high gear operation, and press the button a third time to turn off the machine.
- Dust collection cup disassembly: Hold the handle with one hand and rotate the dust collection cup to the left with the other hand to remove it. When installing, align the hole position and rotate it to the right to complete the installation.
- The indicator light turns red when charging, but does not display when fully charged.

#### Common faults and analysis

Fault phenomenon	Cause analysis	Resolvent
Unable to power on	Low battery Not pressing the on/standby/gear button to turn on the machine.	Recharge and restart for use Press the on/standby/gear button again to turn on the machine.
Machine suction decreases	The dust collection cup is full The filter screen is blocked by garbage.	Clean the dust collection cup Clean the filter screen
Machine unable to charge	Blockage at the suction port of the machine The charging cable is not connected properly Damaged charging cable	Clean the blockage at the suction port Reconnect the charging cable Replace and purchase a new original charging cable

#### Cleaning and maintenance

- Turn off the machine and disconnect the charging power before cleaning.
- Remove the dust collection cup, take out the Haipa from the dust cup chamber, dump the garbage in the dust cup chamber, and if necessary, rinse the dust cup chamber with clean water. After washing the dust cup chamber with water, it must be completely dry before being reinstalled.
- Remove the filter filter filter from the dust cup chamber, gently knock off any dirt attached to the filter or rinse it with clean water before drying. Do not use a brush to clean it to avoid damaging the filter.
- If the filter frame is damaged, please make sure to replace it in a timely manner.
- After washing the filter components, they must be completely dried before being reinstalled.
- After cleaning, please store in a dry and ventilated area that is out of reach of children.

#### Environmental checklist

Component Name	Name and content of harmful substances in the product					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent chromium (Cr(VI))	Polybrominated biphenyls (PBB)	Polybrominated diphenyl ether (PBDE)
Electronics	×	○	○	○	○	○
Hardware	○	○	○	○	○	○
Plastic	○	○	○	○	○	○
Packaging materials	○	○	○	○	○	○
Other categories	○	○	○	○	○	○
<b>This table is prepared in accordance with the provisions of SJ/T11364.</b> ○ : Indicates that the content of the harmful substance in all homogeneous materials of the component is below the limit requirements specified in GB/T26572. × : Indicates that the content of the hazardous substance in at least one homogeneous material of the component is within the limit requirements specified in GB/T26572.  Under the normal usage conditions described in this manual, the environmentally friendly service life of this product is 10 years. It can be used with confidence during the environmentally friendly service life, and after exceeding the environmentally friendly service life, it should enter the recycling system.						

#### Cleaning and maintenance

- Turn off the machine and disconnect the charging power before cleaning.
- Remove the dust collection cup, take out the Haipa from the dust cup chamber, dump the garbage in the dust cup chamber, and if necessary, rinse the dust cup chamber with clean water. After washing the dust cup chamber with water, it must be completely dry before being reinstalled.
- Remove the filter filter filter from the dust cup chamber, gently knock off any dirt attached to the filter or rinse it with clean water before drying. Do not use a brush to clean it to avoid damaging the filter.
- If the filter frame is damaged, please make sure to replace it in a timely manner.
- After washing the filter components, they must be completely dried before being reinstalled.
- After cleaning, please store in a dry and ventilated area that is out of reach of children.

#### Environmental checklist

Component Name	Name and content of harmful substances in the product					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent chromium (Cr(VI))	Polybrominated biphenyls (PBB)	Polybrominated diphenyl ether (PBDE)
Electronics	×	○	○	○	○	○
Hardware	○	○	○	○	○	○
Plastic	○	○	○	○	○	○
Packaging materials	○	○	○	○	○	○
Other categories	○	○	○	○	○	○
<b>This table is prepared in accordance with the provisions of SJ/T11364.</b> ○ : Indicates that the content of the harmful substance in all homogeneous materials of the component is below the limit requirements specified in GB/T26572. × : Indicates that the content of the hazardous substance in at least one homogeneous material of the component is within the limit requirements specified in GB/T26572.  Under the normal usage conditions described in this manual, the environmentally friendly service life of this product is 10 years. It can be used with confidence during the environmentally friendly service life, and after exceeding the environmentally friendly service life, it should enter the recycling system.						

#### Cleaning and maintenance

- Turn off the machine and disconnect the charging power before cleaning.
- Remove the dust collection cup, take out the Haipa from the dust cup chamber, dump the garbage in the dust cup chamber, and if necessary, rinse the dust cup chamber with clean water. After washing the dust cup chamber with water, it must be completely dry before being reinstalled.
- Remove the filter filter filter from the dust cup chamber, gently knock off any dirt attached to the filter or rinse it with clean water before drying. Do not use a brush to clean it to avoid damaging the filter.
- If the filter frame is damaged, please make sure to replace it in a timely manner.
- After washing the filter components, they must be completely dried before being reinstalled.
- After cleaning, please store in a dry and ventilated area that is out of reach of children.

#### Environmental checklist

Component Name	Name and content of harmful substances in the product					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent chromium (Cr(VI))	Polybrominated biphenyls (PBB)	Polybrominated diphenyl ether (PBDE)
Electronics	×	○	○	○	○	○
Hardware	○	○	○	○	○	○
Plastic	○	○	○	○	○	○
Packaging materials	○	○	○	○	○	○
Other categories	○	○	○	○	○	○
<b>This table is prepared in accordance with the provisions of SJ/T11364.</b> ○ : Indicates that the content of the harmful substance in all homogeneous materials of the component is below the limit requirements specified in GB/T26572. × : Indicates that the content of the hazardous substance in at least one homogeneous material of the component is within the limit requirements specified in GB/T26572.  Under the normal usage conditions described in this manual, the environmentally friendly service life of this product is 10 years. It can be used with confidence during the environmentally friendly service life, and after exceeding the environmentally friendly service life, it should enter the recycling system.						