



Cordless Rechargeable Scrubber



Thank you for purchasing our Cordless Rechargeable Scrubber! We hope you enjoy its convenience and effectiveness.

Features:

- Cordless and Rechargeable
- Interchangeable Cleaning Heads
- Up to 60 minutes of runtime per charge
- Ideal for kitchen and bathroom use
- Versatile cleaning for floors, furniture, and automobiles
- Two speed modes
- USB Type-C charging; full charge in 2-3 hours

Specifications:

- Battery: 2000mAh Li-Ion
- Charging Method: USB
- Charge Time: 2-3 hours
- Runtime: 60 minutes

Package Content:



- 1 x Main Unit
- 1 x Handle
- 1 x Extension Pole
- 1 x All-Purpose Brush - Great for general cleaning.
- 1 x Heavy Duty Brush - Perfect for large areas and flat surfaces.
- 1 x Corner Brush - Ideal for grout, corners, and tight spaces.
- 1 x Charging Cable

Operating Instructions

- **Turning the Scrubber On/Off:** Press and hold the 'ON' button (located on the top of the black display panel) for 2 seconds to turn the scrubber on. Press and hold the 'ON' button again for 2 seconds to turn it off.
- **Speed Modes:** While the scrubber is on, press the 'ON' button to toggle between high and low speed modes.
 - High Speed: A blue light indicator (labelled "1") will illuminate.
 - Low Speed: A blue light indicator (labelled "2") will illuminate.
- **Error Indication:** If the brush head's rotation is obstructed or the device is used improperly, the three lights on the top of the panel will flash, and the unit will automatically shut off to prevent damage.

Charging Instructions

- Charge the scrubber before its first use.
- Open the charging port (located under the indicator light panel) and insert the charging cable. Connect the cable to a power source.
- The indicator light will be red while charging.
- The indicator light will turn green when fully charged.
- Charging time is 2-3 hours.

Important Safety Precautions

Read all instructions carefully before using the product and keep them for future reference

Always ensure attachments are firmly secured before use.

Change scrubber heads only when the unit is switched off.

Do not charge the device in wet or humid environments.

Ensure the charging port is completely sealed during use.

Dry the device thoroughly after use.

Use only the provided charging cable.

Do not use hot water with this product.

Keep rotating parts away from your body and loose clothing/jewellery while the unit is operating.

This product is designed for indoor use only. Always store it indoors.

Do not operate the device near explosives, flammable fumes or liquids.

Do not store or use the appliance near high temperatures.

This appliance is for household use only; do not use it for commercial or industrial purposes.

Wear appropriate eye protection when using the device with irritating substances. Rubber gloves are also recommended.

Keep hair, loose clothing, and body parts away from moving parts.

Do not use the unit without the protective charging cover in place.

Do not submerge the handle in water or other liquids.

To prevent suffocation, keep plastic bags away from children.

Keep the device out of reach of children. This is not a toy.

This appliance is not intended for use by individuals (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are supervised or instructed on its use by a responsible person.

Children should be supervised to ensure they do not play with the appliance.