

# 2500W Rapid Garden Shredder

P627

## Instructions for Use

v001: 25/02/25

Please read and retain these instructions for future reference.



**Power Details:** Voltage details: 230-240V~  
Frequency details: 50Hz  
Wattage details: 2400W  
Max. branch cutting diameter: 40mm

**Accessories:** [State accessories here](#)



**Note:** The above specifications are the MAXIMUM capacities of the tool. The maximum branch diameter depends on the hardness of the wood.

Please read this instruction manual thoroughly before starting and ensure you are familiar with the operation of your new 2400W RAPID GARDEN SHREDDER.

**RECOMMENDED FOR PERSONS OVER 18 YEARS OF AGE.**

**ALWAYS USE HEAD, EYE AND EAR PROTECTION EQUIPMENT AND SAFETY SHOES AND HAND GLOVES**



Warning! Please read these operating instructions carefully and observe the notes given. Use these operating instructions to familiarise yourself with the pole hedge trimmer, its proper use and the notes on safety.



For safety reasons, children under the age of 18 and people not familiar with these operating instructions must not use this pole hedge trimmer. Persons with reduced physical or mental abilities may use the pole hedge trimmer only if they are supervised or instructed by a responsible person.



If not used properly this product can be dangerous. The warnings and safety instructions must be followed to ensure reasonable safety and efficiency in using this product.

## Operation

- 1) Before starting the machine, investigate the feeding chamber to make certain that it is empty.
- 2) Keep your face and body away from the feed intake opening.
- 3) Do not allow hands or any other part of the body or clothing inside the feeding chamber, discharge chute, or near any moving part.
- 4) Keep proper balance and always footing. Do not overreach. Never stand at a higher level than the base of the machine when feeding material into it.
- 5) Always stand clear of the discharge zone when operating this machine.
- 6) When feeding material into the machine be extremely careful that pieces of metal, rocks, bottles, cans or other foreign objects are not included.
- 7) If the cutting mechanism strikes any foreign objects or if the machine should start making any unusual noise or vibration, shut off the power source and allow the machine to stop. Disconnect from supply and take the following steps:  
Inspect for damage.  
  
Check for and tighten any loose parts.  
  
Have any damaged parts replaced or repaired with parts having equivalent specifications.
- 8) Do not allow processed material to build up in the discharge zone; this may prevent proper discharge and can result in kickback of material through the feed intake opening.
- 9) If the machine becomes clogged, shut off the power source and disconnect from supply before clearing debris. Keep the power source clear of debris and other accumulations to prevent damage to the powered source or possible fire. Remember that operating the starting mechanism on engine powered machines will still cause the cutting means to move.
- 10) Keep all guards and deflectors in place and in good working condition.
- 11) Do not transport this machine while the power source is running.
- 12) Shut off the power source and disconnect from supply whenever you leave the work area.
- 13) Do not tilt the machine while the power source is running.
- 14) To keep extension cords away from the shredding means. The shredding means can cause damage to the cords and lead to contact with live parts.
- 15) If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons to avoid a hazard.
- 16) This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

## SAFETY ADVICE & INSTRUCTIONS

WARNING! When using electric garden tools basic safety precautions should always be followed to reduce the risk of fire, electric shock and personal injury.

### IMPORTANT-Safety, Health and Environment

Safe use of our power tool is only possible after the following safety and operating instructions have been fully read and observed.

Read all these instructions before operating this product and keep these instructions for future reference.

Follow the checklist below, before attempting to use the machine.

1. The sheathing of the flex in the plug or socket is securely gripped under the cord grip.
2. There is no damage to the sheath of the extension lead.
3. The cable is run out safely to avoid damage or accidental tripping.
4. The lead is fully unwound from the reel to avoid overheating.



**WARNING:** Read the instructions carefully before using the shredder and familiarize yourself with the controls and proper use of the equipment.



**WARNING:** Keep hands, feet, hair and clothing away from the moving parts of the shredder.



There is a risk that some objects could be thrown out by the shredder. Keep bystanders away.



Do not reach into the feed opening or the discharge chute. The blades will continue to rotate for approx 5 seconds after it has been switched off.



 
**WARNING:** If the cord becomes damaged during use, do not touch. Immediately disconnecting the plug from the supply or disconnect the shredder from the mains supply also when not in use or during work on the machine itself (e.g., changing parts, repairs, cleaning and adjustment).



**WARNING:** Always wear safety glasses, earmuffs and protective gloves.



**WARNING:** Do not use the shredder in the rain or damp conditions. Protect it from moisture.



Sound power level

## How do I assemble this product?

Turn the machine over onto its head.

Insert the Axle through the pre-drilled holes in the foot (Fig.3).

Select the support A and B which are identified by the letter stamped on the actual support.


Insert the foot into the body (Fig.4).



Put the cotter pin in to the pipe hole



Tighten the reamer knob. The reamer knob has a safety switch please ensure the knob is tightened or the motor will not activate.

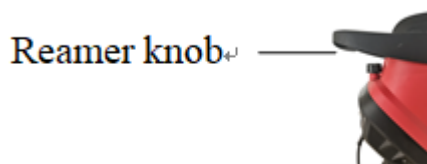

**NOTE:** It is dangerous to use the machine without the hopper.

**NOTE:** Please ensure assemble the bag in the correct position. Hook the handles of the bag to the below hooks either side to secure the bag.



## How do I use this product?

Before using the machine, read the instructions thoroughly and acquaint yourself with the features of the machine.

Before inspecting or servicing any part of the appliance, switch off, pull the plug from the mains and make sure that all moving parts have come to a complete stop.

1. Inspect the material to be shredded before starting. Remove any objects or debris that could be thrown, jammed or become entangled in the blades. Remove any soil from root balls. Foreign bodies like stones, glass, metals, fabrics, or plastics must not enter the in-feed chute, these could damage the blades.
2. Always place the machine on firm level ground. During operation, do not tilt or move.
3. Allow the cutting blades to reach full speed before feeding the material into the in-feed chute.
4. Use the machine to shred the following materials only:  
Twigs and branches (Max. diameter 40mm)

Waste from pruning bushes

Waste from trimming hedges

Plant material and other garden waste

Leaves and plant roots (remove soil from roots before shredding)

5. Do not fill soft waste such as kitchen rubbish into the shredder, but compost them.
6. Feed the material to be shredded into the corner of the in-feed chute, if it is not too bulky, the material will be drawn in by the blades.
7. Only insert as much material so that the in-feed chute will not be blocked up.
8. **Warning:** Long material extending out from the machine could lash out when being drawn in by the blades. Please keep at safe distance.
9. Ensure the shredded material can fall freely from the discharge chute.
10. To make finer compost the shredded material can be shredded for a second time.
11. Do not allow the shredded material to build up to a level where it blocks the discharge chute. If the material builds up too far it could reach the cutting blades and be thrown out of the in-feed chute.
12. Organic material contains a large amount of water and sap that can stick to the shredder. To avoid this the material should be left for a few days to dry out. Large branches however are best shredded when they are fresh.
13. If during cutting the blade stalls, stop the shredder immediately and disconnect it from the mains supply before investigating the cause.
14. Remove any jammed debris from the blades and examine them for any damage before re-commencing shredding.
15. If the blade has stalled for more than 5 seconds the safety overload switch will operate and switch the machine off. Allow the machine to cool down for at least 1 minute before re-starting. Push the overload switch first and then push on the On/Off switch to re-start the machine.
16. If the cutting mechanism strikes any foreign object or if the appliance should start making any unusual noise or vibration, immediately switch off and allow the cutting means to stop. Pull the plug from the mains supply and take the following steps:
  - i) Inspect for damage.
  - ii) Replace or repair any damage parts.
  - iii) Check for and tighten any loose parts.
17. If the appliance becomes clogged, switch off and allow the cutting means to stop. Pull the plug from the mains supply before cleaning debris.
18. Keep the motor cooling vents clean of debris and other accumulations to prevent damage to the motor or possible fire.
19. Switch off, allow the cutting means to stop and pull the plug from the mains supply whenever you leave the work area.
20. Do not allow processed material to build up in the discharge zone; this may prevent proper discharge and can result in kickback of material through the feed intake opening.

# How do I operate this product?

## Starting and stopping the shredder

Press the switch marked “1” to start and marked “0” to stop the motor.

Press the “circuit breaker” button if the machine does not work, ensure you have connected to the power supply.

When the motor has been running for a few seconds, you can commence shredding.

The circuit breaker will be activated in the following circumstances:

- A build-up of shredded material around the cutting disc.
- If the material being shredded is greater than the motor capacity.
- Where there is too much resistance against the cutting blade.

When the circuit breaker has been activated switch-off the shredder and disconnect the power supply.

- Unscrew the reamer knob at the base of the turret and open top section
- Remove the debris or obstruction from the cutting area
- Return the top section and tighten the reamer knob.
- Leave motor a few minutes to cool down
- Reconnect to the power supply and press the circuit breaker button.
- When ready to start shredding press the “1” switch.

**Warning:** NEVER slacken off the tightening knob without having turned off the On/Off switch and pulled the plug out of the socket.

**Warning:** The shredder will stop within 5 seconds after switching off.

## Using the Plunger

There is a plunger provided to aid feeding less bulky material such as small twigs, leaves, other garden waste and vegetation into the in-feed chute.

- Load the material into the hopper.
- Insert the plunger into the in-feed chute pushing the material onto the blade disc.
- Wait until all the material has been shredded before adding more material.



Fig.7



Fig.8

**NOTE:** Your fingers must never enter the in-feed chute.

**NOTE:** Never use the tool if the hopper is not fitted.

**NOTE:** Do not over reach.

## How do I collect the shredded material?

Shut-off the power unit before attaching or removing the bag.

You can use either the collection bag supplied (if supplied) or place the shredder on a tarpaulin sheet to catch the shredded material.

When using the collection bag, you need to fit the collection bag hooks onto the sides of the discharge chute.

**Warning:** The ventilation slots on the machine body must never be covered by the collection bag or shredded material.

## How do I replace the blades?

1. Ensure that the shredder is switched off and disconnected from the mains supply.
2. Remove the top feed assembly by unscrewing the reamer knob securing it to the body of the machine.
3. The blades have two cutting edges. When the blades become worn they can be reversed to use the second cutting edge.
4. It is recommended that work gloves be used when replacing the blades.
5. Lock the blade disc using hex spanner. Unscrew the two inner hexagonal headed screws and note the position of the cutting angle of the blade.
6. Remove the blade and rotate it through 180 degrees and fit the blade to the blade disc ensuring that the ground cutting edge is facing downwards.
7. Repeat this for the other blade.



Fig.9

When both cutting edges of the blade have become worn they must be replaced as a pair. The blades can be re-sharpened, but this must be done by an experienced person using an oil stone. We do not recommend this be done as the weight of each blade is critical to maintain the balance of the cutting disc. Any imbalance could cause damage to the machine and possible injury to the operator.

## How do I maintain this product?

1. **Warning:** During maintenance and cleaning ensure the machine is disconnected from the mains.
2. When the appliance is stopped for servicing, inspection, or storage, or to change an accessory, switch off and pull the plug from the mains supply before making any inspections, adjustments, etc.
3. If an extension cord is used it shall not be of lighter grade than the supply cord already fitted to the appliance.
4. Check the supply and any extension cord regularly for damage or signs of ageing. Do not use the appliance, if the cords are damaged.
5. When servicing the cutting means be aware that, even though the motor will not start due to the interlock feature of the guard, the cutting means can still be moved if the motor is turned by hand.
6. Never attempt to override the interlock feature of the guarding.
7. Remove deposited matter from the machine using a brush.
8. Always clean the machine after use. Clean the plastic body and plastic parts using soap and a moist cloth. Do not use aggressive agents or solvents for cleaning.
9. Never clean the shredder with a jet of water or by rinsing. Make sure that no water is allowed to enter into the shredder.
10. Use only the recommended accessories and attachment for this shredder.

### Explanation of Warnings and Symbols on your product.

	<b>WARNING!</b>
	<b>Read the user instructions carefully to make sure you understand all the controls and what they do.</b>
	<b>Remove plug from the mains immediately if the cable is damaged or cut.</b>
	<b>Do not expose to rain. Do not leave the product outdoors while it is raining.</b>
	<b>The use of eye protection is recommended.</b>
	<b>Head protection must be worn.</b>
	<b>Keep away from electric cables, whether overhead, on the ground or along outdoor buildings.</b>

## **1) Work area safety**

Only use the product in the manner and for the functions described in these instructions. The operator or user is responsible for accidents or hazards occurring to other people or their property.

- a) Keep work area clean and well lit. Cluttered or dark areas invite accidents. Remove all stones, leaves, twigs, branches, debris from the work area before using this tool.
- b) Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust. Power tools create sparks which may ignite the dust or fumes.
- c) Keep children and bystanders away while operating a power tool. Distractions can cause you to lose control.

## **2) Electrical safety**

- a) Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adaptor plugs with earthed (grounded) power tools. Unmodified plugs and matching outlets will reduce risk of electric shock.
- b) Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators. There is an increased risk of electric shock if your body is earthed or grounded.
- c) Do not use / expose power tools in bad weather or wet conditions. especially when there is a risk of lightning. This decreases the risk of being struck by lightning.
- d) To reduce the risk of electrocution, never use the extended-reach hedge trimmer near any electrical power lines. Contact with or use near power lines may cause serious injury or electric shock resulting in death.
- e) Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep the cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increase the risk of electric shock.
- f) When operating a power tool outdoors, use an extension cord suitable for outdoor use. Use of a cord suitable for outdoor use reduces the risk of electric shock.
- g) If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply. Use of an RCD reduces the risk of electric shock.
- h) Before use, examine cable for damage, replace it if there are signs of damage or ageing.
- i) Do not use the product if the electric cables are damaged or worn.
- j) Immediately disconnect from the mains electricity supply if the cable is cut, or the insulation is damaged. Do not touch the electric cable until the electrical supply has been disconnected.
- k) Your electric cable must be untangled; tangled cables can overheat and reduce the efficiency of your product.

l) Always switch off at the mains before disconnecting any plug, cable connector or extension cable.

m) Switch off, remove plug from mains and examine electric supply cable for damage or ageing before winding cable for storage. Do not repair a damaged cable, replace it with a new one. Always wind cable carefully, avoiding kinking.

n) Use only on AC mains supply voltage shown on the product rating label.

### **3) Personal safety**

a) Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating power tools may result in serious personal injury.

b) Use personal protective equipment. Always wear eye protection. Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.

c) Prevent unintentional starting. Ensure the switch is in the off position before connecting to power source and /or battery pack, picking up or carrying the tool. Carrying power tools with your finger on the switch or power tools that have the switch on invites accidents.

d) Remove any adjusting key or wrench before turning the power tool on. A wrench or a key left attached to a rotating part of the power tools may result in personal injury.

e) Always wear suitable clothing, gloves, and stout shoes. Do not wear loose clothing or jewellery. Keep your hair, clothing and gloves away from moving parts. Loose clothes, jewellery or long hair can be caught in moving parts

f) Thoroughly inspect the area where the product is to be used and remove all wires and other foreign objects.

g) All adjustments (turning the blade unit, inclining the blade head) have to be made with the sheath/protect cover in place, and the Hedge Trimmer must not rest on the blade in the process.

h) Before using the machine and after any impact, check for signs of wear or damage and repair as necessary.

i) Never attempt to use an incomplete product or one with an unauthorised modification.

j) Do not overreach. Keep proper footing and balance at all times. This enables better control of the power tool in unexpected situations.

k) If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used. Use of dust collection can reduce dust-related hazards.

l) Do not use on or near ladders.

m) If the garden product hits an object, then stop immediately, switch off and disconnect from the mains supply. Check the product for any damage and repair before continuing use.

#### **4) Power tool use and care**

a) Do not force the power tool. Use the correct power tool for your application. The correct power tool will do the job better and safer at the rate for which it was designed.

b) Do not use the power tool if the switch does not turn it on and off. Any power tool that cannot be controlled with the switch is dangerous and must be repaired.

c) Disconnect the plug from the power source and /or the battery pack from the power tool before making any adjustments, changing accessories, or storing power tools. Such preventive safety measures reduce the risk of starting the power tool accidentally.

d) Store idle power tools out of the reach of children and do not allow anyone unfamiliar with the power tool or these instructions to operate the power tool. Power tools are dangerous in the hands of untrained users.

e) Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools.

f) Keep cutting tools sharp and clean. Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.

g) Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed. Use of the power tool for operations different from those intended could result in a hazardous situation.

#### **5. Service**

Have your power tool serviced by a qualified repair person using only identical replacement parts. This will ensure that the safety of the power tool is maintained.

- Keep all parts of the body away from any blades / cutter blades. Do not remove cut material or hold material to be cut when blades are moving. Make sure the switch is off when clearing jammed material. A moment of inattention while operating the hedge trimmer may result in serious personal injury.
- Carry the pole hedge trimmer by the handle with the cutter blade stopped. When transporting or storing the pole hedge trimmer always fit the cutting device cover. Proper handling of the pole hedge trimmer will reduce possible personal injury from the cutter blades.
- Hold the power tool by insulated gripping surfaces only, because the cutter blade may contact hidden wiring or its own cord. Cutter blades contacting a "live" wire may make exposed metal parts of the power tool "live" and could give the operator an electric shock.

- Keep cable away from the cutting area. During operation the cable may be hidden in shrubs and can be accidentally cut by the blade.

## **Additional Safety Recommendations**

### **Cables**

Use only permitted extension cables in accordance with EN 50565 Parts 1 & 2. Ask your electrical specialist.

### **Personal safety**

- i) Always wear suitable clothing, gloves, and stout shoes.
- ii) Thoroughly inspect the area where the product is to be used and remove all wires and other foreign objects.
- iii) All adjustments (turning the blade unit, inclining the blade head) must be made with the sheath/protect cover in place, and the Hedge Trimmer must not rest on the blade in the process.
- iv) Before using the machine and after any impact, check for signs of wear or damage and repair as necessary.
- v) Before using the pole hedge trimmer, always make sure that the hand guard provided is fitted.
- vi) Never attempt to use an incomplete product or one with an unauthorised modification.

### **Power tool use and care**

- Know how to stop the product quickly in an emergency.
- Never hold the product by the guard/protect cover.
- Do not use the Hedge Trimmer if the protection equipment (hand protection, 2-hand safety switch, protection cover, quick blade-stop) is damaged.
- Do not use ladders whilst operating the product.

### **Remove the plug from the mains:**

- Before leaving the product unattended for any period;
- Before clearing a blockage;
- Before checking, cleaning or working on the appliance.
- If you hit an object. Do not use your product until you are sure that the entire product is in a safe operating condition;
- If the product starts to vibrate abnormally. Check immediately. Excessive vibration can cause injury.
- Before passing to another person.

## Maintenance and storage



### **RISK OF INJURY !**

**Do not touch blades.**

**When finishing or interrupting work, push up protection cover.**

Keep all nuts, bolts and screws secure to be sure the pole hedge trimmer is in safe working condition.

Always store blades in the protective sleeve provided.

### **1) Work area safety**

- a) Keep work area clean and well lit. Cluttered or dark areas invite accidents.
  
- b) Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust. Power tools create sparks which may ignite the dust or fumes.
  
- c) Keep children and bystanders away while operating a power tool. Distractions can cause you to lose control.

### **2) Electrical safety**

- a) Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adaptor plugs with earthed (grounded) power tools. Unmodified plugs and matching outlets will reduce risk of electric shock.
  
- b) Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators. There is an increased risk of electric shock if your body is earthed or grounded.
  
- c) Do not expose power tools to rain or wet conditions. Water entering a power tool will increase the risk electric shock.
  
- d) Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep the cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increase the risk of electric shock.
  
- e) When operating a power tool outdoors, use an extension cord suitable for outdoor use. Use of a cord suitable for outdoor use reduces the risk of electric shock.
  
- f) If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply. Use of an RCD reduces the risk of electric shock.

### **3) Personal safety**

- a) Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating power tools may result in serious personal injury.
- b) Use personal protective equipment. Always wear eye protection. Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.
- c) Prevent unintentional starting. Ensure the switch is in the off position before connecting to power source and /or battery pack, picking up or carrying the tool. Carrying power tools with your finger on the switch or power tools that have the switch on invites accidents.
- d) Remove any adjusting key or wrench before turning the power tool on. A wrench or a key left attached to a rotating part of the power tools may result in personal injury.
- e) Do not overreach. Always keep proper footing and balance. This enables better control of the power tool in unexpected situations.
- f) Dress properly. Do not wear loose clothing or jewellery. Keep your hair, clothing and gloves away from moving parts. Loose clothes, jewellery or long hair can be caught in moving parts.
- g) If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used. Use of dust collection can reduce dust-related hazards.

### **4) Power tool use and care**

- a) Do not force the power tool. Use the correct power tool for your application. The correct power tool will do the job better and safer at the rate for which it was designed.
- b) Do not use the power tool if the switch does not turn it on and off. Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
- c) Disconnect the plug from the power source and /or the battery pack from the power tool before making any adjustments, changing accessories, or storing power tools. Such preventive safety measures reduce the risk of starting the power tool accidentally.
- d) Store idle power tools out of the reach of children and do not allow anyone unfamiliar with the power tool or these instructions to operate the power tool. Power tools are dangerous in the hands of untrained users.
- e) Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools.
- f) Keep cutting tools sharp and clean. Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.

g) Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed. Use of the power tool for operations different from those intended could result in a hazardous situation.

## 5. Service

Have your power tool serviced by a qualified repair person using only identical replacement parts. This will ensure that the safety of the power tool is maintained.

### **Additional Safety Recommendations**

#### **Work area safety**

Only use the product in the manner and for the functions described in these instructions. The operator or user is responsible for accidents or hazards occurring to other people or their property.

#### **Electrical safety**

The British Standards Institute recommend the use of a Residual Current Device (R.C.D.) with a tripping current of not more than 30mA. Check your R.C.D. every time you use it.

Before use, examine cable for damage, replace it if there are signs of damage or ageing.

Do not use the product if the electric cables are damaged or worn.

Immediately disconnect from the mains electricity supply if the cable is cut, or the insulation is damaged. Do not touch the electric cable until the electrical supply has been disconnected.

Your electric cable must be untangled, tangled cables can overheat and reduce the efficiency of your product.

Always switch off at the mains before disconnecting any plug, cable connector or extension cable.

Switch off, remove plug from mains and examine electric supply cable for damage or ageing before winding cable for storage. Do not repair a damaged cable, replace it with a new one.

Always wind cable carefully, avoiding kinking.

Use only on AC mains supply voltage shown on the product rating label.

## **Maintenance and storage**



**RISK OF INJURY !**

**Do not touch blades.**

**When finishing or interrupting work, push up protection cover.**

Keep all nuts, bolts and screws secure to be sure the pole hedge trimmer is in safe working condition.

## **WARNINGS AND SAFETY INSTRUCTIONS:**

WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED:

- READ ALL INSTRUCTIONS BEFORE USE.
- FOR DOMESTIC OUTDOOR USE ONLY.
- BEFORE USE, CHECK THOROUGHLY FOR ANY DEFECTS AND DO NOT USE IF DEFECTS ARE FOUND. TAKE CARE NOT TO DROP THE APPLIANCE AS HEAVY IMPACTS MAY CAUSE INTERNAL DAMAGE.
- BEFORE CONNECTING THE APPLIANCE, CHECK IF THE VOLTAGE INDICATED ON THE BOTTOM OF THE APPLIANCE IS IN ACCORDANCE WITH THE MAINS VOLTAGE IN YOUR HOME.
- CHECK THE APPLIANCE AND POWER CABLE CAREFULLY FOR DAMAGE BEFORE EACH USE.
- THIS GARDEN EQUIPMENT IS RECOMMENDED FOR USE BY PERSONS OVER 18 YEARS OF AGE.
- KEEP AWAY FROM CHILDREN
- **SOME PARTS OF THIS PRODUCT CAN BECOME VERY HOT AND CAUSE BURNS. PARTICULAR ATTENTION HAS TO BE GIVEN WHERE CHILDREN AND VULNERABLE PEOPLE ARE PRESENT.**
- THE USE OF ANY ACCESSORY OR ATTACHMENTS NOT SUPPLIED BY COOPERS OF STORTFORD MAY CAUSE INJURIES AND INVALIDATE ANY WARRANTY YOU MAY HAVE.
- DO NOT LET THE POWER CABLE HANG OVER THE EDGE OF A TABLE OR COUNTER, OR TOUCH HOT SURFACES.
- DO NOT PLACE OR STORE NEAR HEAT SOURCES.
- DO NOT COVER THE ITEM IN ANY WAY WHEN IN USE AS THIS MAY CAUSE OVERHEATING.
- DO NOT USE THIS APPLIANCE FOR ANY OTHER USE THAN THE INTENDED USE IT IS DESIGNED FOR.
- ENSURE THERE IS SUFFICIENT DISTANCE BETWEEN THIS APPLIANCE AND OTHER ITEMS ON THE WORK SURFACE OR WORKSTATION, OR SUFFICIENT DISTANCE BETWEEN THE APPLIANCE AND THE CONFINES OF THE AREA IN WHICH IT IS SITUATED. WE RECOMMEND A MINIMUM CLEARANCE AROUND ALL FACES OF AT LEAST 10CM.
- ALLOW THE ITEM TO COOL THOROUGHLY BEFORE PUTTING ON OR TAKING OFF ACCESSORIES.
- TO PROTECT AGAINST ELECTRIC SHOCK, DO NOT IMMERSE POWER CABLE, PLUG OR APPLIANCE, IN WATER OR ANY OTHER LIQUID.
- UNPLUG FROM OUTLET WHEN NOT IN USE AND BEFORE CLEANING.
- DO NOT OPERATE ANY APPLIANCE WITH A DAMAGED POWER CABLE OR PLUG OR AFTER THE APPLIANCE MALFUNCTIONS OR HAS BEEN DAMAGED IN ANY MANNER.
- WE RECOMMEND THAT THE POWER CABLE IS NOT KINKED OR STORED IN A TWISTED MANNER, AND THAT YOU REGULARLY CHECK ITS CONDITION.
- ANY REPAIRS MUST BE CONDUCTED BY A QUALIFIED ELECTRICIAN OR ELECTRICAL SERVICE AGENT.

## **PLUG WIRING (UK & IRELAND)**

This appliance is fitted with a fused BS 1363 plug.

If you must replace the fuse, only use the same fuse amperage as that fitted in the plug. Either ASTA, BSI or NEMKO fuses approved to BS1362 should be used.

If there is a fuse cover fitted, this cover must be re-fitted after changing the fuse. If the fuse cover is lost or damaged the plug must not be used. Spare fuse holders and fuses are available from electrical outlets. If the socket outlets in your home or office are not suitable for this product's plug, the plug must be removed and disposed of safely. Attempts to insert the plug into the wrong socket is likely to cause electric hazard. If the rewirable plug is damaged, then a replacement plug should be wired according to the following instructions:

## The cable

A mains electricity cable contains two or three inner wires. Each has a core of copper and an outer layer of flexible plastic. This product is double insulated; the wires in the plug are colour coded in the following way:

BLUE	NEUTRAL
BROWN	LIVE
GREEN & YELLOW	EARTH

**Note: Double insulated appliances do not need the green & yellow Earth wire. They may only have the Brown and Blue wires.**

Connect the BROWN wire to the terminal marked 'L' or coloured RED.

Connect the BLUE wire to the terminal marked 'N' or coloured BLACK. Note: 'L' or 'N' must not be connected

to the EARTH terminal marked 'E' or ' ' or coloured GREEN or GREEN AND YELLOW.

Connect the green / yellow wire to the terminal marked E. if this is 3 wired cables.

If in doubt, consult an electrician

## PLUG WIRING (UK & IRELAND)

This appliance is supplied with a mains adaptor/charger with BS1363 plug pins.

**DO NOT** use if the socket outlets in your home or office are not suitable for this product's mains adaptor/charger plug pins. Attempts to insert the mains adaptor/charger into the wrong socket is likely to cause electric hazard or damage.


**DO NOT** use with any other mains transformer/charger than the one that is supplied with this product.

## CARE AND CLEANING INSTRUCTIONS

- Always switch off and unplug before cleaning.
- Do NOT immerse in water. Risk of electric shock.
- Do NOT use abrasive cleaners or sharp utensils to clean this appliance.
- Wipe surfaces with a soft dry cloth.
- Allow to dry thoroughly before further use.
- Store the appliance in a cool, dry place.



## DISPOSAL

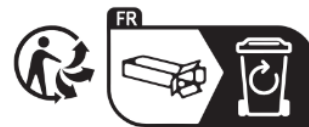- Coopers of Stortford use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons in accordance with your local authority recycling regulations.
- At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.
- Plastics, polybags – this is made from the following recyclable plastic.



Points de collecte sur [www.quefairedemesdechets.fr](http://www.quefairedemesdechets.fr)  
Privilégiez la réparation ou le don de votre appareil !

- Plastics, plastic packaging – this is made from the following recyclable plastic.

Code & Symbol	 <b>LDPE</b>	 <b>OTHER</b>
Type of Plastic	Low Density Polyethylene	Please Specify (includes ABS, Nylon)
Commonly used for	Shopping bags, bread bags, squeeze bottles, stretch/pallet wrap, bubble wrap, multi-pack can holders	CD's, crisp packets, various flexible packaging, baby bottles, sunglass lenses
Notes	Usually recyclable supermarket deposit points. Check other plastic films as any non-polythene film e.g. cling film, crisp packets film lids	Not often or widely recycled

- At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.

#### **CUSTOMER SERVICES:**

- Customers in GB (England, Scotland and Wales), please contact our customer services - UK Head Office, 11 Bridge Street, Bishop's Stortford, CM23 2JU, Tel: 0330 331 0300
- Customers in Northern Ireland and Europe, please contact our customer services - D.S.B. LD, 160 Bd. de Fourmies, 59100 Roubaix, France, Tel: (+44) 1279 701269

## UK & EU DECLARATION OF CONFORMITY

We, Coopers of Stortford hereby declare under our sole responsibility, that the product named below has been designed to comply with all relevant sections of the below referenced standards and directives: -

Description & item Number: 2400W RAPID GARDEN SHREDDER  
Model No: P627 (HY6607K)

Conforms to the following UK Regulations and EU Directives: -

- Supply of Machinery (Safety) Regulations 2008 and Machinery Directive 2006/42/EC.
- The Noise Emission in the Environment by Equipment for use Outdoors Regulations 2001 & amendments and Noise Directive 2000/14/EC & 2005/88/EC.
- The Electrical Equipment (Safety) Regulations 2016 & Low Voltage Directive 2014/35/EU.
- Electromagnetic Compatibility Regulations 2016 & EMC Directive 2014/30/EU.
- Restriction of Hazardous Substances (RoHS) Regulations & RoHS Directive 2011/65/EU & 2015/863/EU.

The conformity assessment procedure followed was in accordance with the following Standards:-

Machinery Directive & LVD Directive Standards:  
IEC 60335-1:2010/COR1:2010/COR2:2011  
/AMD1:2013/COR1:2014/AMD2:2016/COR1:2016  
AfPS GS 2019:01 PAK

EMC Standards:  
EN 60335-1:2012/A15:2021  
EN 50434:2014

RoHS Standards: 2011/65/EU and (EU) 2015/863)

Measured Sound Pressure Level: LPA = 87.2 dB(A)  
Measured Sound Power Level: LWA = 106 dB(A)

The Test reports for this item are available from:  
Coopers of Stortford, 11 Bridge Street, Bishop's Stortford, Hertfordshire, CM23 2JU

**Distributed by / Verteilt durch / Distribué par.**

The Enterprise Department Ltd, Trading as Coopers of Stortford.

**UK address:** 11 Bridge Street, Bishops Stortford

Herts, UK, CM23 2JU

Tel: 0330 331 0300

Customer Services: [enquiries@coopersofstortford.co.uk](mailto:enquiries@coopersofstortford.co.uk)

Web Site: <https://www.coopersofstortford.co.uk>



The Enterprise Department Ltd, Trading as -

**NI address:** D.S.B. LD, 160 Bd. De Fourmies, 59100 Roubaix, France

Tel: +44 (0) 330 331 0300

Customer Services: [enquiries@coopersofstortford.co.uk](mailto:enquiries@coopersofstortford.co.uk)

Web Site: <https://www.coopersofstortford.co.uk>

DE/FR/CZ/SK :

**3Pagen**

Hergestellt für 3Pagen

Sankt-Joeris-Strasse 16-28

53477 Alsdorf

Tel: +49 (0) 2404/980-204

Customer Services: [kontakt@3pagen.de](mailto:kontakt@3pagen.de)

Web Site: [www.3pagen.de](http://www.3pagen.de)